Model: 299C COMPACT TRACK LOADER JSP

Configuration: 299C Compact Track Loader JSP00001-UP (MACHINE) POWERED BY 3044C Engine

### **Disassembly and Assembly**

#### 279C, 279C2, 289C, 289C2 and 299C Compact Track Loaders Power Train

Media Number -KENR8831-06

Publication Date -01/01/2016

Date Updated -06/01/2016

i06659865

# Piston Pump (Hydrostatic) - Disassemble

**SMCS -** 5070-015-H7

## **Disassembly Procedure**

Table 1

Required Tools				
Tool	Part Number	Part Description	Qty	
A	1P-0510	Driver Gp	1	
В	9S-9152	Puller Attachment As.	1	
	0S-1527	Bolt	1	
C	2J-3506	Full Nut	1	
	8T-4122	Hard Washer	2	
D	1P-1859	Retaining Ring Pliers	1	

### **Start By:**

a.	Remove the pump. Refer to Disassembly and Assembly, "Piston Pump (Hydrostation	c) ·
	Remove".	

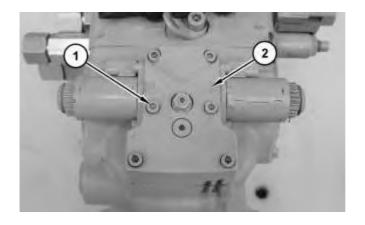


Illustration 1 g01325524

1. Remove bolts (1) and valve (2).

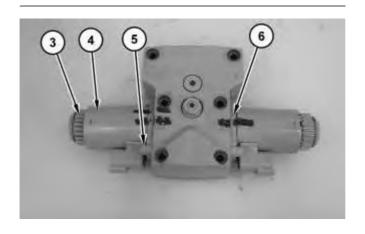


Illustration 2 g01325526

2. Remove nut (3), the O-ring seal, coil (4), bolts (5), and cartridge (6).

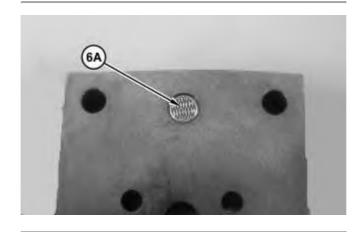


Illustration 3 g01377500

3. Remove screen (6A).

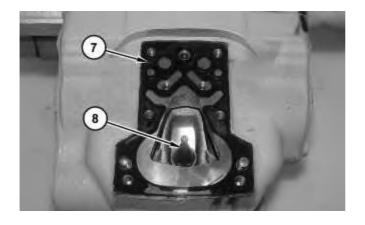


Illustration 4 g01325527

4. Remove gasket (7) and control arm (8).

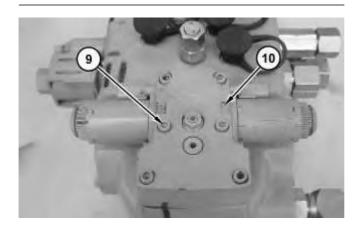


Illustration 5 g01325534

- 5. Remove bolts (9) and valve (10).
- 6. Repeat Steps 2 through Steps 4 for valve (10).

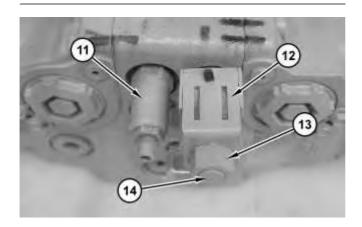


Illustration 6 g01325536

- 7. Remove nut (13), coil (12), and cartridge (14).
- 8. Remove valve (11).

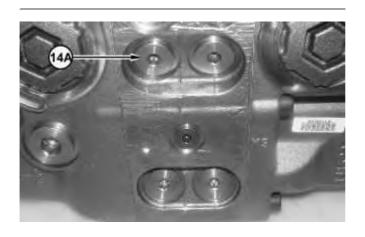


Illustration 7 g01377504

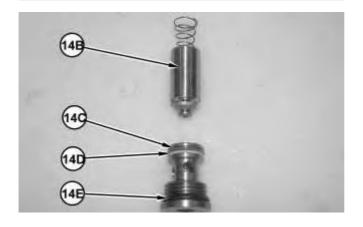


Illustration 8 g01377507

9. Remove plugs (14A), O-ring seal (14E), O-ring seal (14C), backup ring (14D) and crossover relief valves (14B), from the head.

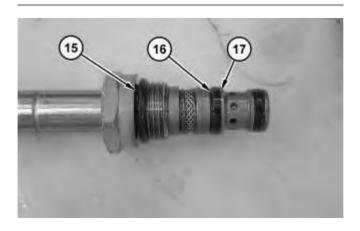


Illustration 9 g01325538

10. Remove O-ring seal (15), backup rings (16), and O-ring seals (17).

Thank you so much for reading.

Please click the "Buy Now!"

button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com