



# FORD

## Service Manual

---

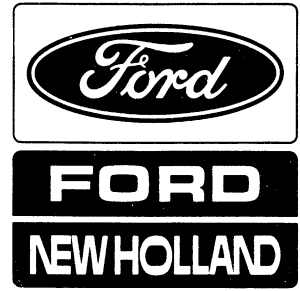

Tractors  
1000, 1600

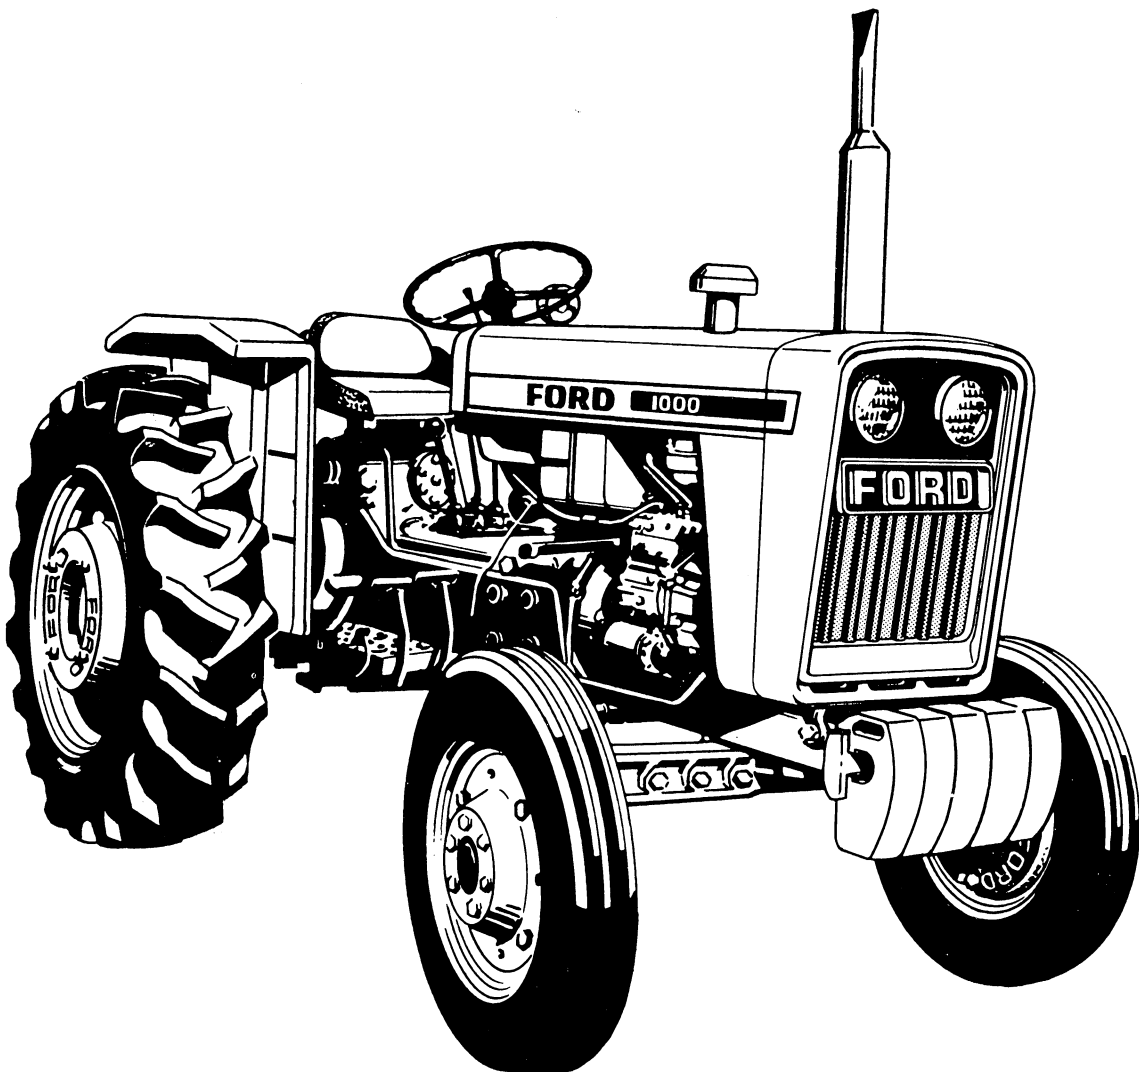

40100020

Reprinted

# TABLE OF CONTENTS

| <b>Part</b>  | <b>Page</b> |
|--|-------------|
| <b>PART 1 – ENGINE</b>   |             |
| Chapter 1 – Engine and Lubrication System .....                          | 1           |
| Chapter 2 – Cooling System .....   | 20          |
| Chapter 3 – Trouble Shooting and Specifications .....                    | 25          |
| <b>PART 2 – FUEL SYSTEM</b>  |             |
| Chapter 1 – Diesel Fuel System .....                                     | 31          |
| Chapter 2 – Trouble Shooting and Specifications .....                    | 36          |
| <b>PART 3 – ELECTRICAL SYSTEM</b>  |             |
| Chapter 1 – Wiring, Lights, and Instruments .....                        | 38          |
| Chapter 2 – Alternator Charging System .....                             | 41          |
| Chapter 3 – Battery .....  | 49          |
| Chapter 4 – Starting System .....  | 54          |
| Chapter 5 – Trouble Shooting and Specifications .....                    | 60          |
| <b>PART 4 – CLUTCH</b>   |             |
| Chapter 1 – Clutch Assembly .....  | 64          |
| Chapter 2 – Trouble Shooting, Specifications, and Special Tools .....    | 68          |
| <b>PART 5 – TRANSMISSION, DIFFERENTIAL, REAR AXLE, AND RELATED PARTS</b> |             |
| Chapter 1 – Servicing the Transmission and Differential .....            | 70          |
| Chapter 2 – Rear Axle, Brakes, Differential Lock, and PTO Shaft .....    | 79          |
| Chapter 3 – Trouble Shooting and Specifications .....                    | 86          |
| <b>PART 6 – HYDRAULICS</b>   |             |
| Chapter 1 – Hydraulic System .....                                       | 89          |
| Chapter 2 – Trouble Shooting, Specifications, and Special Tools .....    | 97          |
| <b>PART 7 – STEERING AND FRONT AXLE</b>                                  |             |
| Chapter 1 – Steering Gear Assembly .....                                 | 99          |
| Chapter 2 – Front Axle and Related Parts .....                           | 102         |
| Chapter 3 – Trouble Shooting and Specifications .....                    | 106         |
| <b>PART 8 – WHEELS AND TIRES</b>   |             |
| Chapter 1 – Rear Wheel Track Adjustment and Weighting Procedures .....   | 108         |

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)