


John Deere 710C Backhoe Loader Repair

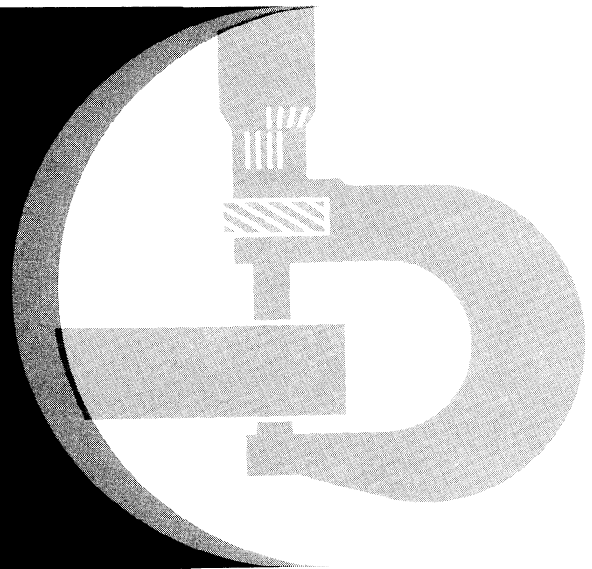

TECHNICAL MANUAL

TM-1451 (Dec-88)

LITHO IN U.S.A.

710C BACKHOE LOADER TECHNICAL MANUAL TM-1451 (DEC-88)

SECTION AND GROUP CONTENTS

NOTE: This manual covers machine repair. For Operation and Test information, see TM-1450.

SECTION I—GENERAL INFORMATION

- Group I—Safety
- Group II—General Specifications
- Group III—Torque Values
- Group IV—Lubrication
- Group V—Inspection Procedures

SECTION 01—WHEELS

- Group 0110—Powered Wheels and Fastenings
- Group 0120—Non-Powered Wheels and Fastenings

SECTION 02—AXLES AND SUSPENSION SYSTEMS

- Group 0200—Remove and Installation
- Group 0225—Input Drive Shafts and U-joints
- Group 0230—Non-Powered Wheel Axles
- Group 0240—Powered Wheel Axles
- Group 0260—Hydraulic System

SECTION 03—TRANSMISSION

- Group 0300—Removal and Installation
- Group 0315—Controls
- Group 0325—Input Drive Shafts and U-Joints
- Group 0350—Gears, Shafts, Housings, Bearings, Differential Lock, Brake and Park Brake
- Group 0360—Hydraulic System Control Valve, Suction Screen, Oil Pump, and Lubrication System

SECTION 04—ENGINE

- Group 0400—Removal and Installation
- Group 0413—Fuel Injection System
- Group 0414—Intake Manifold
- Group 0416—Turbocharger
- Group 0417—Water Pump
- Group 0418—Thermostats, Housing and Water Piping
- Group 0419—Oil Cooler
- Group 0420—Fuel Filter
- Group 0421—Fuel Transfer Pump
- Group 0422—Starting Motor and Fastenings

SECTION 05—ENGINE AUXILIARY SYSTEMS

- Group 0505—Cold Weather Starting Aids
- Group 0510—Cooling Systems
- Group 0515—Speed Controls
- Group 0520—Intake System
- Group 0560—External Fuel Supply Systems

SECTION 09—STEERING SYSTEM

- Group 0960—Hydraulic System Steering Valve and Cylinder

SECTION 10—SERVICE BRAKES

- Group 1011—Active Elements Brake Disks and Control Linkage
- Group 1060—Hydraulic System Brake Valve

Continued on next page

SECTION 11—PARK BRAKES

- Group 1111—Active Elements
- Group 1115—Controls Linkage

SECTION 16—ELECTRICAL SYSTEMS

- Group 1671—Batteries, Support and Cables
- Group 1672—Alternator, Regulator and Charging System Wiring
- Group 1673—Lighting System
- Group 1674—Wiring Harness and Switches
- Group 1675—System Controls
- Group 1676—Instruments, Indicators and Senders

SECTION 17—FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740—Frame Installation
- Group 1749—Chassis Weights

SECTION 18—OPERATOR'S STATION

- Group 1800—Removal and Installation
- Group 1810—Operator Enclosure Wiper Motor and Windshield Washer
- Group 1821—Seat and Seat Belt
- Group 1830—Heating and Air Conditioning

SECTION 20—SAFETY, CONVENIENCE AND MISCELLANEOUS

- Group 2004—Horn and Warning Devices

SECTION 21—MAIN HYDRAULIC SYSTEM

- Group 2160—Hydraulic System
Main Hydraulic Pump, Pump Drive,
Main Hydraulic Filter, Oil Cooler, Oil
Cooler Bypass Valve, and System
Relief Valve

SECTION 31—LOADER

- Group 3100—Removal and Installation
- Group 3102—Buckets
- Group 3115—Controls Linkage
- Group 3140—Frames
- Group 3160—Hydraulic System
Control Valve and Cylinders

SECTION 33—BACKHOE

- Group 3302—Buckets
- Group 3315—Controls Linkage
- Group 3340—Frames
- Group 3360—Hydraulic System
Control Valve and Cylinders

SECTION 99—DEALER FABRICATED TOOLS

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com