
70D Excavator Repair

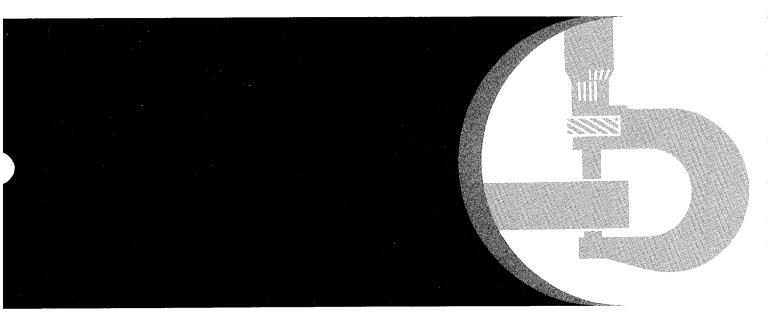



TECHNICAL MANUAL

TM1408 (14NOV89)



Contents

SECTION I-GENERAL INFORMATION

Group I—Safety Group II—General Specifications Group III—Torque Values Group IV—Fuels and Lubricants Group V—Inspection Procedures

SECTION 01—TRACKS

Group 0130-Track System

SECTION 02-AXLES AND SUSPENSION SYSTEM

Group 0250—Axle Shaft, Bearings, and Reduction Gears Group 0260—Hydraulic System

SECTION 04-ENGINE

Group 0400-Removal and Installation

SECTION 05—ENGINE AUXILIARY SYSTEMS

Group 0505—Cold Weather Starting Aids Group 0510—Cooling System Group 0515—Speed Controls Group 0520—Intake System Group 0530—External Exhaust Systems Group 0560—External Fuel Supply Systems

SECTION 07-DAMPENER DRIVE (FLEX

COUPLING) Group 0752—Elements

aroup or oz-Elementa

SECTION 16—ELECTRICAL SYSTEM

Group 1671—Batteries, Support, and Cables Group 1672—Alternator, Regulator, and Charging System Wiring Group 1674—Wiring Harness and Switches Group 1677—Motors and Actuators

SECTION 17—FRAME or SUPPORTING STRUCTURE

Group 1740—Frame Installation Group 1749—Chassis Weights

SECTION 18-OPERATOR'S STATION

Group 1800—Removal and Installation Group 1810—Operator Enclosure Group 1821—Seat Group 1830—Heating and Air Conditioning

SECTION 32-BULLDOZERS

Group 3200—Removal and Installation Group 3215—Controls Linkage Group 3260—Hydraulic System

SECTION 33-EXCAVATOR

Group 3302—Buckets, Teeth, Shanks, and Sidecutters Group 3340—Frames Group 3360—Hydraulic System

SECTION 43-SWING OR PIVOTING SYSTEM

Group 4311—Brakes Group 4350—Mechanical Drive Elements Group 4360—Hydraulic System

SECTION 99-DEALER FABRICATED TOOLS

Group 9900-Dealer Fabricated Tools

All information illustrations and ansaifications in this manual are based on the

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email:

ebooklibonline@outlook.com