

Workshop
Manual

Workshop
Manual

Print No. 87709281A
English - Printed in Italy


MANUAL INDEX



SAFETY PRECAUTIONS

Page


Section 1	GENERALITIES	S1
Section 2	SAFETY PRECAUTIONS	S2
Section 3	SAFETY PLATES	S3

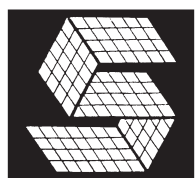

OPERATIONAL PRINCIPLE


Section 1 GENERAL

Group 1	Specifications	T1-1
---------	----------------------	------

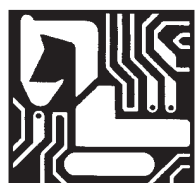

Section 2 SYSTEM

Group 1	Mechatronics control system	T2-1
Group 2	Hydraulic System	T2-2
Group 3	Electrical System	T2-3

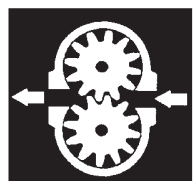

Section 3 COMPONENT OPERATION

Group 1	Hydraulic Pump Assy	T3-1
Group 2	Pilot Valve	T3-2
Group 3	Control Valve	T3-3
Group 4	Swing Device	T3-4
Group 5	Travel Device	T3-5
Group 6	Swivel Joint	T3-6
Group 7	Cylinders	T3-7
Group 8	Air Conditioner system	T3-8



OPERATIONAL PERFORMANCE TEST

Section 4 OPERATIONAL PERFORMANCE TEST

Group 1	Introduction	T4-1
Group 2	Standard Performances	T4-2
Group 3	Test Procedures	T4-3
Group 4	Mechatronics Controller	T4-4



TROUBLESHOOTING

Section 5 TROUBLESHOOTING

Group 1	Troubleshooting (by error codes)	T5-1
Group 2	Troubleshooting (by trouble)	T5-2
Group 3	Troubleshooting (trouble diagnosis mode)	T5-3

REPAIR INSTRUCTIONS



Section 1 GENERAL INFORMATION

Group 1	Precautions for Disassembly and Assembly	W1-1
Group 2	Tightening Torque	W1-2



Section 2 UPPERSTRUCTURE

Group 1	Upperstructure	W2-1
Group 2	Pump Device.....	W2-2
Group 3	Control Valve	W2-3
Group 4	Swing Device	W2-4
Group 5	Pilot Valve	W2-5




Section 3 UNDERCARRIAGE

Group 1	Swing Bearing	W3-1
Group 2	Travel Device	W3-2
Group 3	Swivel Joint	W3-3
Group 4	Track Adjuster	W3-4
Group 5	Front Idler	W3-5
Group 6	Upper and Lower Roller	W3-6
Group 7	Tracks	W3-7



Section 4 FRONT ATTACHMENT

Group 1	Front attachment.....	W4-1
----------------	-----------------------	------

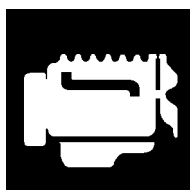

Section 5 ENGINE

Group 1	General	W5-1
Group 2	Standard Value	W5-2
Group 3	Parts to be prepared	W5-3
Group 4	Engine assembly/disassembly	W5-4
Group 5	Fuel System	W5-5
Group 6	Emission Control	W5-6
Group 7	Electrical	W5-7
Group 8	Intake	W5-8
Group 9	Engine Mechanical	W5-9
Group 10	Exhaust	W5-10
Group 11	Cooling	W5-11
Group 12	Lubrication	W5-12
Group 13	Starting and Charging	W5-13
Group 14	Turbocharger	W5-14
Group 15	Failure Diagnosis for each Engine Status	W5-15
Group 16	Engine Diagnosis Code	W5-16

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com