

EXCAVATOR

MH2.6 MH3.6

SERVICE MANUAL



F24062

IMPORTANT:

Data contained in this manual was current at the time of publication. As the Manufacturer improves constantly his products, some information may result as not updated. If variances are observed, contact your Dealer and After-Sales Service.

NEW HOLLAND KOBELCO CONSTRUCTION MACHINERY S.p.A. - ENGINEERING**PRINT 604.13.477****January 2005 issue - Printed in Italy**

SECTIONS INDEX

PAGES

**SECTION 1 - MAIN OPERATING RULES**

Sections index	1-1
Introduction	1-3
Features of the manual	1-5

**SECTION 2 - SAFETY PRECAUTIONS**

Safety precautions	2-1
Safety labels	2-35

**SECTION 3 - FEATURES AND DATA**

Foreword	3-1
Identification data	3-2
Noise levels (2000/14/EC)	3-3
Summary plate for maintenance operations	3-5
Wheeled excavator main components	3-6
Filling chart MH2.6	3-24
Filling chart MH3.6	3-25

**SECTION 4 - SUPERSTRUCTURE**

Superstructure	4-1
Main frame and counterweight	4-5
Power unit	4-9
Diesel engine	4-10
Radiator	4-12
Hydraulic pumps	4-14
Air cleaner	4-60
Exhaust gas silencer	4-61
Hydraulic oil tank	4-63
Fuel tank	4-65
Fuel transfer pump	4-66
Hoods and covers	4-69
Cab	4-75
Swinging assy	4-87
Main control valve	4-99
Slew device	4-121
Control lever	4-157
Control pedal	4-162
Steering unit	4-164
Swivel joint	4-187
Brake pedal valve	4-190
Accumulators	4-204
Pressure switches	4-207
Solenoid valves	4-211

**SECTION 5 - UNDERCARRIAGE**

Slewing bearing	5-3
Lower frame	5-6
Travel assy	5-7
Wheels and tyres	5-217
Tyres	5-225
Blade	5-230
Lateral stabilizers	5-231



SECTION 6 - FRONT ATTACHMENT

Introduction	6-1
Cylinder removal and installation	6-6
Cylinders	6-24
Antidrop valve	6-81
Pins and bushings	6-83
Buckets	6-88



SECTION 7 - HYDRAULIC SYSTEM

Hoses and fittings	7-1
Hydraulic system	7-8
Operation of circuits	7-50



SECTION 8 - ELECTRICAL SYSTEM

Safety precautions	8-1
Features and data	8-2
Components location and operation	8-4
Undercarriage electric components	8-6
Control units electric system	8-7
Light and beams group	8-8
Gauges and controls	8-9
Electric components	8-32
Control line and wiring harnesses	8-37



SECTION 9 - TROUBLESHOOTING

Introduction	9-1
Hydraulic system troubleshooting	9-3
Electrical system troubleshooting	9-28



SECTION 10 - PERFORMANCE TEST

Introduction	10-1
General information for machine testing	10-1
Standard performances	10-2
Preparation for performance test	10-10
Excavator performance test	10-12
Boom/slew performance	10-20
Gear box	10-25
Components performance	10-26

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com