

MH2.6
MH3.6

Repair Manual

Repair
Manual

Print No. 87730662A *Tier III*
English

MH2.6
MH3.6

SECTION 01 - MAIN OPERATING RULES

1. INTRODUCTION	1
1.1 FOREWORD	1
1.2 MANUAL HANDLING	1

SECTION 02 - SAFETY PRECAUTIONS

1. SAFETY PRECAUTIONS	1
2. SAFETY DECALS	41

SECTION 03 - FEATURES AND DATA

1. FOREWORD	1
2. IDENTIFICATION DATA	2
3. NOISE LEVELS (2000/14/EC)	3
4. SUMMARY PLATE FOR MAINTENANCE OPERATIONS	5
5. WHEELED EXCAVATOR MAIN COMPONENTS	6
5.1 TECHNICAL SPECIFICATIONS	7
5.2 OPERATING WEIGHTS	17
5.3 DIGGING PERFORMANCE	18
5.4 TRANSPORT DIMENSIONS	20
5.5 BUCKET USEFULNESS DEPENDING ON ARM	24
6. FILLING CHART	26

SECTION 04 - UPPER STRUCTURE

1. UPPER STRUCTURE	1
2. MAIN FRAME AND COUNTERWEIGHT	5
3. POWER UNIT	9
3.1 ENGINE	10
4. RADIATOR	12
5. HYDRAULIC PUMPS	14
5.1 MAIN PUMP	15
5.2 DOUBLE PUMP WITH GEARS	49
6. AIR CLEANER	61
7. EXHAUST SILENCER	62
8. HYDRAULIC OIL TANK	64
9. FUEL TANK	66
10. FUEL TRANSFER PUMP	67
11. GUARDS AND COVERS	70
12. CAB	76
13. SWINGING ASSY	88
14. MAIN CONTROL VALVE	100
15. SLEW DEVICE	124
15.1 SLEW HYDRAULIC MOTOR	126
15.2 SLEW REDUCTION UNIT	140
16. CONTROL LEVER	159
17. CONTROL PEDAL	164

18. STEERING UNIT	166
19. SWIVEL JOINT	191
19.1 FEATURES AND DATA.....	193
20. BRAKE PEDAL VALVE	194
21. ACCUMULATORS	208
22. PRESSURE SWITCHES	211
23. SOLENOID VALVES	215

SECTION 05 - UNDERCARRIAGE

1. SLEWING BEARING	2
2. LOWER FRAME	5
3. TRAVEL ASSY	6
3.1 TRAVEL HYDRAULIC MOTOR.....	7
3.2 SPEEDS GEAR BOX.....	23
3.3 STEERING AXLES: FRONT AND REAR	52
3.4 RIGID REAR AXLE.....	150
3.5 DRIVE SHAFT	213
4. WHEELS AND TYRES	214
4.1 TYRES.....	222
5. BLADE	227
6. LATERAL STABILIZERS	228

SECTION 06 - FRONT ATTACHMENT

1. INTRODUCTION	1
2. CYLINDER REMOVAL AND INSTALLATION	6
2.1 BUCKET CYLINDER	6
2.2 ARM CYLINDER.....	10
2.3 POSITIONING CYLINDER	14
2.4 BOOM CYLINDER.....	19
3. MH2.6 - CYLINDERS.....	24
3.1 BUCKET CYLINDER	24
3.2 ARM CYLINDER.....	31
3.3 POSITIONING CYLINDER	38
3.4 BOOM CYLINDER.....	45
4. MH3.6 - CYLINDERS.....	52
4.1 BUCKET CYLINDER	52
4.2 ARM CYLINDER.....	59
4.3 POSITIONING CYLINDER	66
4.4 BOOM CYLINDER.....	73
5. ANTIDROP VALVE.....	81
6. PINS AND BUSHINGS	83
7. BUCKETS	88

SECTION 07 - HYDRAULIC SYSTEM

1. HOSES AND FITTINGS	1
2. HYDRAULIC SYSTEM	8
2.1 MAIN PIPELINES	8

2.2	SUCTION AND DELIVERY PIPELINES.....	9
2.3	RETURN PIPELINES	11
2.4	DRAINING PIPELINES.....	13
2.5	FRONT ATTACHMENT PIPELINES	17
2.6	NIBBLER/BREAKER CONTROL PIPELINES	18
2.7	SLEW CONTROL PIPELINES - TRAVEL AND BLADE/STABILIZERS.....	23
2.8	STEERING PIPELINES (MACHINE 4WD).....	25
2.9	STEERING PIPELINES (MACHINE 2WD).....	28
2.10	BRAKE PIPELINES	31
2.11	POWER STEERING PIPELINES	35
2.12	LATERAL STABILIZERS AND BLADE CONTROL PIPELINE.....	40
2.13	LOCK VALVES	44
2.14	STABILIZERS/BLADE SELECTION VALVE	45
2.15	FRONT AXLE LOCK	46
2.16	AXLE LOCK VALVE	48
2.17	PRESSURE RELIEF VALVE.....	48
3.	OPERATION OF CIRCUITS.....	50

SECTION 08 - ELECTRICAL SYSTEM

1.	SAFETY PRECAUTIONS	1
2.	FEATURES AND DATA	2
3.	COMPONENTS LOCATION AND OPERATION	3
4.	UNDERCARRIAGE ELECTRIC COMPONENTS.....	6
4.1	MACHINE WITH FOUR STEERING WHEELS	6
4.2	MACHINE WITH TWO STEERING WHEELS	7
5.	CONTROL UNITS ELECTRIC SYSTEM.....	7
6.	LIGHT AND BEAMS GROUP	8
7.	GAUGES AND CONTROLS.....	9
7.1	DASHBOARDS.....	9
7.2	CONTROL LEVERS	11
7.3	SWITCHES AND CONTROL LIGHTS PANEL.....	12
7.4	SWITCHES AND WARNING LAMPS.....	13
7.5	MONITOR PANEL	14
7.6	KEY START SWITCH.....	26
7.7	LEFT CONTROL LEVER.....	27
7.8	RIGHT-HAND CONTROL LEVER.....	28
7.9	CONTROL PANEL AND SWITCHES.....	29
7.10	MACHINE CONTROL CARD	32
7.11	PUMP CONTROL CARD.....	34
8.	ELECTRIC COMPONENTS	36
8.1	THROTTLE LEVER CONTROL	36
8.2	SWIVEL JOINT.....	37
8.3	BATTERIES.....	38
8.4	GENERATOR.....	39
8.5	STARTER.....	40
9.	CONTROL LINE AND WIRING HARNESSSES	41
9.1	CONTROLS ON CONSOLES	41
9.2	CONTROLS FOR SIDE PANEL SWITCHES.....	49
9.3	ANTI-TILTING CHECK CONTROL LINE	51

9.4	WORKING LIGHTS CONTROL LINE	52
9.5	TRAFFIC BEAMS CONTROL LINE.....	53
9.6	STEERING COLUMN CONTROLS	58

SECTION 09 - TROUBLESHOOTING

1.	INTRODUCTION	1
2.	HYDRAULIC SYSTEM TROUBLESHOOTING	3
3.	ELECTRICAL SYSTEM TROUBLESHOOTING	28

SECTION 10 - PERFORMANCE TEST

1.	INTRODUCTION	1
1.1	GENERAL INFORMATION FOR MACHINE TESTING.....	1
2.	STANDARD PERFORMANCES - MH2.6	3
2.1	TABLE OF EXCAVATOR STANDARD PERFORMANCES	3
2.2	HYDRAULIC COMPONENTS STANDARD PERFORMANCE.....	5
2.3	MAIN PUMP P-Q CURVE.....	6
3.	STANDARD PERFORMANCES - MH3.6	7
3.1	TABLE OF EXCAVATOR STANDARD PERFORMANCES	7
3.2	HYDRAULIC COMPONENTS STANDARD PERFORMANCE.....	9
3.3	MAIN PUMP P-Q CURVE.....	10
4.	PREPARATION FOR PERFORMANCE TEST.....	11
5.	EXCAVATOR PERFORMANCE TEST.....	13
5.1	ENGINE PERFORMANCE	13
5.2	SWING PERFORMANCE.....	14
5.3	FRONT ATTACHMENT PERFORMANCE	18
5.4	CONTROL LEVERS	21
6.	BOOM/SLEW PERFORMANCE	22
6.1	COMBINED SLEW/BOOM TEST	22
6.2	STEERING.....	23
6.3	BRAKES SYSTEM.....	24
7.	GEAR BOX	27
7.1	GEAR BOX PRESSURE CHECK.....	27
8.	COMPONENTS PERFORMANCE	28
8.1	OVERPRESSURE VALVE AND PILOT CONTROL LINE.....	28
8.2	OVERPRESSURE RELIEF VALVES	30
8.3	DRIVE SHAFT	33
8.4	HYDRAULIC PUMPS - MH2.6.....	35
8.5	HYDRAULIC PUMPS - MH3.6.....	37
8.6	TRAVEL MOTOR.....	39

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com