

# MH6.6

# MH8.6

## HYDRAULIC EXCAVATOR

### Workshop Manual

Print No. 604.13.562 English

III-2005



THIS ALERT SYMBOL SIGNALS IMPORTANT MESSAGES INVOLVING YOUR SAFETY.

Read and heed carefully the safety instructions listed and follow the precautions recommended to avoid potential risks and to safeguard your health and your safety.

You will find this symbol in the text of this Manual referred to the following key words:

**WARNING** - Cautions directed to avoid improper repair interventions involving potential consequences for the safety of the personnel performing the repairs.

**DANGER** - These warnings qualify specifically potential dangers for the safety of the operator or other persons directly or indirectly involved.

#### IMPORTANT NOTICE

All maintenance and repair interventions explained in this Manual **must be performed exclusively by the Service Organisation of the Manufacturer**, observing strictly the instructions explained using, whenever necessary, the recommended specific tools.

Whoever performs the operations reported without following exactly the precautions is responsible on his own, for the damages that may result.

Neither the Factory nor any Organisations in its Distribution Network, including but not limited to national, regional or local distributors, are responsible for any liability arising from any damage resulting from defects caused by parts and/or components not approved by the Factory for use in maintaining and/or repairing products manufactured or merchandised by the Factory.

In any case, no warranty of any kind is made or shall be imposed with respect to products manufactured or merchandised by the Factory, when failures are caused by the use of parts and/or components not approved by the Factory.

## **SUMMARY**

<b>SAFETY INSTRUCTIONS</b>	<b>SECT. 0</b>
<b>TECHNICAL DATA AND SPECIAL TOOLS</b>	<b>SECT. 1</b>
<b>MACHINE STRUCTURE</b>	<b>SECT. 2</b>
<b>ELECTRICAL SYSTEM</b>	<b>SECT. 3</b>
<b>ELECTRONICS</b>	<b>SECT. 4</b>
<b>HYDRAULICS</b>	<b>SECT. 5</b>
<b>CALIBRATION</b>	<b>SECT. 6</b>
<b>TROUBLESHOOTING</b>	<b>SECT. 7</b>
<b>REPAIR INSTRUCTIONS</b>	<b>SECT. 8</b>

**SECTION 0**  
**SAFETY INSTRUCTION**

**INDEX**

	Page
<b>SAFETY INSTRUCTIONS .....</b>	<b>0-1</b>
<b>Personal safety instructions .....</b>	<b>0-1</b>
Observe the safety instructions.....	0-1
Protection from noise .....	0-1
Preparing for emergencies.....	0-1
Wearing protective clothing.....	0-2
<b>Safety instructions before starting work.....</b>	<b>0-3</b>
Checking the machine.....	0-3
Keeping the working area clean.....	0-3
Using grab handles and steps .....	0-4
Adjusting the operator's seat .....	0-4
Applying the safety belt.....	0-5
<b>Working from the operator's seat only.....</b>	<b>0-5</b>
<b>Never take passengers on the machine .....</b>	<b>0-5</b>
<b>Safety instructions for machine operation.....</b>	<b>0-6</b>
Before setting off.....	0-6
Note the position of the working equipment.....	0-6
<b>Taking care during operation.....</b>	<b>0-6</b>
Taking care when trenching .....	0-7
<b>Distance from overhead power lines.....</b>	<b>0-7</b>
Accident Prevention when reversing and slewing .....	0-8
Rules for driving on the road .....	0-9
Recovering and towing the machine .....	0-9
Travelling uphill and downhill .....	0-10
Preventing the machine from overturning .....	0-11
Inspecting the deployment location.....	0-11
Parking the machine safely .....	0-12
Preventing accidents when the machine is moving .....	0-12
Confirming the direction of machine travel.....	0-12
Avoid caving out high banks .....	0-13
Protection from rockfall and landslides .....	0-13
Caving prevention .....	0-14
Never move the bucket above persons .....	0-14
<b>Safety instructions, maintenance/servicing.....</b>	<b>0-15</b>
Safety during transport.....	0-15
Safety during servicing operations .....	0-16
Warning instructions for servicing work .....	0-17
Correct machine support.....	0-17
Working at greater heights .....	0-18
Keeping clear of moving parts .....	0-18
Prestressed units .....	0-19
Never remove lead seals .....	0-19

Safety instructions for accumulators .....	0-19
Dismantling components .....	0-20
After repair work .....	0-20
Correct waste disposal .....	0-20
Welding operations .....	0-21
Starting the engine with starter batteries .....	0-22
Prevention of acid-induced burns .....	0-22
Prevention of scalding .....	0-23
Safe handling of fluids .....	0-23
Fire prevention .....	0-24
Evacuation in case of fire .....	0-25
Risks from exhaust gases .....	0-25
Risks from fluids in pressure systems .....	0-26
Preventing heat build-up close to pressure systems .....	0-27
Preventing heat build-up in lines carrying combustible fluids .....	0-27
Removing paint before welding .....	0-28
Risks from breaking-away components .....	0-29
Use appropriate tools .....	0-29
<b>Warning and instruction signs.....</b>	<b>0-30</b>
Signs .....	0-30
Positioning of signs .....	0-31
<b>Organizational measures .....</b>	<b>0-32</b>
Selection and qualification of personnel; basic responsibilities .....	0-33
Safety instructions governing specific operational phases .....	0-33
Warning of special dangers .....	0-35

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**