

**SERVICE
MANUAL**

**W50BTC
W60BTC
W70BTC
W80BTC**

**Compact Wheel
Loaders**

Print No. 87734623B



SERVICE MANUAL

W50BTC - W60BTC - W70BTC - W80BTC
COMPACT WHEEL LOADERS

Print No. 87734623B



INDEX

SECTION 00 - INTRODUCTION

1. SAFETY INSTRUCTIONS	1
2. GENERAL SAFETY INSTRUCTIONS	2
3. TECHNICAL SPECIFICATIONS	12

SECTION 10 - ENGINE

1. DIESEL ENGINE	1
2. FUEL SYSTEM	2
3. COLD START DEVICE (NORTH AMERICA)	5

SECTION 25 - FRONT AXLES

1. REMOVAL AND INSTALLATION	1
2. DIMENSIONS	3
3. TECHNICAL SPECIFICATIONS	5
4. OIL CHANGE	9
5. DISASSEMBLY AND ASSEMBLY	12
5.1 DISC BRAKE ASSY	12
5.2 BRAKE CALIPER	19
5.3 REDUCTION GEAR (W50BTC)	27
5.4 REDUCTION UNIT (W60BTC, W70BTC, W80BTC)	30
5.5 WHEEL HUB (W50BTC)	33
5.6 WHEEL HUB (W60BTC, W70BTC, W80BTC)	42
5.7 WHEEL SHAFT (W60BTC, W70BTC, W80BTC)	48
5.8 BRAKE AND WHEEL SHAFT (W60BTC, W70BTC, W80BTC "HIGH SPEED")	52
5.9 DIFFERENTIAL SUPPORT	60
5.10 DIFFERENTIAL ASSY	68
5.11 PINION	75
6. TROUBLESHOOTING	81
7. SPECIAL TOOLS	84

SECTION 27 - REAR AXLES

1. REMOVAL AND INSTALLATION	1
2. DIMENSIONS	3
3. TECHNICAL SPECIFICATIONS	7
4. OIL CHANGE	14
5. DISASSEMBLY AND ASSEMBLY	18
5.1 MOTOR TB150	18
5.2 MOTOR TB138.5 "HIGH SPEED"	21
5.3 TRANSMISSION BOX TB150	25
5.4 TRANSMISSION TB138.5 "HIGH SPEED"	34
5.5 REDUCTION GEAR (W50BTC)	54
5.6 REDUCTION UNIT (W60BTC, W70BTC, W80BTC)	57

5.7 WHEEL HUB (W50BTC).....	61
5.8 WHEEL HUB (W60BTC, W70BTC, W80BTC).....	70
5.9 WHEEL SHAFT (W60BTC, W70BTC, W80BTC)	76
5.10 DIFFERENTIAL SUPPORT	80
5.11 DIFFERENTIAL ASSY	88
5.12 LIMITED SLIP DIFFERENTIAL ASSY	94
5.13 PINION.....	101
6. TROUBLESHOOTING	107
7. SPECIAL TOOLS.....	110

SECTION 33 - BRAKE SYSTEM

1. BRAKE SYSTEM DIAGRAM	1
1.1 STANDARD DIAGRAM.....	1
1.2 "HIGH SPEED" DIAGRAM.....	2
2. TECHNICAL SPECIFICATIONS.....	3
2.1 BRAKE PEDAL VALVE.....	3
2.2 PRESSURE SWITCHES	3
3. OPERATION	4
3.1 SERVICE BRAKE OPERATION	6
3.2 PARKING BRAKE OPERATION.....	8
4. BRAKE PEDAL VALVE.....	9
5. PRESSURE SWITCHES	11
6. BRAKE ACCUMULATOR	12
6.1 TECHNICAL SPECIFICATIONS.....	12
7. CHECKS AND ADJUSTMENTS	13
7.1 SERVICE BRAKE SYSTEM PRESSURE CHECK	13
7.2 ACCUMULATOR PRESSURE CHECK	14
7.3 PEDAL ANGLE ADJUSTMENT	15
7.4 "INCHING" VALVE ADJUSTMENT	16
8. TROUBLESHOOTING	17

SECTION 35 - HYDRAULIC SYSTEM

1. HYDRAULIC DIAGRAMS	1
1.1 HYDRAULIC DIAGRAM FOR W50BTC	1
1.2 HYDRAULIC DIAGRAM FOR W50BTC WITH OPTIONAL OUTFITS.....	3
1.3 HYDRAULIC DIAGRAM FOR W60BTC	5
1.4 HYDRAULIC DIAGRAM FOR W60BTC WITH OPTIONAL OUTFITS.....	7
1.5 HYDRAULIC DIAGRAM FOR W70BTC	9
1.6 HYDRAULIC DIAGRAM FOR W70BTC WITH OPTIONAL OUTFITS.....	11
1.7 HYDRAULIC DIAGRAM FOR W80BTC	13
1.8 HYDRAULIC DIAGRAM FOR W80BTC WITH OPTIONAL OUTFITS.....	15
2. TRANSMISSION.....	17
2.1 HYDRAULIC DIAGRAM.....	17
2.2 OPERATION	18
2.3 ADJUSTMENTS.....	20
3. VARIABLE-DISPLACEMENT PISTON PUMP	22
3.1 TECHNICAL SPECIFICATIONS.....	23
3.2 MAIN VALVES	24

3.3 DISASSEMBLY.....	32
3.4 ASSEMBLY.....	51
4. GEAR PUMP	58
4.1 TECHNICAL SPECIFICATIONS.....	58
4.2 COMPONENTS	59
4.3 DISASSEMBLY AND ASSEMBLY.....	60
5. PRIORITY VALVE	63
5.1 TECHNICAL SPECIFICATIONS.....	63
6. TRAVEL MOTOR.....	64
6.1 TECHNICAL SPECIFICATIONS.....	64
6.2 MAIN COMPONENTS	66
6.3 OPERATION.....	67
6.4 REMOVAL	70
6.5 DISASSEMBLY AND ASSEMBLY.....	71
7. ONE-WAY DISTRIBUTOR VALVE.....	85
8. HYDRAULIC OIL TANK.....	86
8.1 OIL FILTER.....	87
9. TROUBLESHOOTING.....	88

SECTION 39 - FRAME

1. ARTICULATED JOINT.....	1
1.1 COMPONENTS	1
1.2 DISASSEMBLY AND ASSEMBLY.....	2

SECTION 41 - STEERING SYSTEM

1. OPERATION.....	1
1.1 EMERGENCY STEERING	3
1.2 PRESSURE ADJUSTMENT	4
2. POWER STEERING	5
2.1 TECHNICAL SPECIFICATIONS.....	6
2.2 COMPONENTS	7
2.3 DISASSEMBLY AND ASSEMBLY.....	8
2.4 TROUBLESHOOTING.....	24
2.5 SPECIAL TOOLS.....	25
3. STEERING CYLINDER	26
3.1 REMOVAL AND INSTALLATION	27
3.2 DISASSEMBLY.....	29
4. TROUBLESHOOTING.....	34

SECTION 50 - HEATING AND AIR CONDITIONING SYSTEM

1. HEATING	1
2. AIR CONDITIONING	3
3. TROUBLESHOOTING.....	29

SECTION 55 - ELECTRICAL SYSTEM

1. ELECTRICAL DIAGRAMS	1
2. FUSES AND RELAYS	17
3. VOLTAGE AND CONTINUITY CHECK	20
4. BATTERY	21
4.1 REPLACEMENT	24
5. BULBS	25
6. TROUBLESHOOTING	29

SECTION 82 - WORKING EQUIPMENT

1. HYDRAULIC DIAGRAM.....	2
2. OPERATION	3
3. REMOVAL AND INSTALLATION	4
4. QUICK TOOL COUPLER.....	6
4.1 COMPONENTS	7
4.2 QUICK TOOL COUPLER CYLINDERS	8
5. BUCKET	9
5.1 ASSEMBLY	9
5.2 DISASSEMBLY	10
5.3 BUCKET TEETH - REPLACEMENT	11
6. FORKS	12
6.1 DISASSEMBLY AND ASSEMBLY	13
6.2 CHECKS	14
7. CYLINDERS.....	16
7.1 BOOM CYLINDER	16
7.2 DUMPING CYLINDER	20
8. CONTROL VALVE	24
9. LOAD HOLDING VALVE	27
9.1 TECHNICAL SPECIFICATIONS	27
10. TROUBLESHOOTING	28

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com