

**SERVICE
MANUAL**

**WE150 Compact
WE170 Compact
WE170C Railroad**
Wheeled Excavators

Print No. 84191448A



SERVICE MANUAL

**WE150 Compact
WE170 Compact
WE170C Railroad**
Wheeled Excavators

Print No. 84191448A



INDEX

SECTION 01 - SAFETY PRECAUTIONS

1. INTRODUCTION	2
1.1 DESIGNATED USE	2
2. GENERAL SAFETY INSTRUCTIONS	3
3. USE INSTRUCTION	12
3.1 LEVEL OF VIBRATIONS TRANSMITTED TO THE OPERATOR	13
3.2 NOISE LEVELS	14
3.3 TRAVELLING ON PUBLIC ROADS	15

SECTION 02 - CONTROLS AND INSTRUMENTS

1. SWITCHES AND PUSH-BUTTONS	1
2. CONTROLS AND PEDALS	6
3. MULTI-FUNCTION DISPLAY	10

SECTION 03 - TECHNICAL SPECIFICATIONS

1. MAIN COMPONENTS	1
2. DIMENSIONS - OPERATING WEIGHTS	4
3. DIGGING PERFORMANCE	17
4. LIFTING CAPACITIES	29
5. HYDRAULIC SYSTEM	34
5.1 PUMPS	34
6. SLEWING	35
6.1 SLEWING GEARBOX	35
7. TRAVEL	36
8. TYRES	37
9. BRAKES	37
10. STEERING	37
11. ELECTRICAL SYSTEM	37
12. BUCKETS	38
13. TIGHTENING TORQUES	39
14. FUEL SYSTEM	39
15. ENGINE	39
16. SUPPLY SUMMARIZING CHART	40

SECTION 04 - UPPER STRUCTURE

1. MAIN COMPONENTS	1
2. SLEWING BEARING	2
3. SLEWING GEARBOX	6
3.1 TECHNICAL SPECIFICATIONS	6
3.2 REMOVAL AND INSTALLATION	9
3.3 DISASSEMBLY AND ASSEMBLY	12
3.4 SPECIAL TOOLS	36
3.5 TROUBLESHOOTING	38

4. MULTI-COOLER.....	40
4.1 TECHNICAL SPECIFICATIONS.....	41
4.2 REMOVAL AND INSTALLATION EXPANSION TANK.....	42
4.3 COOLANT LEVEL, TOP-UP AND CHANGE.....	43
4.4 REMOVAL AND INSTALLATION OF FAN AND HYDRAULIC MOTOR	45
5. HYDRAULIC PUMPS	47
6. MUFFLER	48
7. HYDRAULIC OIL TANK.....	49
7.1 OIL RETURN FILTER.....	50
7.2 LEVEL CHECK AND TOP-UP	51
7.3 OIL CHANGE AND CLEANING.....	52
7.4 BLEEDING VALVE	54
8. AIR FILTER.....	55
9. COUNTERWEIGHT	55
10. FUEL SYSTEM	56
10.1 FUEL TANK	59
10.2 FUEL FILTERS.....	61
11. CAB AND OPERATOR'S SEAT	63
12. CENTRALIZED LUBRICATION.....	75
12.1 SAFETY INSTRUCTIONS.....	75
12.2 OPERATION.....	75
12.3 MAINTENANCE.....	76

SECTION 05 - UNDERCARRIAGE

1. UNDERCARRIAGE COMPONENTS.....	1
2. REAR RIGID AXLE.....	2
2.1 TECHNICAL SPECIFICATIONS.....	3
2.2 DISASSEMBLY.....	6
2.3 DISASSEMBLY AND ASSEMBLY.....	8
2.4 TROUBLESHOOTING.....	87
2.5 SPECIAL TOOLS.....	89
3. TRAVEL MOTOR.....	90
3.1 TECHNICAL SPECIFICATIONS.....	90
3.2 DISASSEMBLY AND ASSEMBLY.....	91
3.3 DISASSEMBLY AND ASSEMBLY.....	92
4. CARDAN SHAFT	103
4.1 DISASSEMBLY AND ASSEMBLY.....	104
5. FRONT STEERING AXLE	107
5.1 TECHNICAL SPECIFICATIONS.....	108
5.2 DISASSEMBLY AND ASSEMBLY.....	111
5.3 DISASSEMBLY AND ASSEMBLY.....	114
5.4 TROUBLESHOOTING.....	187
5.5 SPECIAL TOOLS.....	189
6. WHEELS AND TYRES	190
7. BLADE	194
7.1 BLADE CYLINDER.....	196
8. AXLE FLOATING LOCKING CYLINDERS	204
8.1 TECHNICAL SPECIFICATIONS.....	205

8.2	DISASSEMBLY AND ASSEMBLY	206
8.3	AIR BLEEDING.....	207
8.4	DISASSEMBLY AND ASSEMBLY	208
8.5	TROUBLESHOOTING.....	210
9.	STABILIZERS	211
9.1	STABILIZER CYLINDERS.....	214
9.2	TROUBLESHOOTING.....	223
10.	LEFT LADDER	225
11.	RIGHT LADDER AND TOOL STORAGE BOX.....	226
12.	ROTARY CONTROL VALVE AND ELECTRIC ROTOR	227
12.1	TECHNICAL SPECIFICATIONS	227
12.2	DISASSEMBLY AND ASSEMBLY	228
12.3	DISASSEMBLY AND ASSEMBLY	229
12.4	ELECTRIC ROTOR.....	231

SECTION 06 - FRONT ATTACHMENT

1.	TYPES OF FRONT ATTACHMENT	2
1.1	FRONT ATTACHMENT - WE150 Compact - WE170 Compact	2
1.2	FRONT ATTACHMENT - WE170C Railroad.....	3
2.	HYDRAULIC CYLINDERS.....	4
2.1	HYDRAULIC CYLINDERS - WE150 Compact - WE170 Compact.....	4
2.2	HYDRAULIC CYLINDERS - WE170C Railroad	5
2.3	BOOM CYLINDER.....	6
2.4	DIPPER CYLINDER	16
2.5	BUCKET CYLINDER.....	26
2.6	BOOM ADJUSTING CYLINDER	42
2.7	SPECIAL TOOLS	51
3.	BUCKETS.....	52
3.1	BUCKET TEETH - REPLACEMENT	54

SECTION 07 - STEERING SYSTEM

1.	OPERATION.....	1
2.	POWER STEERING	3
2.1	TECHNICAL SPECIFICATIONS	3
2.2	OPERATION.....	4
2.3	DISASSEMBLY AND ASSEMBLY	5
3.	PRIORITY VALVE	23
4.	TROUBLESHOOTING.....	24

SECTION 08 - BRAKE SYSTEM

1.	OPERATION.....	1
2.	SERVICE BRAKE	4
3.	PARKING BRAKE	7
4.	PEDAL BRAKE VALVE	8
5.	ACCUMULATORS.....	9
5.1	MAINTENANCE.....	10
6.	TROUBLESHOOTING.....	11

SECTION 09 - HYDRAULIC SYSTEM

1. HYDRAULIC SYSTEM	1
2. HYDRAULIC SYSTEM DIAGRAMS	5
2.1 HYDRAULIC SYSTEM DIAGRAMS - UPPER STRUCTURE	5
2.2 HYDRAULIC SYSTEM DIAGRAMS - UNDERCARRIAGE	19
2.3 HYDRAULIC SYSTEM DIAGRAMS BLADE AND/OR STABILIZERS	20
3. HYDRAULIC PUMPS	23
3.1 VARIABLE-FLOW RATE TWIN PUMP	24
3.2 ROTATION PUMP	37
3.3 GEAR PUMP	52
4. UPPER STRUCTURE CONTROL VALVE	53
5. UNDERCARRIAGE CONTROL VALVE	63
6. PILOT CONTROL ASSY	65
6.1 PILOT CONTROL ASSY SOLENOID VALVES	69
7. ROTATION SYSTEM	73
7.1 ROTATION GEARBOX	75
8. TRAVEL	77
8.1 TRAVEL MOTOR	80
9. STABILIZATION HYDRAULIC SYSTEM	86
10. BOOM HYDRAULIC SYSTEM	91
11. HYDRAULIC SYSTEM OF BUCKET	97
12. HYDRAULIC SYSTEM OF DIPPER	102
13. HYDRAULIC SYSTEM OF 2-PIECE BOOM	106
14. HYDRAULIC SYSTEM WITH COMBINATION OF DIFFERENT FUNCTIONS (BOOM, 2-PIECE BOOM, DIPPER AND BUCKET)	112
15. HYDRAULIC SYSTEM OF HAMMER (WITH 2-PIECE BOOM)	114
16. HYDRAULIC SYSTEM OF HAMMER AND SHEARS (WITH 2-PIECE BOOM)	117
17. HYDRAULIC SYSTEM OF SHEARS (WITH 2-PIECE BOOM)	122
18. HYDRAULIC SYSTEM OF HAMMER (WITH MONOBOOM)	125
19. HYDRAULIC SYSTEM OF HAMMER AND SHEARS (WITH MONOBOOM)	128
20. HYDRAULIC SYSTEM OF SHEARS (WITH MONOBOOM)	133
21. TROUBLESHOOTING	136

SECTION 10 - ELECTRICAL SYSTEM

1. ELECTRICAL DIAGRAMS	1
2. FUSES	39
2.1 FUSES - REPLACEMENT	41
3. BATTERIES	42
3.1 CLAMPS CHECK	42
3.2 CHARGE	43
3.3 REPLACEMENT	44
4. BULBS	45
4.1 CAB LIGHT	45
4.2 FRONT WORK LIGHTS	45
4.3 BOOM WORK LIGHT	46
4.4 TRAVEL LIGHT	46

4.5	TURN SIGNAL LIGHTS.....	47
4.6	REAR FLOODLAMPS	47
5.	TROUBLESHOOTING.....	48

SECTION 11 - ELECTRONICS

1.	MAIN COMPONENTS	1
2.	COMPONENTS OF LINE 1	3
2.1	MULTI-FUNCTION DISPLAY	3
2.2	CENTRAL UNIT.....	3
2.3	KEY-PAD MODULES	6
2.4	POWER CONTROL SYSTEM.....	7
2.5	DIAGNOSTICS SOCKET	9
2.6	ELECTRO-HYDRAULIC CONTROLLER	9
3.	COMPONENTS OF LINE CAN2.....	13
3.1	OPERATION.....	13
3.2	CENTRAL UNIT.....	14
3.3	HYDRAULIC CONTROL LEVERS	14
3.4	TRAVEL PEDAL	19
3.5	ATTACHMENT PEDAL (FOR HAMMER AND ADJUSTING CYLINDER)	20
3.6	POWER CONTROL SYSTEM.....	21
4.	ENGINE SPEED ACTUATOR	28
4.1	ENGINE SPEED SENSING.....	28
5.	COOLANT TEMPERATURE DETECTION.....	29
6.	CHARGE AIR TEMPERATURE DETECTION.....	30
7.	HYDRAULIC OIL TEMPERATURE DETECTION	31
8.	PROPORTIONAL VALVE - FAN MOTOR.....	32
9.	PROPORTIONAL VALVES - CONTROL BLOCK	33
10.	PILOT CONTROL BLOCK.....	34

SECTION 12 - CALIBRATION

1.	NECESSARY OPERATIONS BEFORE CALIBRATION	1
1.1	CALIBRATION OF THE MAIN PUMP	1
1.2	CALIBRATION OF THE ROTATION PUMP.....	2
2.	DISPLAY: CALIBRATION MENU	3
3.	CALIBRATIONS WITH THE ENGINE RUNNING.....	4
3.1	VDO CALIBRATION	6
3.2	POWER CALIBRATION	7
3.3	MAIN VALVE CALIBRATION (CONTROL VALVE).....	8
3.4	TRAVEL CALIBRATION.....	11
3.5	PUMP DELIVERY CALIBRATION.....	13
3.6	SLEWING PUMP CALIBRATION.....	16
3.7	AUXILIARY PRESSURE CALIBRATION	18
4.	CALIBRATIONS WITH THE ENGINE STOPPED	20
4.1	CALIBRATIONS, ALL SOLENOID VALVES, MAIN PUMP, ROTATION PUMP, AUXILIARY PRESSURE	22
4.2	MAIN VALVE CALIBRATION (CONTROL VALVE).....	24

SECTION 13 - FAULT CODES

1. ERROR INDICATION ON THE DISPLAY.....	1
2. CENTRAL UNIT AND ENGINE.....	3
2.1 FAULT CODES.....	3
3. PCS UNIT (POWER CONTROL SYSTEM).....	5
3.1 FAULT CODES.....	5
4. HYDRAULICS.....	6
4.1 SAFETY-RELATED SYSTEM DIAGNOSTIC FAULTS	6
4.2 COMMON FAULTS	7
4.3 CAN INTERFACE.....	10
4.4 DISPLAY INDICATORS.....	11
4.5 KEY PADS	11
4.6 COMMON DIGITAL INPUTS.....	12
4.7 HYDRAULIC CONTROL LEVER / PEDALS.....	13
4.8 PILOT PRESSURE SUPPLY.....	18
4.9 MAIN PUMPS	20
4.10 ATTACHMENT SENSORS.....	21
4.11 SLEWING SYSTEM.....	22
4.12 PILOT VALVES ON MAIN VALVE.....	24
4.13 ADDITIONAL VALVES AND SENSORS	28
4.14 AUTOMATIC CALIBRATION FAULTS	29

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com