

SERVICE MANUAL

DI25C Tier 2 Crawler Dozer

PIN NHC104500 and above

Part number 48080036

1st edition English
April 2017





SERVICE MANUAL

D125C Power Angle Tilt (PAT) Blade, Long Track (LT) - Tier 2 [NHC104500 -]
D125C Power Angle Tilt (PAT) Blade, Wide Track (WT) - Tier 2 [NHC104500 -]

Link Product / Engine

Product	Market Product	Engine
D125C Power Angle Tilt (PAT) Blade, Long Track (LT) - Tier 2 [NHC104500 -]	Australia New Zealand	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Long Track (LT) - Tier 2 [NHC104500 -]	Asia Pacific	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Long Track (LT) - Tier 2 [NHC104500 -]	Latin America	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Long Track (LT) - Tier 2 [NHC104500 -]	Middle East Africa	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Wide Track (WT) - Tier 2 [NHC104500 -]	Middle East Africa	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Wide Track (WT) - Tier 2 [NHC104500 -]	Australia New Zealand	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Wide Track (WT) - Tier 2 [NHC104500 -]	Latin America	F4HFA613L*E002
D125C Power Angle Tilt (PAT) Blade, Wide Track (WT) - Tier 2 [NHC104500 -]	Asia Pacific	F4HFA613L*E002

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.206] Fuel filters	10.3
[10.304] Engine lubrication system.....	10.4
[10.310] Aftercooler.....	10.5
[10.400] Engine cooling system	10.6
[10.414] Fan and drive	10.7
Hydrostatic drive.....	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve.....	35.5
[35.741] Dozer blade cylinders	35.6
Tracks and track suspension.....	48
[48.130] Track frame and driving wheels.....	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4

[48.140] Dropbox and final drive	48.5
[48.AAA] Tracks and track suspension generic sub-group	48.6
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system	55.3
[55.015] Engine control system	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.6
[55.100] Harnesses and connectors	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator	55.10
[55.302] Battery	55.11
[55.408] Warning indicators, alarms, and instruments	55.12
[55.512] Cab controls	55.13
[55.518] Wiper and washer system	55.14
[55.DTC] FAULT CODES	55.15
Dozer blade and arm	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Platform, cab, bodywork, and decals	90
[90.160] Cab interior trim and panels	90.1
[90.120] Mechanically-adjusted operator seat	90.2

[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.100] Engine hood and panels	90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com