

# SERVICE MANUAL

**B80B**

Backhoe Loader

Part number 48143704

1<sup>st</sup> edition English

April 2017



# Contents

---

## INTRODUCTION

|                                                               |      |
|---------------------------------------------------------------|------|
| Engine.....                                                   | 10   |
| [10.001] Engine and crankcase .....                           | 10.1 |
| [10.254] Intake and exhaust manifolds and muffler .....       | 10.2 |
| [10.400] Engine cooling system .....                          | 10.3 |
| Transmission.....                                             | 21   |
| [21.100] Mechanical transmission lubrication system .....     | 21.1 |
| [21.112] Power shuttle transmission.....                      | 21.2 |
| [21.134] Power shuttle transmission external controls .....   | 21.3 |
| [21.154] Power shuttle transmission internal components ..... | 21.4 |
| [21.700] Torque converter .....                               | 21.5 |
| Front axle system .....                                       | 25   |
| [25.100] Powered front axle .....                             | 25.1 |
| [25.102] Front bevel gear set and differential .....          | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts ..... | 25.3 |
| [25.400] Non-powered front axle .....                         | 25.4 |
| Rear axle system.....                                         | 27   |
| [27.100] Powered rear axle.....                               | 27.1 |
| [27.106] Rear bevel gear set and differential .....           | 27.2 |
| [27.124] Final drive hub, steering knuckles, and shafts ..... | 27.3 |
| Brakes and controls .....                                     | 33   |
| [33.202] Hydraulic service brakes .....                       | 33.1 |
| [33.110] Parking brake or parking lock .....                  | 33.2 |
| Hydraulic systems.....                                        | 35   |
| [35.000] Hydraulic systems.....                               | 35.1 |
| [35.300] Reservoir, cooler, and filters.....                  | 35.2 |

|                                                              |           |
|--------------------------------------------------------------|-----------|
| [35.104] Fixed displacement pump .....                       | 35.3      |
| [35.359] Main control valve .....                            | 35.4      |
| [35.724] Front loader hydraulic system control .....         | 35.5      |
| [35.701] Front loader arm hydraulic system .....             | 35.6      |
| [35.723] Front loader bucket hydraulic system .....          | 35.7      |
| [35.726] Excavator and backhoe hydraulic controls .....      | 35.8      |
| [35.736] Boom hydraulic system .....                         | 35.9      |
| [35.737] Dipper hydraulic system .....                       | 35.10     |
| [35.738] Excavator and backhoe bucket hydraulic system ..... | 35.11     |
| [35.739] Swing arm hydraulic system .....                    | 35.12     |
| [35.AAA] Hydraulic systems generic sub-group .....           | 35.13     |
| <b>Frames and ballasting .....</b>                           | <b>39</b> |
| [39.129] Stabilizers .....                                   | 39.1      |
| <b>Steering .....</b>                                        | <b>41</b> |
| [41.101] Steering control .....                              | 41.1      |
| [41.200] Hydraulic control components .....                  | 41.2      |
| [41.216] Cylinders .....                                     | 41.3      |
| <b>Wheels .....</b>                                          | <b>44</b> |
| [44.511] Front wheels .....                                  | 44.1      |
| [44.520] Rear wheels .....                                   | 44.2      |
| [44.AAA] Wheels generic sub-group .....                      | 44.3      |
| <b>Cab climate control .....</b>                             | <b>50</b> |
| [50.100] Heating .....                                       | 50.1      |
| [50.200] Air conditioning .....                              | 50.2      |
| <b>Electrical systems .....</b>                              | <b>55</b> |
| [55.100] Harnesses and connectors .....                      | 55.1      |
| [55.201] Engine starting system .....                        | 55.2      |
| [55.301] Alternator .....                                    | 55.3      |

|                                                 |           |
|-------------------------------------------------|-----------|
| [55.518] Wiper and washer system.....           | 55.4      |
| <b>Front loader and bucket.....</b>             | <b>82</b> |
| [82.100] Arm.....                               | 82.1      |
| [82.300] Bucket.....                            | 82.2      |
| <b>Booms, dippers, and buckets .....</b>        | <b>84</b> |
| [84.114] Boom pivoting support .....            | 84.1      |
| [84.910] Boom.....                              | 84.2      |
| [84.912] Dipper arm .....                       | 84.3      |
| <b>Accessories .....</b>                        | <b>88</b> |
| [88.100] Accessories .....                      | 88.1      |
| <b>Platform, cab, bodywork, and decals.....</b> | <b>90</b> |
| [90.150] Cab.....                               | 90.1      |
| [90.154] Cab doors and hatches .....            | 90.2      |
| [90.156] Cab windshield and windows .....       | 90.3      |
| [90.100] Engine hood and panels .....           | 90.4      |

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)