



NEW HOLLAND

BACKHOE LOADER

B95
B95TC
B95LR
B110
B115

SERVICE MANUAL

60367230 NA

Issued 04-2006

INDEX

SECTION 00 - SAFETY PRECAUTIONS

SECTION 01 - MAINTENANCE

SECTION 02 - TECHNICAL SPECIFICATIONS

1. LOADER BACKHOE MODELS	3
2. IDENTIFICATION OF MAIN COMPONENTS.....	4
3. TECHNICAL SPECIFICATIONS.....	5
4. LOADER ATTACHMENT DIMENSIONS AND PERFORMANCE	8
5. BACKHOE ATTACHMENT DIMENSIONS AND PERFORMANCE	12
6. LIFTING CAPACITIES.....	15
7. LOADER BUCKET WITH FORKS DIMENSIONS AND PERFORMANCE.....	18
8. FLUID AND LUBRICANT CAPACITIES AND SPECIFICATIONS.....	19

SECTION 17 - TORQUE CONVERTERS

1. POWERSHUTTLE TORQUE CONVERTER	3
1.1 DESCRIPTION AND OPERATION.....	3
1.2 TECHNICAL SPECIFICATIONS.....	4
1.3 OVERHAUL	4
1.4 INSPECTION.....	4
1.5 DISASSEMBLY AND ASSEMBLY.....	5
1.6 STALL TEST.....	5
1.7 FAULT FINDING.....	6
2. POWERSHIFT TORQUE CONVERTER	7
2.1 DESCRIPTION AND OPERATION.....	7
2.2 TECHNICAL SPECIFICATIONS.....	8
2.3 OVERHAUL	8
2.4 INSPECTION.....	9
2.5 DISASSEMBLY AND ASSEMBLY.....	9
2.6 STALL TEST.....	11
2.7 FAULT FINDING.....	12

SECTION 21 - TRANSMISSION

1. POWERSHUTTLE TRANSMISSION "TURNER MODEL COM-T4-2025"	3
1.1 TECHNICAL SPECIFICATIONS.....	3
1.2 TIGHTENING TORQUES	5
1.3 TRANSMISSION CONTROLS.....	6
1.4 LUBRICATION.....	11
1.5 TRANSMISSION OIL FLOW AND SUPPLY.....	12
1.6 TRANSMISSION HYDRAULIC VALVES AND PRESSURE TEST POINTS.....	18
1.7 TRANSMISSION POWER FLOW.....	19
1.8 TRANSMISSION 2WD COMPONENTS.....	23
1.9 TRANSMISSION 4WD COMPONENTS.....	26
1.10 TRANSMISSION REMOVAL	31
1.11 DISASSEMBLY AND ASSEMBLY.....	32
1.12 FAULT FINDING.....	90
1.13 SPECIAL TOOLS.....	93

2. POWERSHIFT TRANSMISSION "DANA T16000"	94
2.1 TECHNICAL SPECIFICATIONS	94
2.2 TRANSMISSION CONTROLS	95
2.3 LUBRICATION	105
2.4 PRESSURE SPECIFICATIONS AND CHECK POINTS	106
2.5 TRANSMISSION COOLER	108
2.6 TRANSMISSION HYDRAULIC DIAGRAM	109
2.7 OPERATION	110
2.8 POWER FLOWS	117
2.9 GEAR AND CLUTCH LAY OUT	132
2.10 TRANSMISSION / ENGINE REMOVAL FROM LOADER	133
2.11 TRANSMISSION COMPONENTS	137
2.12 DISASSEMBLY AND ASSEMBLY	155
2.13 SPECIAL TOOLS	264
2.14 FAULT FINDING	265
2.15 FAULT FINDING	267

SECTION 25 - FRONT AXLES

1. FRONT AXLE 2WD "CARRARO"	3
1.1 TECHNICAL SPECIFICATIONS	3
1.2 DISASSEMBLY AND ASSEMBLY	5
1.3 FAULT FINDING	23
2. FRONT AXLE 4WD "CARRARO"	25
2.1 TECHNICAL SPECIFICATIONS	25
2.2 DISASSEMBLY AND ASSEMBLY	31
2.3 FAULT FINDING	77
3. FRONT AXLE 4WS "CARRARO"	80
3.1 TECHNICAL SPECIFICATIONS	80
3.2 DISASSEMBLY AND ASSEMBLY	84
3.3 FAULT FINDING	137
4. SPECIAL TOOLS	140

SECTION 27 - REAR AXLE

1. REAR AXLE 2WS	3
1.1 DESCRIPTION AND OPERATION	3
1.2 TECHNICAL SPECIFICATIONS	6
1.3 DISASSEMBLY AND ASSEMBLY	8
1.4 FAULT FINDING	27
2. REAR AXLE 4WS "CARRARO"	28
2.1 TECHNICAL SPECIFICATIONS	28
2.2 DISASSEMBLY AND ASSEMBLY	32
2.3 FAULT FINDING	81
3. SPECIAL TOOLS	84

SECTION 33 - BRAKES SYSTEM

1. TECHNICAL SPECIFICATIONS	3
2. HAND BRAKE	6
2.1 HAND BRAKE ADJUSTMENT	7

3. BRAKE MASTER CYLINDERS	8
3.1 BRAKE RESERVOIR.....	13
3.2 BRAKE BLEEDING PROCEDURE.....	13

SECTION 35 - HYDRAULIC SYSTEM

1. HYDRAULIC DIAGRAMS	3
1.1 HYDRAULIC DIAGRAM - 2WS MECHANICAL MODELS.....	3
1.2 HYDRAULIC DIAGRAM - 2WS PILOT MODELS.....	5
1.3 HYDRAULIC DIAGRAM - 4WS MECHANICAL MODELS.....	8
1.4 HYDRAULIC DIAGRAM - 4WS PILOT MODELS.....	10
1.5 HYDRAULIC DIAGRAM - QUICK COUPLER FOR B95TC.....	13
2. HYDRAULIC PUMP	14
2.1 DESCRIPTION AND OPERATION.....	14
2.2 TECHNICAL SPECIFICATIONS.....	15
2.3 LOAD SENSING VALVE	17
2.4 REMOVAL	19
2.5 COMPONENTS	20
2.6 DISASSEMBLY AND ASSEMBLY.....	21
3. CONTROL VALVES	25
3.1 CONTROL VALVES "HUSCO" (B95 - B95TC - B95LR - B110 MECHANICAL MODELS)	25
3.2 CONTROL VALVES "REXROTH" (B115 MECHANICAL MODELS).....	62
3.3 CONTROL VALVES "REXROTH" (B95 - B95TC - B95LR - B110 - B115 PILOT MODELS)	78
4. HYDRAULIC SWING SYSTEM	102
4.1 DESCRIPTION AND OPERATION.....	102
4.2 HYDRAULIC OIL FLOW.....	103
4.3 PRECISION SWING CONTROL	105
5. HYDRAULIC CYLINDERS.....	108
5.1 LOADER CYLINDER	109
5.2 LOADER BUCKET CYLINDER	114
5.3 4X1 BUCKET CYLINDER.....	120
5.4 BACKHOE BOOM CYLINDER	123
5.5 BACKHOE CROWD CYLINDER	127
5.6 BACKHOE BUCKET CYLINDER.....	131
5.7 SHORT AND LONG TELESCOPIC CYLINDER.....	135
5.8 STABILIZERS CYLINDER.....	139
5.9 SWING CYLINDER.....	143
5.10 SPECIAL TOOLS.....	147
6. PILOT HYDRAULIC CONTROL LEVERS.....	148
6.1 TECHNICAL SPECIFICATIONS.....	148
6.2 DESCRIPTION AND OPERATION.....	149
6.3 DISASSEMBLY AND ASSEMBLY.....	152
6.4 PILOT HYDRAULIC CONTROL VALVE.....	155
7. FAULT FINDING AND FLOW TESTING	158
7.1 PRELIMINARY CHECKS.....	158
7.2 FAULT FINDING (WITH "HUSCO" CONTROL VALVES)	159
7.3 PRESSURE TESTING (WITH "HUSCO" CONTROL VALVES).....	164
7.4 FAULT FINDING (WITH "REXROTH" CONTROL VALVES).....	172
7.5 PRESSURE TESTING (WITH "REXROTH" CONTROL VALVES)	176

SECTION 39 - CHASSIS

1. DESCRIPTION AND OPERATION.....	3
2. REMOVAL AND INSTALLATION COMPONENTS.....	5
2.1 COMPONENTS WITHIN THE CHASSIS.....	5
2.2 COMPONENTS BELOW THE CHASSIS	6
2.3 COMPONENTS ATTACHED OUTSIDE THE CHASSIS	8
2.4 COMPONENTS ATTACHED ABOVE THE CHASSIS.....	9
2.5 TIGHTENING TORQUES	11

SECTION 41 - STEERING SYSTEM

1. STEERING SYSTEM 2WS	4
2. STEERING SYSTEM 4WS	7
3. STEERING MOTOR	12
3.1 TECHNICAL SPECIFICATIONS.....	13
3.2 COMPONENTS	15
3.3 DISASSEMBLY AND ASSEMBLY.....	16
3.4 SPECIAL TOOLS.....	33
3.5 FAULT FINDING	33

SECTION 50 - CAB HEATING AND AIR CONDITIONING

1. TECHNICAL SPECIFICATIONS.....	3
2. CAB HEATING.....	5
2.1 DESCRIPTION AND OPERATION.....	5
3. AIR CONDITIONING.....	12
3.1 PRINCIPALS OF AIR CONDITIONING.....	12
3.2 SAFETY PRECAUTIONS	17
3.3 DESCRIPTION AND OPERATION.....	18
3.4 FAULT FINDING AND TESTING.....	26
3.5 FLUSHING THE SYSTEM.....	44
3.6 EVACUATING THE SYSTEM.....	46
3.7 CHARGING THE SYSTEM.....	47
3.8 COMPONENTS OVERHAUL.....	48
3.9 COMPRESSOR	52
3.10 SPECIAL TOOLS.....	66

SECTION 55 - ELECTRICAL SYSTEM

1. GENERALITIES.....	3
1.1 TEMPORARY WIRING HARNESS REPAIR	3
1.2 FAULT FINDING	4
2. ELECTRICAL DIAGRAMS.....	5
2.1 ELECTRICAL DIAGRAMS - POWERSHUTTLE CAB	5
2.2 ELECTRICAL DIAGRAMS - POWERSHIFT CAB	25
2.3 ELECTRICAL DIAGRAMS - 4WS.....	43
2.4 ELECTRICAL DIAGRAMS - ROPS	62
3. CONTROLS AND INSTRUMENTS.....	77
3.1 FRONT INSTRUMENT PANEL	77
3.2 SIDE INSTRUMENT PANEL	79
3.3 DIAGNOSTIC SIGNALING	81

3.4 CALIBRATION OF SPEEDOMETER	83
3.5 IMMOBILISER CIRCUIT	84
4. STARTING SYSTEM	85
4.1 DESCRIPTION AND OPERATION	85
4.2 FAULT FINDING	86
4.3 STARTER MOTOR	89
5. ALTERNATOR	95
5.1 TECHNICAL SPECIFICATIONS	95
5.2 DESCRIPTION AND OPERATION	95
5.3 COMPONENTS	97
5.4 REMOVAL	98
5.5 PRELIMINARY CHECK AND TESTS	99
5.6 FAULT FINDING	108
6. BATTERY	109
6.1 TECHNICAL SPECIFICATIONS	109
6.2 DESCRIPTION AND OPERATION	109
6.3 REMOVAL AND INSTALLATION	110
6.4 MAINTENANCE	112
6.5 TESTS	114
6.6 CONNECTING A BOOSTER BATTERY	116
6.7 BATTERY MASTER SWITCH (optional B95 - B95TC - B95LR)	116
7. COMPONENT TESTING	117
7.1 GENERAL INTRODUCTION	117
7.2 COMPONENT TESTING	118
7.3 GROUND POINTS	118

SECTION 82 - LOADER

1. LOADER ATTACHMENT CONTROLS	4
2. LOADER BUCKET SELF LEVELING	7
3. LOADER ATTACHMENT SAFETY STRUT	10
4. LOADER BUCKET REMOVAL	12
5. LOADER ARM REMOVAL (B95 - B95LR - B110)	17
6. LOADER ARM REMOVAL (B95TC - B115)	19

SECTION 84 - BACKHOE

1. DESCRIPTION AND OPERATION	3
2. BACKHOE ATTACHMENT MECHANICAL CONTROL VERSION	6
3. BACKHOE ATTACHMENT PILOT CONTROL VERSION	12
4. REMOVAL AND INSTALLATION	14
5. TELESCOPIC DIPPER (HED) REVISION	21

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com