

# SERVICE MANUAL

## **Boomer™ 3040 CVT / Boomer™ 3045 CVT / Boomer™ 3050 CVT Compact Tractor**

*PIN ZCMB11001 and above; PIN ZDMB11925 and above*

Part number 48017760

1<sup>st</sup> edition English

November 2016

*Replaces part number 47463786*





## **SERVICE MANUAL**

**Boomer™ 3040 CVT [ZCMB11001 - ], Boomer™ 3040 CVT [ZDMB11925 - ],  
Boomer™ 3045 CVT [ZCMB11001 - ], Boomer™ 3045 CVT [ZDMB11925 - ],  
Boomer™ 3050 CVT [ZCMB11001 - ], Boomer™ 3050 CVT [ZDMB11925 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Boomer™ 3040 CVT [ZCMB11001 - ]	Europe	N844
Boomer™ 3040 CVT [ZDMB11925 - ]	Europe	N844
Boomer™ 3045 CVT [ZCMB11001 - ]	Europe	N844L
Boomer™ 3045 CVT [ZDMB11925 - ]	Europe	N844L
Boomer™ 3050 CVT [ZCMB11001 - ]	Europe	N844L
Boomer™ 3050 CVT [ZDMB11925 - ]	Europe	N844L

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.101] Cylinder heads .....	10.2
[10.102] Pan and covers .....	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears .....	10.6
[10.110] Balancer and damper .....	10.7
[10.114] Pump drives .....	10.8
[10.218] Fuel injection system.....	10.9
[10.254] Intake and exhaust manifolds and muffler .....	10.10
[10.304] Engine lubrication system.....	10.11
[10.400] Engine cooling system .....	10.12
[10.414] Fan and drive .....	10.13
<b>Transmission</b> .....	<b>21</b>
[21.504] Continuously Variable Transmission (CVT) .....	21.1
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.101] Mechanical control .....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.310] Final drives .....	25.3
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2

<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.120] Central Power Take-Off (PTO) .....	31.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.120] Mechanical service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves .....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump .....	41.2
[41.216] Cylinders .....	41.3
<b>Cab climate control</b> .....	<b>50</b>
[50.100] Heating.....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.100] Harnesses and connectors.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.404] External lighting .....	55.7

[55.408] Warning indicators, alarms, and instruments .....	55.8
[55.518] Wiper and washer system.....	55.9
[55.640] Electronic modules .....	55.10
[55.DTC] FAULT CODES.....	55.11
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.100] Engine hood and panels .....	90.1
[90.116] Fenders and guards.....	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab.....	90.4
[90.151] Cab interior.....	90.5
[90.154] Cab doors and hatches .....	90.6

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)