

SERVICE MANUAL

Boomer™ 54D CVT Tier 4B (final) Compact Tractor

Part number 48017704

1st edition English
October 2016





SERVICE MANUAL

**Boomer™ 54D CVT TIER 4B (FINAL), Cab
Boomer™ 54D CVT TIER 4B (FINAL), ROPS**

Link Product / Engine

Product	Market Product	Engine
Boomer™ 54D CVT TIER 4B (FINAL), Cab	Europe	R 753 IE4
Boomer™ 54D CVT TIER 4B (FINAL), ROPS	Europe	R 753 IE4

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.102] Pan and covers	10.3
[10.103] Crankshaft and flywheel.....	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.106] Valve drive and gears	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.202] Air cleaners and lines	10.9
[10.206] Fuel filters	10.10
[10.218] Fuel injection system.....	10.11
[10.250] Turbocharger and lines.....	10.12
[10.304] Engine lubrication system.....	10.13
[10.400] Engine cooling system	10.14
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.15
Transmission	21
[21.504] Continuously Variable Transmission (CVT)	21.1
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO).....	31.2
[31.120] Central Power Take-Off (PTO).....	31.3
Brakes and controls.....	33
[33.110] Parking brake or parking lock.....	33.1
[33.120] Mechanical service brakes.....	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves.....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
Steering.....	41
[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders.....	41.3
Cab climate control.....	50
[50.100] Heating.....	50.1
[50.104] Ventilation.....	50.2
[50.200] Air conditioning.....	50.3
Electrical systems.....	55
[55.000] Electrical system.....	55.1
[55.010] Fuel injection system.....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.024] Transmission control system.....	55.4
[55.100] Harnesses and connectors.....	55.5

[55.201] Engine starting system	55.6
[55.202] Cold start aid	55.7
[55.301] Alternator	55.8
[55.302] Battery	55.9
[55.404] External lighting	55.10
[55.408] Warning indicators, alarms, and instruments	55.11
[55.518] Wiper and washer system.....	55.12
[55.640] Electronic modules	55.13
[55.989] Exhaust Gas Recirculation (EGR) electrical system	55.14
[55.DTC] FAULT CODES	55.15
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.116] Fenders and guards	90.2
[90.124] Pneumatically-adjusted operator seat.....	90.3
[90.150] Cab	90.4
[90.151] Cab interior	90.5
[90.154] Cab doors and hatches	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com