




## SERVICE MANUAL

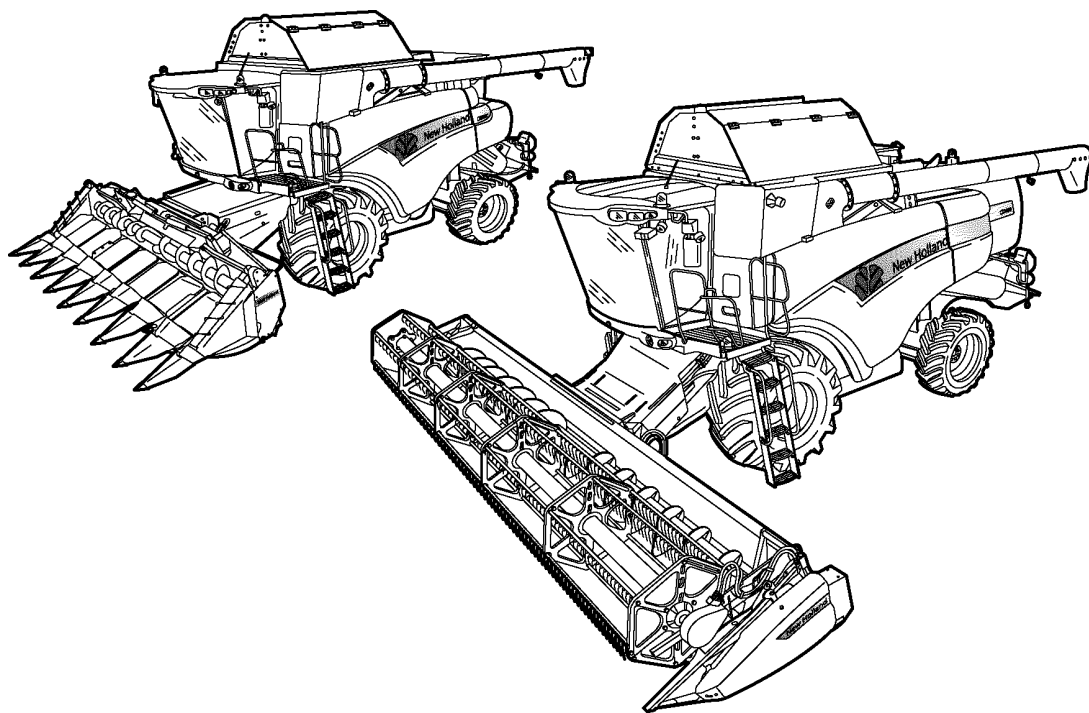

**CR9060 Elevation , CR9060 , CR9070 Elevation , CR9080 Elevation , CR9080 ,  
CR9090 Elevation , CX8030 , CX8040 , CX8050 , CX8060 , CX8070 , CX8080 ,  
CX8090**

# Contents

---

## INTRODUCTION

DISTRIBUTION SYSTEMS.....	A
PRIMARY HYDRAULIC POWER SYSTEM.....	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM.....	A.12.A
HYDRAULIC COMMAND SYSTEM.....	A.14.A
PNEUMATIC SYSTEM.....	A.20.A
ELECTRICAL POWER SYSTEM.....	A.30.A
LIGHTING SYSTEM.....	A.40.A
ELECTRONIC SYSTEM.....	A.50.A
FAULT CODES.....	A.50.A

## POWER PRODUCTION..... B

ENGINE.....	B.10.A
FUEL AND INJECTION SYSTEM.....	B.20.A
AIR INTAKE SYSTEM.....	B.30.A
EXHAUST SYSTEM.....	B.40.A
ENGINE COOLANT SYSTEM.....	B.50.A
ENGINE CLEANING SYSTEM Blow off system.....	B.62.B
STARTING SYSTEM.....	B.80.A

## POWER TRAIN..... C

POWER COUPLING Fixed coupling.....	C.10.B
TRANSMISSION Mechanical.....	C.20.B
TRANSMISSION Hydrostatic.....	C.20.F
PROCESS DRIVE Primary process drive.....	C.50.B

## TRAVELLING..... D

FRONT AXLE.....	D.10.A
REAR AXLE.....	D.12.A
2WD-4WD SYSTEM Hydrostatic.....	D.14.E
STEERING Hydraulic.....	D.20.C
STEERING AutoPilot.....	D.20.E

SERVICE BRAKE Hydraulic.....	D.30.C
PARKING BRAKE Hydraulic .....	D.32.C
<b>BODY AND STRUCTURE .....</b>	<b>E</b>
SHIELD .....	E.20.A
OPERATOR AND SERVICE PLATFORM.....	E.30.A
USER CONTROLS AND SEAT .....	E.32.A
USER CONTROLS AND SEAT Operator seat.....	E.32.C
USER PLATFORM .....	E.34.A
ENVIRONMENT CONTROL Heating system .....	E.40.B
ENVIRONMENT CONTROL Air-conditioning system.....	E.40.C
ENVIRONMENT CONTROL Heating, ventilation and air-conditioning.....	E.40.D
SAFETY SECURITY ACCESSORIES Safety .....	E.50.B
<b>TOOL POSITIONING .....</b>	<b>G</b>
LIFTING .....	G.10.A
LEVELLING .....	G.30.A
<b>CROP PROCESSING .....</b>	<b>K</b>
FEEDING Header feeding .....	K.25.D
FEEDING Feeder housing .....	K.25.E
FEEDING Rotor feeding.....	K.25.N
THRESHING Conventional threshing .....	K.40.B
THRESHING Twin flow threshing .....	K.40.D
SEPARATING Beating.....	K.42.B
SEPARATING Rotary separator .....	K.42.C
SEPARATING Twin flow rotor .....	K.42.D
SEPARATING Straw walker .....	K.42.E
SEPARATING Straw flow beater .....	K.42.F
SEPARATING Discharge beater .....	K.42.G
STORING AND HANDLING Grain storing .....	K.60.B
CLEANING Primary cleaning.....	K.62.B

CLEANING Tailings return system ..... K.62.C

RESIDUE HANDLING Straw chopper..... K.64.C

RESIDUE HANDLING Spreader ..... K.64.D

RESIDUE HANDLING Chaff blower..... K.64.F

RESIDUE HANDLING Chaff spreader ..... K.64.G

RESIDUE HANDLING Positive straw discharge (PSD) ..... K.64.H

UNLOADING Grain unloading..... K.72.B

PROTECTION SYSTEMS Reversing system..... K.90.C

PROTECTION SYSTEMS Stone trapping ..... K.90.E

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)