

SERVICE MANUAL

CX7.80 / CX7.90 / CX8.70 / CX8.80
CX8.85 / CX8.90 / CR7.90 / CR8.80
CR8.90 / CR9.80 / CR9.90 / CR10.90
Combine

Part number 47956056

English

March 2016





SERVICE MANUAL

**CR10.90, CR7.90, CR8.80, CR8.90, CR9.80, CR9.90, CX7.80, CX7.90, CX8.70,
CX8.80, CX8.85, CX8.90**

Link Product / Engine

Product	Market Product	Engine
CX7.80 TIER 4B [1957 -]	Europe	F2CFE613F*B041
CX7.90 TIER 4B Tracks [1957 -]	Europe	F2CFE613E*B043
CX7.90 TIER 4B Tires [1957 -]	Europe	F2CFE613E*B043
CX8.70 TIER 4B Tires [1957 -]	Europe	F2CFE613E*B043
CX8.80 TIER 4B Tires [1957 -]	Europe	F2CFE613E*B043
CX8.80 Tracks TIER 4B [1957 -]	Europe	F2CFE613E*B043
CX8.85 TIER 4B Tracks [1962 -]	Europe	F2CFE613A*B041
CX8.85 TIER 4B Tires [1962 -]	Europe	F2CFE613A*B041
CX8.90 TIER 4A tracks [1962 -]	Europe	F3AFE613A*A
CX8.90 TIER 4A [1962 -]	Europe	F3AFE613A*A
CR10.90 TIER 4B tracks [1947 -]	Europe	F3JFE613A*B004
CR7.90 TIER 4B	Europe	F2CFE613A*B
CR7.90 TIER 4A [1946 -]	Europe	F2CFE613A*A
CR8.80 TIER 4A [1946 -]	Europe	F3AFE613A*A
CR8.80 TIER 4B TRACK	Europe	F3HFE613A*B009
CR8.80 TIER 4A tracks [1946 -]	Europe	F3AFE613A*A
CR8.80 TIER 4B	Europe	F3HFE613A*B009
CR8.90 TIER 4B TRACK	Europe	F3GFE613B*B003
CR8.90 TIER 4A [1946 -]	Europe	F3AFE613A*A
CR8.90 TIER 4A tracks [1946 -]	Europe	F3AFE613A*A
CR8.90 CR8.90 TIER 4B third axle [1961 -]	Europe	F3GFE613B*B003
CR8.90 TIER 4B	Europe	F3GFE613B*B003
CR9.80 TIER 4A 3 axle [1946 -]	Europe	F3BFE613E*A
CR9.80 TIER 4A tracks [1946 -]	Europe	F3BFE613E*A
CR9.80 TIER 4B 12.5 3 AXLE	Europe	F3HFE613A*B009
CR9.80 TIER 4B [1961 -]	Europe	F3HFE613A*B009
CR9.80 TIER 4A [1946 -]	Europe	F3BFE613E*A
CR9.80 TIER 4B [1961 -]	Europe	F3HFE613A*B009
CR9.90 TIER 4B TRACK	Europe	F3HFE613A*B009
CR9.90 TIER 4A 3 axle [1947 -]	Europe	F3BFE613D*A
CR9.90 TIER 4B	Europe	F3HFE613A*B009
CR9.90 TIER 4A [1954 -]	Europe	F3BFE613D*A
CR9.90 TIER4A [1954 -]	Europe	F3BFE613D*A
CR9.90 TIER 4A [1947 -]	Europe	F3BFE613D*A
CR9.90 TIER 4A tracks [1947 -]	Europe	F3BFE613D*A

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.254] Intake and exhaust manifolds and muffler	10.3
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.4
[10.400] Engine cooling system	10.5
[10.418] Rotary screen	10.6
[10.450] Engine air compressor	10.7
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.182] Differential.....	21.4
Front axle system	25
[25.108] Final drive hub, steering knuckles, and shafts	25.1
[25.310] Final drives	25.2
Rear axle system	27
[27.124] Final drive hub, steering knuckles, and shafts	27.1
Hydrostatic drive	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.204] Reservoir, cooler, and lines	29.2
[29.218] Pump and motor components.....	29.3
[29.202] Hydrostatic transmission	29.4

[29.300] Rear hydrostatic transmission.....	29.5
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.359] Main control valve.....	35.5
[35.322] Regulated/Low pressure system	35.6
[35.220] Auxiliary hydraulic pump	35.7
[35.410] Header or attachment height system	35.8
[35.602] Header or attachment leveling system	35.9
[35.760] Header reverser drive	35.10
[35.992] Stone trapping system	35.11
[35.994] Positive Straw Discharge (PSD)	35.12
[35.796] Chaff spreader control	35.13
[35.440] Grain tank unload system	35.14
[35.450] Traction variator system.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.432] Autoguidance steering	41.3
Tracks and track suspension	48
[48.138] Track rollers	48.1
[48.130] Track frame and driving wheels	48.2
[48.134] Track tension units	48.3

[48.100] Tracks	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.5
[55.640] Electronic modules	55.6
[55.029] Gearbox electric system	55.7
[55.019] Hydrostatic drive control system	55.8
[55.512] Cab controls	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.662] Header height control	55.12
[55.628] Threshing electrical control	55.13
[55.426] Harvest material flow control system	55.14
[55.624] Residue handling control	55.15
[55.785] Precision farming system	55.16
[55.911] Global Positioning System (GPS)	55.17
[55.680] Autopilot/Autoguidance	55.18
[55.518] Wiper and washer system	55.19
[55.404] External lighting	55.20
[55.405] External lighting switches and relays	55.21
[55.514] Cab lighting	55.22

[55.408] Warning indicators, alarms, and instruments	55.23
[55.DTC] FAULT CODES	55.24
Attachments/Headers	58
[58.900] Belt feeding	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing	60.2
[60.150] Feeder drive system	60.3
[60.165] Feeder reverse system	60.4
[60.112] Stone trapping system	60.5
[60.260] Rotor	60.6
Threshing	66
[66.000] Threshing	66.1
[66.260] Threshing mechanism drive system	66.2
[66.331] Rotor	66.3
[66.330] Drum	66.4
[66.360] Drum/Rotor housing	66.5
[66.321] Drum/Rotor variator with electrical control	66.6
[66.105] Concave	66.7
[66.101] Concave conveyor plate	66.8
[66.110] Concave control system	66.9
Separation	72
[72.220] Discharge beater	72.1
[72.350] Beater	72.2
[72.420] Rotary separator	72.3
[72.440] Straw-flow beater	72.4
[72.110] Straw walker drive system	72.5
[72.101] Straw walkers and shafts	72.6

Residue handling	73
[73.300] Positive Straw Discharge (PSD)	73.1
[73.230] Straw chopper.....	73.2
[73.210] Straw chopper drive system.....	73.3
[73.220] Straw chopper frame	73.4
[73.335] Chaff spreader	73.5
[73.410] Opti-Spread™ system.....	73.6
Cleaning	74
[74.000] Cleaning.....	74.1
[74.101] Cleaning drive systems	74.2
[74.110] Grain pan.....	74.3
[74.114] Upper shaker shoe	74.4
[74.118] Lower shaker shoe	74.5
[74.125] Clean grain and return cross auger housing	74.6
[74.130] Fan housing	74.7
[74.136] Fan drive system	74.8
[74.140] Tailings return system	74.9
Crop storage / Unloading	80
[80.101] Clean grain elevator.....	80.1
[80.150] Grain tank	80.2
[80.175] Grain tank unload drive system	80.3
[80.180] Grain tank unload	80.4
Platform, cab, bodywork, and decals	90
[90.154] Cab doors and hatches	90.1
[90.110] Operator platform less cab	90.2
[90.118] Protections and footboards.....	90.3
[90.124] Pneumatically-adjusted operator seat.....	90.4
[90.105] Machine shields and guards	90.5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com