

SERVICE MANUAL

DI80C Crawler Dozer

Part number 48037327A

2nd edition English

June 2018





SERVICE MANUAL

D180C With cab, Tier 2, Power Angle Tilt (PAT) Blade, Made in Brazil

D180C With cab, Tier 2, Bulldozer (BD) Blade, Made in Brazil

D180C With cab, Tier 3, Power Angle Tilt (PAT) Blade, Made in Brazil

D180C With cab, Tier 3, Bulldozer (BD) Blade, Made in Brazil

Link Product / Engine

Product	Market Product	Engine
D180C Com cabine, Tier 2, lâmina Power Angle Tilt (PAT), feito no Brasil	Latin America	F4HFA613N*E002
D180C Com cabine, Tier 2, lâmina Bulldozer (BD), feito no Brasil	Latin America	F4HFA613N*E002

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.250] Turbocharger and lines.....	10.3
[10.254] Intake and exhaust manifolds and muffler	10.4
[10.400] Engine cooling system	10.5
[10.414] Fan and drive	10.6
[10.310] Aftercooler.....	10.7
[10.304] Engine lubrication system.....	10.8
Rear axle system	27
[27.120] Planetary and final drives	27.1
Hydrostatic drive	29
[29.218] Pump and motor components.....	29.1
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.105] Charge pump.....	35.5
[35.359] Main control valve.....	35.6
[35.741] Dozer blade cylinders	35.7
[35.752] Hydraulic fan drive cooling system.....	35.8

Frames and ballasting	39
[39.100] Frame	39.1
Tracks and track suspension	48
[48.134] Track tension units	48.1
[48.138] Track rollers	48.2
[48.140] Dropbox and final drive	48.3
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system	55.8
[55.202] Cold start aid	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.512] Cab controls.....	55.12
[55.518] Wiper and washer system.....	55.13
[55.DTC] FAULT CODES.....	55.14
Dozer blade and arm	86
[86.110] Dozer blade	86.1
[86.124] Dozer pushbeams and struts	86.2
Tools	89

[89.128] Ripper assembly	89.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.114] Operator protections	90.2
[90.100] Engine hood and panels	90.3

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com