

SERVICE  
MANUAL

E135B

Crawler Excavator

Print No.84136002



# SERVICE MANUAL

E135B  
Crawler Excavator

Print No.84136002




# MANUAL INDEX



## SAFETY PRECAUTIONS

Page


<b>Section 1</b>	<b>GENERALITIES</b> .....	<b>S1</b>
<b>Section 2</b>	<b>SAFETY PRECAUTIONS</b> .....	<b>S2</b>
<b>Section 3</b>	<b>SAFETY PLATES</b> .....	<b>S3</b>

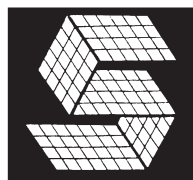

## OPERATIONAL PRINCIPLE

### Section 1 GENERAL

<b>Group 1</b>	Specifications .....	T1-1
----------------	----------------------	------

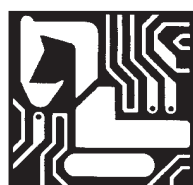

### Section 2 SYSTEM

<b>Group 1</b>	Mechatronic control system .....	T2-1
<b>Group 2</b>	Hydraulic System .....	T2-2
<b>Group 3</b>	Electrical System .....	T2-3



### Section 3 COMPONENT OPERATION

<b>Group 1</b>	Hydraulic Pump Assy .....	T3-1
<b>Group 2</b>	Pilot Valve .....	T3-2
<b>Group 3</b>	Control Valve .....	T3-3
<b>Group 4</b>	Swing Device .....	T3-4
<b>Group 5</b>	Travel Device .....	T3-5
<b>Group 6</b>	Swivel Joint .....	T3-6
<b>Group 7</b>	Cylinders .....	T3-7
<b>Group 8</b>	Air Conditioner system .....	T3-8
<b>Group 9</b>	Blade control .....	T3-9



## OPERATIONAL PERFORMANCE TEST

### Section 4 OPERATIONAL PERFORMANCE TEST

<b>Group 1</b>	Introduction .....	T4-1
<b>Group 2</b>	Standard Performances .....	T4-2
<b>Group 3</b>	Test Procedures .....	T4-3
<b>Group 4</b>	Mechatronic Controller .....	T4-4



## TROUBLESHOOTING

### Section 5 TROUBLESHOOTING

<b>Group 1</b>	Troubleshooting (by error codes) .....	T5-1
<b>Group 2</b>	Troubleshooting (by trouble) .....	T5-2
<b>Group 3</b>	Troubleshooting (trouble diagnosis mode) .....	T5-3

## REPAIR INSTRUCTIONS



### Section 1 GENERAL INFORMATION

<b>Group 1</b>	Precautions for Disassembly and Assembly .....	W1-1
<b>Group 2</b>	Tightening Torque .....	W1-2



### Section 2 UPPERSTRUCTURE

<b>Group 1</b>	Upperstructure .....	W2-1
<b>Group 2</b>	Pump Device .....	W2-2
<b>Group 3</b>	Control Valve .....	W2-3
<b>Group 4</b>	Swing Device .....	W2-4
<b>Group 5</b>	Pilot Valve .....	W2-5



### Section 3 UNDERCARRIAGE

<b>Group 1</b>	Swing Bearing .....	W3-1
<b>Group 2</b>	Travel Device .....	W3-2
<b>Group 3</b>	Swivel Joint .....	W3-3
<b>Group 4</b>	Track Adjuster .....	W3-4
<b>Group 5</b>	Front Idler .....	W3-5
<b>Group 6</b>	Upper and Lower Roller .....	W3-6
<b>Group 7</b>	Tracks .....	W3-7



### Section 4 FRONT ATTACHMENT

<b>Group 1</b>	Front attachment .....	W4-1
----------------	------------------------	------



### Section 5 ENGINE

<b>Group 1</b>	General .....	W5-1
<b>Group 2</b>	Service data .....	W5-2
<b>Group 3</b>	Service tools .....	W5-3
<b>Group 4</b>	Determination of overhaul .....	W5-4
<b>Group 5</b>	Disassembly of basic engine .....	W5-5
<b>Group 6</b>	Inspection and repair of basic engine .....	W5-6
<b>Group 7</b>	Reassembly of basic engine .....	W5-7
<b>Group 8</b>	Fuel System .....	W5-8
<b>Group 9</b>	Lubrication system .....	W5-9
<b>Group 10</b>	Cooling system .....	W5-10
<b>Group 11</b>	Inlet and exhaust system .....	W5-11
<b>Group 12</b>	Electrical system .....	W5-12
<b>Group 13</b>	Adjustment and operation .....	W5-13
<b>Group 14</b>	Troubleshooting .....	W5-14

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)