

---

# L160, L170 REPAIR MANUAL

## COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION.....	3
SECTION 10 - ENGINE.....	4
SECTION 27 - REAR DRIVE AXLE (GEARBOXES).....	6
SECTION 29 - HYDROSTATIC TRANSMISSION.....	6
SECTION 33 - BRAKES AND CONTROLS.....	8
SECTION 35 - HYDRAULIC SYSTEM.....	9
SECTION 37 - TOWING HOOKS AND BALLASTING.....	11
SECTION 39 - FRAMES.....	11
SECTION 44 - AXLES AND WHEELS.....	12
SECTION 50 - CAB CLIMATE CONTROL.....	12
SECTION 55 - ELECTRICAL SYSTEM.....	13
SECTION 82 - FRONT LOADER (BOOM AND MOUNTING PLATE).....	15
SECTION 88 - ACCESSORIES.....	16
SECTION 90 - PLATFORMS, CAB, BODYWORK, AND DECALS.....	17

The following pages are the collation of the contents pages from each section and chapter of the L160, L170 Repair Manual. Complete Repair Manual part # 87634733.

The sections used through out all New Holland product Repair Manuals may not be used for each product. Each Repair Manual will be made up of one or several books.

Each book will be labeled as to which sections are in the overall Repair Manual and the sections that each book contains.

The sections listed above are the sections utilized for the L160, L170 Skid Steer.

---

## SECTION 00 – GENERAL INFORMATION

BOOK 1 - 87634735

### CONTENTS

Section	Description	Page
	Introduction .....	00-2
	About Improvements .....	00-2
	Company Policy .....	00-3
	Parts and Accessories .....	00-3
	Model Codes .....	00-3
	Precautionary Statements .....	00-4
	Safety Precaution Information .....	00-5
	General Safety Information .....	00-7
	Machine Model and Serial Number Location .....	00-9
	Engine Model and Serial Number Location .....	00-9
	Hardware Torque Specifications .....	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses .....	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings .....	00-12
	Pipe Thread Fitting Torque .....	00-13
	Lubricants and Coolants .....	00-13
	Sealants .....	00-13
	Properly Support a Raised Machine .....	00-14
	Properly Support Boom on Boom Lock Pins .....	00-14
	Raising Boom Without Hydraulic Oil Flow .....	00-14
	Raising Boom Without Battery Voltage (12V) .....	00-16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins .....	00-17
	Major Unit Overhaul .....	00-18
	Cab and Boom Tilt Procedure .....	00-19
	Craning the Skid Steer .....	00-25
	Special Tools .....	00-28
	Specifications .....	00-29
	Dimensions .....	00-35
	Cab and Boom Tilt Procedure (Cab Upgrade Machines Only).....	00-37

---

## SECTION 10 – ENGINE

BOOK 1 - 87634735

### Chapter 1 – L160 - N844, L170 - N844T

#### CONTENTS

Section	Description	Page
10 000	General Engine Information .....	10-3
	General Description .....	10-3
	Engine Component Descriptions .....	10-3
	Engine Model and Serial Number Location .....	10-5
	Turbocharger Lubrication .....	10-5
	Safety Precautions .....	10-6
	General Engine Specifications .....	10-7
	Troubleshooting .....	10-11
	L170 - Excessive Oil Consumption .....	10-15
	Specifications - Service Standards .....	10-17
	Torque Specifications .....	10-21
	Engine Components Electrical Diagram .....	10-22
10 001 10	Engine Removal .....	10-23
10 001 53	Engine Disassembly Sequence .....	10-28
	Engine Component Maintenance .....	10-36
10 101 55	Valve Seat .....	10-39
10 101 56	Cylinder Block .....	10-41
10 105 22	Piston and Piston Rings .....	10-42
	Connecting Rod .....	10-45
10 103 10	Bearing Holder .....	10-47
	Front Crankshaft Bearing (Bushing) .....	10-48
10 103 30	Crankshaft .....	10-50
10 103 76	Flywheel and Ring Gear .....	10-52
10 106 40	Camshaft Assembly .....	10-52
10 106 66	Camshaft Gear and Bearing Assembly .....	10-53
	Timing Gear .....	10-54
10 304 41	Oil Pump .....	10-54
10 304 10	Oil Filter .....	10-55
10 402 28	Water Pump Assembly and Thermostat Housing .....	10-55
10 402 30	Thermostat .....	10-55
10 230 24	Governor .....	10-57
	Governor Operation .....	10-59

---

10	304	38	Engine Reassembly Sequence .....	10-61
			Crankshaft and Bearing Holder Assembly .....	10-62
			Rear Oil Seal .....	10-63
			Backplate/Flywheel Housing .....	10-63
			Flywheel .....	10-63
			Piston and Connecting Rod .....	10-64
			Oil Intake and Oil Strainer .....	10-64
			Oil Sump .....	10-64
			Dipstick and Tube .....	10-64
			Front Plate .....	10-64
			Idle Gear and Oil Pump Assembly .....	10-66
			Timing Gear Case Installation .....	10-66
			Crankshaft Pulley .....	10-66
			Injection Pump Installation .....	10-66
			Adjusting the Fuel Injection Timing .....	10-67
			Spill Timing Procedure .....	10-68
29	100	50	Reinstallation of Engine into Skid Steer Frame .....	10-75
			How to Operate the Engine After Overhaul .....	10-77
			Cooling System .....	10-78
			Cooling System Operation .....	10-78
			Water Pump Assembly and Thermostat Housing .....	10-79
			Radiator .....	10-80
			Fuel System .....	10-82
			Fuel Specifications .....	10-82
			Diesel Fuel .....	10-82
			Diesel Fuel Storage .....	10-82
			Fuel System Components .....	10-83
			Fuel Gauge .....	10-84
			Cold Start Aid .....	10-85
			Fuel Filter System .....	10-85
			Priming the Fuel System .....	10-86
			Fuel System Testing .....	10-87
			Fuel System Components .....	10-90
10	236	08	Fuel Injection Timing .....	10-96
			Turbocharger - L170 N844T Engine .....	10-101
10	250	30	Turbocharger Removal .....	10-103
			Miscellaneous Engine Electrical .....	10-116
10	223	10	Shut-off Solenoid .....	10-117
			Special Tools .....	10-119
			Labor Guide .....	10-120

---

## SECTION 27 – REAR DRIVE AXLE (GEARBOXES)

BOOK 2 - 87634738

### Chapter 1 – Gearboxes

#### CONTENTS

Section	Description	Page
27 000	General Information .....	27-2
	Specifications .....	27-4
	Troubleshooting .....	27-5
	Testing .....	27-7
27 126	Gearboxes .....	27-8
27 126 40	Gearbox Removal and Inspection .....	27-8
27 126 48	Gearbox Disassembly .....	27-12
	Gearbox Parts Inspection .....	27-13
	Gearbox Resassembly .....	27-14
27 126 40	Gearbox Resinstallation .....	27-16
	Labor Guide .....	27-19

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87634738

### Chapter 1 - Neutralizer, Pumps, Motors

#### CONTENTS

Section	Description	Page
29 100	General Information .....	29-3
	Operation .....	29-3
	Specifications .....	29-5
29 100 01	Troubleshooting .....	29-6
	Hydrostatic Drive System Testing .....	29-8
	Hydrostatic System Oil Flow .....	29-11
	Hydrostatic Charge System Pressure Test .....	29-14
	Hydrostatic Pump Case Drain Test .....	29-15
	Hydrostatic Pump High Pressure Test .....	29-18

---

	Hydrostatic Pump Efficiency Test .....	29-20
	Hydrostatic Motor Case Drain Test .....	29-22
	Hydrostatic Motor Efficiency Test .....	29-23
	Hydraulic, Hydrostatic System Air Ingress Test .....	29-25
	Hydrostatic Pumps .....	29-27
29 100 40	Hydrostatic Pump Removal .....	29-27
29 100 46	Hydrostatic Pump Disassembly .....	29-31
	Hydrostatic Pump Parts Inspection .....	29-36
	Hydrostatic Pump Reassembly .....	29-41
	Hydraulic System Pump Installation (Without High Flow) .....	29-47
	Hydraulic System Pump/High Flow Pump Installation .....	29-49
	Hydrostatic Pump Reinstallation .....	29-54
	Hydrostatic Motor .....	29-58
29 100 60	Hydrostatic Motor Removal .....	29-58
29 100 66	Hydrostatic Motor Disassembly .....	29-62
	Hydrostatic Motor Parts Inspection .....	29-67
	Hydrostatic Motor Reassembly .....	29-70
	Hydrostatic Motor Reinstallation .....	29-79
	Hydraulic System Cleaning Procedure .....	29-85
	Start-up Procedure After Rebuild (After Pump or Motor Replacement) .....	29-88
	Charge Check Valve .....	29-90
29 100 36	Charge Check Valve Removal and Replacement .....	29-90
29 100	Steering System .....	29-91
	Hydrostatic System Controls .....	29-91
29 130 30	Neutralizer Assembly .....	29-93
	Left Control Handle With No Boom Hand Control .....	29-97
29 100 10	Left Control Handle With No Boom Hand Control Removal .....	29-97
29 100 10	Left Control Handle With No Boom Hand Control Disassembly .....	29-97
	Left Control Handle With No Boom Hand Control Inspection .....	29-98
	Left Control Handle With No Boom Hand Control Reassembly .....	29-98
	Left Control Handle With No Boom Hand Control Reinstallation .....	29-98
29 100 11	Left Control Handle With Boom Hand Control .....	29-100
	Left Control Handle With Boom Hand Control Removal .....	29-100
29 100 10	Left Control Handle With Boom Hand Control Disassembly .....	29-101
	Left Control Handle With Boom Hand Control Inspection .....	29-102
	Left Control Handle With Boom Hand Control Reassembly .....	29-103
	Left Control Handle With Boom Hand Control Reinstallation .....	29-104
	Right Control Handle With Auxiliary or Bucket Control .....	29-106
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal .....	29-106

29 100 15	Right Control Handle With Auxiliary or Bucket Control Disassembly.....	29-107
	Right Control Handle With Auxiliary or Bucket Control Inspection.....	29-109
	Right Control Handle With Auxiliary or Bucket Control Reassembly.....	29-110
	Right Control Handle With Auxiliary or Bucket Control Reinstallation.....	29-113
29 130 06	Drive Control Adjustment Procedure.....	29-115
29 130 06	Neutral Adjustment.....	29-116
	Labor Guide.....	29-118
	Machines Equipped With ISO Pattern Pilot Controls.....	29-121
	Pilot Control Travel System Overview.....	29-121
	Specifications.....	29-142
	Troubleshooting.....	29-143
	Check 1 - Checking the DA Pressure.....	29-144
	Check 2 - Checking Charge Pressure/Flow.....	29-146
	Check 3 - Checking Circuit Relief Valve Pressure.....	29-147
	Pump Adjustments.....	29-148
	Pump Removal.....	29-149
	Pump Installation.....	29-153
	Pump Disassembly.....	29-156
	Pump Assembly.....	29-173
	Pilot Control Travel Lever Removal.....	29-189
	Pilot Control Travel Lever Installation.....	29-193
	Illustration - Hydrostatic System (Machines Equipped With Pilot Controls).....	29-195
	Procedure to Bleed Air From the Pilot Control Hydraulic System.....	29-196

## SECTION 33 - BRAKES AND CONTROLS

### BOOK 2 - 87634738

#### Chapter 1 - Parking Brake

##### Contents

Section	Description	Page
33 000	General Information.....	33-2
	Specifications.....	33-4
	Troubleshooting.....	33-5
	Testing.....	33-7
33 110	Parking Brake.....	33-8
	Parking Brake Removal and Installation.....	33-9
	Labor Guide.....	33-22

# SECTION 35 - HYDRAULIC SYSTEM

BOOK -3 - 87634740

## Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

### Contents

Section Description	Page
35 000 -	
General Information.....	35-3
Hydraulic System Compatibility.....	35-4
Boom Cylinder Pivot Pins.....	35-6
Boom Cylinder Pivot Pin Location and Machine Usage.....	35-6
Control Valve Power Beyond.....	35-7
Specifications.....	35-8
Troubleshooting.....	35-12
Auxiliary Boom Hydraulics Troubleshooting.....	35-16
Hydraulic System Testing.....	35-18
Hydraulic System Oil Flow.....	35-24
Control Valve - Bucket Spool Shifted.....	35-25
Control Valve - Boom Spool Shifted.....	35-26
Control Valve - Auxiliary Spool Shifted.....	35-27
35 710 02	
Main System Pressure Tests.....	35-28
Checking Main System Pressure at Boom Cylinders.....	35-30
Checking Main System Pressure at Bucket Cylinders.....	35-31
Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers.....	35-32
Boom Circuit Relief Valve Test.....	35-33
Gear Pump Flow Efficiency Test.....	35-35
Boom and Bucket Spool Lock Solenoid Test.....	35-39
Hydraulic, Hydrostatic System Air Ingress Test.....	35-41
Control Valve Specifications.....	35-43
35 724 50	
Control Valve Removal.....	35-44
Control Valve Disassembly and Inspection.....	35-45
Control Valve Parts Inspection.....	35-49
Control Valve Reassembly.....	35-50
Control Valve Reinstallation.....	35-53
Hydraulic Pump Specifications.....	35-54
35 710 10	
Hydraulic Pump Removal.....	35-55
35 710 20	
Hydraulic Pump Removal/Disassembly (Without High Flow).....	35-56
High Flow Pump Parts Inspection.....	35-58
Hydraulic Pump Parts Inspection.....	35-59
Hydraulic Pump Reassembly/Installation (Without High Flow).....	35-61
Hydraulic Pump and High Flow Pump Reassembly/Installation.....	35-64
New Hydraulic Pump Installation (Without High Flow).....	35-70
New Hydraulic Pump/High Flow Pump Installation.....	35-72
Gear Pump Start-up Procedure.....	35-78
Cylinders, Boom and Bucket.....	35-79
35 710 10	
Boom Cylinder Removal.....	35-81
35 730 18	
Boom Cylinder Disassembly.....	35-83
Boom Cylinder Parts Inspection.....	35-84
Boom Cylinder Reassembly.....	35-85
Boom Cylinder Reinstallation.....	35-87



35 730 10	Bucket Cylinder Removal.....	35-87
35 730 13	Bucket Cylinder Disassembly.....	35-88
	Bucket Cylinder Parts Inspection.....	35-89
	Bucket Cylinder Reassembly.....	35-90
	Bucket Cylinder Reinstallation.....	35-92
	Pedal Controls.....	35-93
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls).....	35-93
	Pedal Inspection (With Boom and Bucket Pedal Controls).....	35-93
	Pedal Reinstallation (With Boom and Bucket Pedal Controls).....	35-95
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls).....	35-98
	Pedal Inspection (With Boom and Bucket Hand Controls).....	35-99
	Pedal Reinstallation (With Boom and Bucket Hand Controls).....	35-100
35 300	Hydraulic Cooling, Filter, Reservoir System.....	35-103
	Filter System.....	35-104
	Filter Removal.....	35-104
35 705 05	Base Removal.....	35-104
	Reassembly.....	35-105
	Oil Cooler.....	35-105
35 300 10	Oil Cooler Removal.....	35-105
	Oil Cooler Reassembly.....	35-106
35 300	Oil Reservoir.....	35-106
35 300 10	Oil Reservoir Removal.....	35-107
	Oil Reservoir Reinstallation.....	35-108
	Adapting Attachments.....	35-109
	Labor Guide.....	35-110
<b>Machines Equipped With Pilot Controls</b>		
	Specifications.....	35-111
	Loader Function Troubleshooting.....	35-112
	Pilot Pressure Test.....	35-113
	Illustration - Loader Control.....	35-114
	Right Control Handle - Removal.....	35-115
	Right Control Handle - Installation.....	35-118
	Hydraulic Schematic - Frame 3 - (Mechanical Control Machines).....	35-120
	Hydraulic Schematic - Frame 4- (Mechanical Control Machines).....	35-121
	Hydraulic Schematic - Frame 5- (Pilot Control Machines).....	35-122
	Hydraulic Schematic - Frame 6- (Pilot Control Machines).....	35-123
	Hydraulic Schematic - Frame 7- (Pilot Control Machines).....	35-124
	Hydraulic Schematic - Frame 8- (Pilot Control Machines).....	35-125
	Hydraulic Schematic - Frame 9- (Pilot Control Machines).....	35-126

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)