

# SERVICE MANUAL

## **L213 Tier 3**

### 200 Series Skid Steer Loader

*PIN NEM459110 and above*

## **L216 Tier 4B (final)**

### 200 Series Skid Steer Loader

*PIN NEM477964 and above*

Part number 47711677

1<sup>st</sup> edition English

May 2014





# **SERVICE MANUAL**

**L213 TIER 3 [NEM459110 - ]**

**L216 TIER 4 [NEM477964 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
L213 TIER 3 [NEM459110 - ]	Europe	N844L
L216 TIER 4 [NEM477964 - ]	Europe	N844LT-F-45SL

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.220] Throttle linkage.....	10.2
[10.400] Engine cooling system .....	10.3
[10.414] Fan and drive .....	10.4
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.5
<b>Front axle system</b> .....	<b>25</b>
[25.450] Chain drive system.....	25.1
<b>Rear axle system</b> .....	<b>27</b>
[27.650] Chain drive system .....	27.1
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.202] Hydrostatic transmission .....	29.1
[29.200] Mechanical control .....	29.2
[29.218] Pump and motor components.....	29.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.128] Auxiliary hydraulic function control .....	35.3
[35.300] Reservoir, cooler, and filters.....	35.4
[35.350] Safety and main relief valves .....	35.5
[35.359] Main control valve .....	35.6
[35.701] Front loader arm hydraulic system .....	35.7

[35.723] Front loader bucket hydraulic system .....	35.8
[35.724] Front loader hydraulic system control .....	35.9
[35.734] Tool quick coupler hydraulic system .....	35.10
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating.....	50.1
[50.200] Air conditioning .....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.010] Fuel injection system.....	55.2
[55.011] Fuel tank system .....	55.3
[55.012] Engine cooling system .....	55.4
[55.014] Engine intake and exhaust system.....	55.5
[55.015] Engine control system.....	55.6
[55.019] Hydrostatic drive control system .....	55.7
[55.031] Parking brake electrical system .....	55.8
[55.036] Hydraulic system control .....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.100] Harnesses and connectors.....	55.11
[55.201] Engine starting system .....	55.12
[55.302] Battery.....	55.13
[55.404] External lighting .....	55.14
[55.408] Warning indicators, alarms, and instruments .....	55.15
[55.415] Loader arm and bucket control system .....	55.16

[55.512] Cab controls.....	55.17
[55.525] Cab engine controls.....	55.18
[55.640] Electronic modules.....	55.19
[55.DTC] FAULT CODES.....	55.20
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.154] Cab doors and hatches.....	90.1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)