

SERVICE MANUAL

L218 / L220

Tier 4B (final)

200 Series Skid Steer Loader

L218 PIN NDM449275 and above; L220 PIN NDM456673 and above

Part number 47851949

English

May 2015

Replaces part number 47712047



Link Product / Engine

Product	Market Product	Engine
L218 TIER 4B Final [NDM449275 -]	North America	N4LDI-TA-45SL
L220 TIER 4B Final [NDM456673 -]	North America	N4LDI-TA-50SL

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.400] Engine cooling system	10.2
[10.414] Fan and drive	10.3
Power coupling.....	19
[19.121] Pump-drive assembly	19.1
Front axle system	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system.....	27.1
Hydrostatic drive.....	29
[29.202] Hydrostatic transmission	29.1
[29.134] Two-speed assembly.....	29.2
[29.200] Mechanical control	29.3
[29.218] Pump and motor components.....	29.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.359] Main control valve	35.4
[35.525] Auxiliary hydraulic valves and lines	35.5
[35.600] High flow hydraulics.....	35.6
[35.701] Front loader arm hydraulic system	35.7

[35.724] Front loader hydraulic system control	35.8
[35.734] Tool quick coupler hydraulic system	35.9
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating.....	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.011] Fuel tank system	55.2
[55.012] Engine cooling system	55.3
[55.014] Engine intake and exhaust system.....	55.4
[55.019] Hydrostatic drive control system	55.5
[55.031] Parking brake electrical system	55.6
[55.036] Hydraulic system control	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.8
[55.100] Harnesses and connectors.....	55.9
[55.302] Battery.....	55.10
[55.408] Warning indicators, alarms, and instruments	55.11
[55.512] Cab controls.....	55.12
[55.640] Electronic modules.....	55.13
[55.DTC] FAULT CODES.....	55.14
Front loader and bucket.....	82
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2

Platform, cab, bodywork, and decals	90
[90.150] Cab.....	90.1
[90.154] Cab doors and hatches	90.2

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com