

SERVICE MANUAL

L221 / L228

Tier 4B (final)

200 Series Skid Steer Loader

PIN NGM418237 and above; PIN NHM435463 and above

C227 / C232 / C237

Tier 4B (final)

200 Series Compact Track Loader

PIN NGM418237 and above; PIN NHM435463 and above

Part number 48068128

1st edition English

January 2018





SERVICE MANUAL

**C227 TIER 4B (FINAL) [NGM418237 -], C227 TIER 4B (FINAL) [NHM435463 -],
C232 TIER 4B (FINAL) [NGM418237 -], C232 TIER 4B (FINAL) [NHM435463 -],
C237 TIER 4B (FINAL) [NHM435463 -], L221 TIER 4B (FINAL) [NGM418237 -],
L221 TIER 4B (FINAL) [NHM435463 -], L228 TIER 4B (FINAL) [NGM418237 -],
L228 TIER 4B (FINAL) [NHM435463 -]**

Link Product / Engine

Product	Market Product	Engine
C227 TIER 4B (FINAL) [NGM418237 -]	North America	F5HFL463A*F001
C227 TIER 4B (FINAL) [NHM435463 -]	North America	F5HFL463A*F001
C232 TIER 4B (FINAL) [NGM418237 -]	North America	F5HFL463A*F001
C232 TIER 4B (FINAL) [NHM435463 -]	North America	F5HFL463A*F001
C237 TIER 4B (FINAL) [NHM435463 -]	North America	F5HFL463A*F001
L221 TIER 4B (FINAL) [NGM418237 -]	North America	F5HFL463A*F001
L221 TIER 4B (FINAL) [NHM435463 -]	North America	F5HFL463A*F001
L228 TIER 4B (FINAL) [NGM418237 -]	North America	F5HFL463A*F001
L228 TIER 4B (FINAL) [NHM435463 -]	North America	F5HFL463A*F001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.304] Engine lubrication system.....	10.5
Power coupling.....	19
[19.121] Pump-drive assembly	19.1
Front axle system	25
[25.450] Chain drive system.....	25.1
Rear axle system.....	27
[27.650] Chain drive system.....	27.1
Hydrostatic drive.....	29
[29.200] Mechanical control	29.1
[29.218] Pump and motor components.....	29.2
[29.202] Hydrostatic transmission	29.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.359] Main control valve	35.4
[35.525] Auxiliary hydraulic valves and lines	35.5
[35.600] High flow hydraulics.....	35.6

[35.724] Front loader hydraulic system control	35.7
[35.701] Front loader arm hydraulic system	35.8
[35.723] Front loader bucket hydraulic system	35.9
[35.734] Tool quick coupler hydraulic system	35.10
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Wheels	44
[44.511] Front wheels	44.1
[44.520] Rear wheels	44.2
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system	55.2
[55.011] Fuel tank system	55.3
[55.012] Engine cooling system	55.4
[55.019] Hydrostatic drive control system	55.5
[55.036] Hydraulic system control	55.6
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.8
[55.100] Harnesses and connectors	55.9
[55.201] Engine starting system	55.10

[55.202] Cold start aid	55.11
[55.301] Alternator.....	55.12
[55.302] Battery.....	55.13
[55.404] External lighting	55.14
[55.408] Warning indicators, alarms, and instruments	55.15
[55.512] Cab controls.....	55.16
[55.518] Wiper and washer system.....	55.17
[55.525] Cab engine controls.....	55.18
[55.640] Electronic modules	55.19
[55.991] Telematics	55.20
[55.DTC] FAULT CODES.....	55.21
Front loader and bucket.....	82
[82.100] Arm.....	82.1
[82.300] Bucket.....	82.2
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1
[90.160] Cab interior trim and panels.....	90.2
[90.154] Cab doors and hatches	90.3
[90.102] Engine shields, hood latches, and trims	90.4
[90.120] Mechanically-adjusted operator seat.....	90.5
[90.124] Pneumatically-adjusted operator seat.....	90.6

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com