

LB90.B
LB95.B
LB110.B
LB115.B

Workshop
Manual

INDEX

SECTION 00 - SAFETY PRECAUTIONS

SECTION 01 - MAINTENANCE

SECTION 02 - TECHNICAL SPECIFICATIONS

1. MODELS.....	3
2. IDENTIFICATION OF MAIN COMPONENTS.....	4
3. TECHNICAL SPECIFICATIONS.....	5
4. LOADER ATTACHMENT DIMENSIONS AND PERFORMANCE	9
5. BACKHOE ATTACHMENT DIMENSIONS AND PERFORMANCE	13
6. LIFTING CAPACITIES.....	18
7. LOADER BUCKET WITH FORKS DIMENSIONS AND PERFORMANCE.....	23
8. FLUID AND LUBRICANT CAPACITIES AND SPECIFICATIONS.....	24

SECTION 17 - TORQUE CONVERTERS

1. POWERSHUTTLE TORQUE CONVERTER.....	3
1.1 DESCRIPTION AND OPERATION.....	3
1.2 TECHNICAL SPECIFICATIONS.....	4
1.3 OVERHAUL	4
1.4 INSPECTION.....	4
1.5 DISASSEMBLY AND ASSEMBLY.....	5
1.6 STALL TEST.....	5
1.7 FAULT FINDING.....	6
2. POWERSHIFT TORQUE CONVERTER.....	7
2.1 DESCRIPTION AND OPERATION.....	7
2.2 TECHNICAL SPECIFICATIONS.....	8
2.3 OVERHAUL	8
2.4 INSPECTION.....	9
2.5 DISASSEMBLY AND ASSEMBLY.....	9
2.6 STALL TEST.....	11
2.7 FAULT FINDING.....	12

SECTION 21 - TRANSMISSION

1. POWERSHUTTLE TRANSMISSION "TURNER MODEL COM-T4-2025"	3
1.1 TECHNICAL SPECIFICATIONS.....	3
1.2 TIGHTENING TORQUES	5
1.3 TRANSMISSION CONTROLS.....	6
1.4 LUBRICATION.....	11
1.5 TRANSMISSION OIL FLOW AND SUPPLY.....	12
1.6 TRANSMISSION HYDRAULIC VALVES AND PRESSURE TEST POINTS	18
1.7 TRANSMISSION POWER FLOW.....	19
1.8 TRANSMISSION 2WD COMPONENTS.....	23
1.9 TRANSMISSION 4WD COMPONENTS.....	26
1.10 TRANSMISSION REMOVAL	31
1.11 DISASSEMBLY AND ASSEMBLY.....	32

1.12 FAULT FINDING	90
1.13 SPECIAL TOOLS	93
2. POWERSHIFT TRANSMISSION "DANA T16000"	94
2.1 TECHNICAL SPECIFICATIONS	94
2.2 TRANSMISSION CONTROLS	95
2.3 LUBRICATION	105
2.4 PRESSURE SPECIFICATIONS AND CHECK POINTS	106
2.5 TRANSMISSION COOLER	108
2.6 TRANSMISSION HYDRAULIC DIAGRAM	109
2.7 OPERATION	110
2.8 POWER FLOWS	117
2.9 GEAR AND CLUTCH LAY OUT	132
2.10 TRANSMISSION REMOVAL AND INSTALLATION	133
2.11 TRANSMISSION COMPONENTS	137
2.12 DISASSEMBLY AND ASSEMBLY	155
2.13 SPECIAL TOOLS	264
2.14 FAULT FINDING	265
2.15 FAULT FINDING	267

SECTION 25 - FRONT AXLES

1. FRONT AXLE 2WD "CARRARO"	3
1.1 TECHNICAL SPECIFICATIONS	3
1.2 DISASSEMBLY AND ASSEMBLY	5
1.3 FAULT FINDING	23
2. FRONT AXLE 4WD "CARRARO"	25
2.1 TECHNICAL SPECIFICATIONS	25
2.2 DISASSEMBLY AND ASSEMBLY	31
2.3 FAULT FINDING	77
3. FRONT AXLE 4WS "CARRARO"	80
3.1 TECHNICAL SPECIFICATIONS	80
3.2 DISASSEMBLY AND ASSEMBLY	84
3.3 FAULT FINDING	137
4. SPECIAL TOOLS	140

SECTION 27 - REAR AXLE

1. REAR AXLE 2WS	3
1.1 DESCRIPTION AND OPERATION	3
1.2 TECHNICAL SPECIFICATIONS	6
1.3 DISASSEMBLY AND ASSEMBLY	8
1.4 FAULT FINDING	27
2. REAR AXLE 4WS "CARRARO"	28
2.1 TECHNICAL SPECIFICATIONS	28
2.2 DISASSEMBLY AND ASSEMBLY	32
2.3 FAULT FINDING	81
3. SPECIAL TOOLS	84

SECTION 33 - BRAKES SYSTEM

1. TECHNICAL SPECIFICATIONS	3
2. HAND BRAKE	6

2.1 HAND BRAKE ADJUSTMENT	7
3. BRAKE CYLINDERS	8
4. OIL BRAKE TANK.....	13
5. BLEEDING PROCEDURE	13

SECTION 35 - HYDRAULIC SYSTEM

1. HYDRAULIC DIAGRAMS	3
1.1 HYDRAULIC DIAGRAM - 2WS CENTRE PIVOT MECHANICAL MODELS	3
1.2 HYDRAULIC DIAGRAM - 2WS SIDESHIFT MECHANICAL MODELS	5
1.3 HYDRAULIC DIAGRAM - 2WS CENTRE PIVOT PILOT MODELS	7
1.4 HYDRAULIC DIAGRAM - 2WS SIDESHIFT PILOT MODELS	10
1.5 HYDRAULIC DIAGRAM - 4WS CENTRE PIVOT MECHANICAL MODELS	13
1.6 HYDRAULIC DIAGRAM - 4WS SIDESHIFT MECHANICAL MODELS	15
1.7 HYDRAULIC DIAGRAM - 4WS CENTRE PIVOT PILOT MODELS	17
1.8 HYDRAULIC DIAGRAM - 4WS SIDESHIFT PILOT MODEL	20
2. HYDRAULIC PUMP	23
2.1 DESCRIPTION AND OPERATION	23
2.2 TECHNICAL SPECIFICATIONS	24
2.3 LOAD SENSING VALVE	26
2.4 REMOVAL	28
2.5 COMPONENTS	29
2.6 DISASSEMBLY AND ASSEMBLY	30
3. CONTROL VALVES	34
3.1 CONTROL VALVES "HUSCO" (LB110.B CENTRE PIVOT MECHANICAL MODELS)	34
3.2 CONTROL VALVES "REXROTH" (MECHANICAL MODELS)	71
3.3 CONTROL VALVES "REXROTH" (PILOT MODELS)	87
4. HYDRAULIC SWING SYSTEM	111
4.1 DESCRIPTION AND OPERATION	111
4.2 HYDRAULIC OIL FLOW	112
4.3 PRECISION SWING CONTROL	114
5. HYDRAULIC CYLINDERS	117
5.1 LOADER CYLINDER	118
5.2 LOADER BUCKET CYLINDER	124
5.3 4X1 BUCKET CYLINDER	130
5.4 BACKHOE BOOM CYLINDER	133
5.5 BACKHOE DIPPER CYLINDER	137
5.6 BACKHOE BUCKET CYLINDER	141
5.7 SHORT AND LONG TELESCOPIC CYLINDER	145
5.8 STABILIZER CYLINDER (CENTRE PIVOT MODELS)	149
5.9 STABILIZER CYLINDER (SIDESHIFT MODELS)	153
5.10 SWING CYLINDER	157
5.11 BACKHOE SIDESHIFT LOCKING CYLINDER (SIDESHIFT)	161
5.12 SPECIAL TOOLS	163
6. CONTROL LEVERS	164
6.1 TECHNICAL SPECIFICATIONS	164
6.2 DESCRIPTION AND OPERATION	165
6.3 DISASSEMBLY AND ASSEMBLY	168
6.4 CONTROL LEVER VALVE	171
7. FAULT FINDING AND FLOW TESTING	174
7.1 PRELIMINARY CHECKS	174

7.2 FAULT FINDING (WITH "HUSCO" CONTROL VALVES) - LB110.B CENTRE PIVOT	175
7.3 PRESSURE TESTING (WITH "HUSCO" CONTROL VALVES) - LB110.B CENTRE PIVOT	180
7.4 FAULT FINDING (WITH "REXROTH" CONTROL VALVES)	188
7.5 PRESSURE TESTING (WITH "REXROTH" CONTROL VALVES)	192

SECTION 39 - CHASSIS

1. DESCRIPTION AND OPERATION	3
2. REMOVAL AND INSTALLATION COMPONENTS	6
2.1 COMPONENTS WITHIN THE CHASSIS	6
2.2 COMPONENTS BELOW THE CHASSIS	7
2.3 COMPONENTS ATTACHED OUTSIDE THE CHASSIS	9
2.4 COMPONENTS ATTACHED ABOVE THE CHASSIS	10
2.5 TIGHTENING TORQUES	12

SECTION 41 - STEERING SYSTEM

1. STEERING SYSTEM 2WS	4
2. STEERING SYSTEM 4WS	7
3. POWER STEERING	12
3.1 TECHNICAL SPECIFICATIONS	13
3.2 COMPONENTS	15
3.3 DISASSEMBLY AND ASSEMBLY	16
3.4 SPECIAL TOOLS	33
3.5 FAULT FINDING	33

SECTION 50 - CAB HEATING AND AIR CONDITIONING

1. TECHNICAL SPECIFICATIONS	3
2. CAB HEATING	5
2.1 DESCRIPTION AND OPERATION	5
3. AIR CONDITIONING	12
3.1 PRINCIPALS OF AIR CONDITIONING	12
3.2 SAFETY PRECAUTIONS	16
3.3 DESCRIPTION AND OPERATION	17
3.4 FAULT FINDING AND TESTING	25
3.5 FLUSHING THE SYSTEM	43
3.6 EVACUATING THE SYSTEM	45
3.7 CHARGING THE SYSTEM	46
3.8 COMPONENTS OVERHAUL	47
3.9 COMPRESSOR	51
3.10 SPECIAL TOOLS	65

SECTION 55 - ELECTRICAL SYSTEM

1. GENERALITIES	3
1.1 TEMPORARY WIRING HARNESS REPAIR	3
1.2 FAULT FINDING	4
2. ELECTRICAL DIAGRAMS	5
2.1 ELECTRICAL DIAGRAMS - POWERSHUTTLE CAB	5
2.2 ELECTRICAL DIAGRAMS - POWERSHIFT CAB	24
2.3 ELECTRICAL DIAGRAMS - 4WS	43
2.4 ELECTRICAL DIAGRAMS - ROPS	62

3. CONTROLS AND INSTRUMENTS	77
3.1 FRONT INSTRUMENT PANEL	77
3.2 SIDE INSTRUMENT PANEL	79
3.3 DIAGNOSTIC SIGNALING	81
3.4 CALIBRATION OF SPEEDOMETER	83
3.5 IMMOBILISER CIRCUIT	84
4. STARTING SYSTEM	85
4.1 DESCRIPTION AND OPERATION	85
4.2 FAULT FINDING	86
4.3 STARTER MOTOR	89
5. ALTERNATOR	95
5.1 TECHNICAL SPECIFICATIONS	95
5.2 DESCRIPTION AND OPERATION	95
5.3 COMPONENTS	97
5.4 REMOVAL	98
5.5 PRELIMINARY CHECK AND TESTS	99
5.6 FAULT FINDING	108
6. BATTERY	109
6.1 TECHNICAL SPECIFICATIONS	109
6.2 DESCRIPTION AND OPERATION	109
6.3 BATTERY REPLACEMENT	110
6.4 MAINTENANCE	112
6.5 TESTS	114
6.6 CONNECTING A BOOSTER BATTERY	116
6.7 BATTERY MASTER SWITCH (optional LB90.B - LB95.B)	116
7. COMPONENT TESTING	117
7.1 GENERAL INTRODUCTION	117
7.2 COMPONENT TESTING	118
7.3 GROUND POINTS	118

SECTION 82 - LOADER

1. LOADER ATTACHMENT CONTROLS	4
2. LOADER BUCKET SELF LEVELING	7
3. LOADER ATTACHMENT SAFETY STRUT	10
4. LOADER BUCKET REMOVAL	12
5. LOADER REMOVAL (2WS)	15
6. LOADER REMOVAL (4WS)	17

SECTION 84 - BACKHOE

1. DESCRIPTION AND OPERATION	3
2. BACKHOE ATTACHMENT MECHANICAL CONTROL VERSION	6
3. BACKHOE ATTACHMENT PILOT CONTROL VERSION	12
4. REMOVAL AND INSTALLATION	14
5. TELESCOPIC DIPPER REVISION	24

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com