

SERVICE MANUAL

LM732 Telehandlers

Print No. 87474474B



Workshop manual

LM732

TELESCOPIC HANDLER

GENERAL LIST OF CONTENTS

SECTION 00 - GENERAL

Description	Page
General instructions	1
Safety rules	3
Product identification	6
Environmental considerations	10
Maintenance techniques	11

SECTION 10 – ENGINE

Description	Page
Main engine specifications	3
General engine specifications	4
General engine F4GE9484F*J600	6
Removal and installation of engine and radiator	11
Troubleshooting	23
Tightening torques	36
Special tools	37

SECTION 21 - POWERSHIFT GEARBOX

Description	Page
Transmission assembly	5
Drop box assembly	7
Operation of gearbox	8
Transmission and hydraulic oil circuit diagrams	15
Operation of modulating valve	31
Torque converter and oil cooler hydraulic circuit	34
Troubleshooting guide	35
Troubleshooting procedures	35
Troubleshooting	37
Pressure tests on clutch and high pressure circuit	38
Pressure tests on torque converter and oil cooler hydraulic circuit	39
Test points	40
Assembly instructions	42
Transmission overhaul	45
Special tools	104

SECTION 25 - FRONT AXLE

Description	Page
Technical data	1
Description	2
Operation	5
Troubleshooting	6
Wheel toe-in check	7
Component overhaul	7
Front axle removal procedure	8
Front axle overhaul	9
Adjusting the axle drive pinion bearing adjustment	54
Installation and adjustment of axle drive pinion	56
Front drive shaft	59

SECTION 27 - REAR AXLE

Description	Page
Technical data	1
Description	2
Operation Diagram	5
Component overhaul	7
Rear axle removal procedure	7
Overhaul	8
Special tools	9

SECTION 33 - BRAKING SYSTEM

Description	Page
Service brakes	2
Parking brake	4
Brake disc adjustment	7
Troubleshooting	8
Brakes disassembly	9

SECTION 35 - HYDRAULIC SYSTEM

Description	Page
Technical data	2
Steering system hydraulic circuit, description and operation	3
Introduction	3
Steering valve	3
Telescopic boom hydraulic circuit	4
Component operation	7
Hydraulic pump	7

Front loader controls/operation	9
Balancing valves	11
Power steering (OSPQ)	13
Telescopic boom distributor	14
Boom cylinders LM732	23
Boom	33

SECTION 55 – ELECTRICAL SYSTEM

Description	Page
Chapter 1 – Electrical system - general	
Electrical equipment specifications	1
Electrical system and fuses	2
Controls and instruments	6
SAR – Anti-tipping system	15
Bulb replacement	35
Protecting the electrical systems during charging or welding	38
Starting the machine using jump leads	39
Temporary wiring repairs	40
Electrical system – general fault finding	42
Chapter 2 – Circuit diagrams	
List of connectors	44
List of components	45
How to use the circuit diagrams	46
Diagram 1: Starting/Recharge/Warning/Indicators lights	48
Diagram 2: Transmission	50
Diagram 2A: Transmission – France homologation	52
Diagram 3: Wheel alignment/Hydraulic solenoids/Brake system	54
Diagram 4: Boom control	56
Diagram 5: Stabiliser	58
Diagram 6: Lights/Front wiper	60
Diagram 7: Work lamps/Roof beacon light	62
Diagram 8: Upper wiper	64
Diagram 9: Load momentum device	66
Diagram 10: Heating / Radio / Power socket / Ceiling light	68
Diagram 11: Conditioner	70

SECTION 60 - AIR CONDITIONING SYSTEM

Description	Page
Air conditioning system	2
Operation	2
Cab heating-ventilation controls	3
Precautions for use	5
Connections for servicing tools	8
Draining the refrigerant	9
Recharging with refrigerant	9
Leak test	10
Special tools	12
Fault finding	13

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com