



# REPAIR MANUAL



**LS180.B**  
**LS185.B**  
**LS190.B**  
**LT185.B**  
**LT190.B**

# Contents

---

INTRODUCTION	
DISTRIBUTION SYSTEMS	A
POWER PRODUCTION	B
POWER TRAIN	C
TRAVELLING	D
BODY AND STRUCTURE	E
WORKING ARM	H
TOOLS AND COUPLERS	J



# INTRODUCTION

# Contents

---

## INTRODUCTION

Basic instructions ( - A.90.A.05)	3
LS185.B, LS190.B, LT185.B, LT190.B, LS180.B	
Torque ( - A.90.A.10)	7
LS185.B, LS190.B, LT185.B, LT190.B, LS180.B	
Conversion factors ( - A.92.A.21)	11
LS185.B, LS190.B, LT185.B, LT190.B, LS180.B	

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)