

**LS 180.B**  
**LS 185.B**  
**LS 190.B**

Workshop  
Manual

# REPAIR MANUAL



**LS180.B**  
**LS185.B**  
**LS190.B**

# Contents

---

## INTRODUCTION

## DISTRIBUTION SYSTEMS

A

PRIMARY HYDRAULIC POWER SYSTEM	A.10.A
SECONDARY HYDRAULIC POWER SYSTEM	A.12.A
HIGH-FLOW HYDRAULIC POWER SYSTEM	A.16.A
ELECTRICAL POWER SYSTEM	A.30.A
LIGHTING SYSTEM	A.40.A

## POWER PRODUCTION

B

ENGINE	B.10.A
FUEL AND INJECTION SYSTEM	B.20.A
AIR INTAKE SYSTEM	B.30.A
ENGINE COOLANT SYSTEM	B.50.A
LUBRICATION SYSTEM	B.60.A
STARTING SYSTEM	B.80.A

## POWER TRAIN

C

POWER COUPLING Fixed coupling	C.10.B
TRANSMISSION Hydrostatic	C.20.F

## TRAVELLING

D

FRONT AXLE	D.10.A
REAR AXLE	D.12.A
STEERING Steering clutch	D.20.F
PARKING BRAKE Hydraulic	D.32.C
WHEELS AND TRACKS Wheels	D.50.C
Final drive	D.15.A

## BODY AND STRUCTURE

E

USER CONTROLS AND SEAT	E.32.A
USER PLATFORM	E.34.A
ENVIRONMENT CONTROL Heating system	E.40.B

ENVIRONMENT CONTROL Air-conditioning system E.40.C

SAFETY SECURITY ACCESSORIES Safety E.50.B

## WORKING ARM H

BOOM Lift H.20.B

SINGLE ARM Lift H.40.B

SINGLE ARM TOOL ATTACHMENT Tilt H.50.C

## TOOLS AND COUPLERS J

CARRYING Unarticulated tools J.50.B

COUPLING Hydraulic coupling J.80.C

COUPLING Mechanical coupling J.80.B

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)