

SERVICE MANUAL

Wheel Loader

LW110.B

6-72402NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Wheel Loader

LW110.B

6-72402NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Wheel Loader

LW110.B

6-72402NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

SERVICE MANUAL

Wheel Loader

LW110.B

6-72402NA

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

LW 110.B Wheel Loader Service Manual 6-72402

Table of Contents

Description	Section No.	Form No.
General		
	Tab 1	
Section Index - General		6-72440
Standard Torque Specifications	1001	6-49790
Fluids and Lubricants	1002	6-72451
Metric Conversion Chart	1003	6-49810
Engines		
	Tab 2	
Section Index - Engines		6-72460
Engine and Radiator Removal and Installation	2000	6-72470
Stall Tests	2002	6-72481
Engine		6-49731
Fuel System		
	Tab 3	
Section Index - Fuel System		6-72490
For Fuel System Repair, See the Engine Service Manual		
Electrical		
	Tab 4	
Section Index - Electrical		6-72500
Removal and Installation of Starter and Alternator	4001	6-72510
Electrical Specifications and Troubleshooting	4002	6-72520
Batteries	4003	6-72530
Instrument Cluster and Digital Display	4005	6-73550

LW 110.B Wheel Loader Service Manual 6-72402

Table of Contents

Description	Section No.	Form No.
Steering		
	Tab 5	
Section Index - Steering		6-72580
Removal and Installation of Steering Components	5001	6-72590
Steering Specifications, Pressure Checks, and Troubleshooting	5002	6-72600
Steering Control Valve	5003	6-72610
Steering Priority Valve	5004	6-72620
Steering Cylinders	5005	6-72630
Center Pivot	5006	6-72640
Auxiliary Steering Motor and Pump	5007	6-72650
Power Train		
	Tab 6	
Section Index - Power Train		6-72660
Removal and Installation of Power Train Components	6001	6-72670
Transmission Specifications, Pressure Checks, and Troubleshooting	6002	6-72680
Transmission	6003	6-72690
Front and Rear Axle	6004	6-72700
Drive Shafts, Center Bearing, and Universal Joints	6005	6-72720
Wheels and Tires	6006	6-72730
Transmission Control Valve	6007	6-72740
Brakes		
	Tab 7	
Section Index - Brakes		6-72750
Removal and Installation of Brake Components	7001	6-72760
Hydraulic Brake Troubleshooting	7002	6-72770
Brake Accumulators	7004	6-72780
Parking Brake	7008	6-72790
Hydraulics		
	Tab 8	
Section Index - Hydraulics		6-72800
Removal and Installation of Hydraulic Components	8001	6-72811
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	6-72821
Cleaning the Hydraulic System	8003	6-72830
Loader Control Valve	8005	6-72850
Cylinders	8006	6-72861
Coupler Solenoid Locking Valve	8007	6-72870
Pilot Pressure Accumulator and Ride Control Accumulator	8013	6-72890
Ride Control Valve	8014	6-72900

LW 110.B Wheel Loader Service Manual 6-72402

Table of Contents

Description	Section No.	Form No.
Mounted Equipment	Tab 9	
Section Index - Mounted Equipment		6-72910
Pedal and Levers	9001	6-72920
Air Conditioning Troubleshooting and System Checks For Systems with HFC-134a Refrigerant	9002	6-72930
Air Conditioner System Service	9003	6-72940
Removal and Installation of Air Conditioning and Heater Components	9004	6-72950
Loader	9006	6-72961
ROPS Cab and ROPS Canopy	9007	6-72970
Cab Glass Installation	9010	6-72980
Electrical Schematic Foldouts and Hydraulic Schematic Foldout	In Rear Pocket	6-72431

NOTE: New Holland Construction LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com