

# SERVICE MANUAL


**T3.50F / T3.55F / T3.65F / T3.75F**  
Tractor

Part number 47977155

English

February 2016



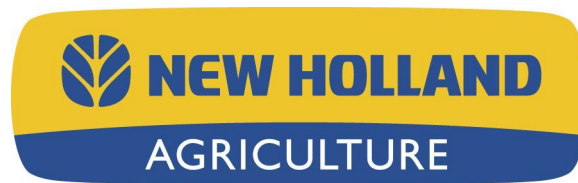

# **SERVICE MANUAL**

**T3.50F**

**T3.55F**

**T3.65F**

**T3.75F**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.106] Valve drive and gears .....	10.2
[10.101] Cylinder heads .....	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.218] Fuel injection system .....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.304] Engine lubrication system.....	10.9
Clutch .....	18
[18.110] Clutch and components .....	18.1
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.160] Creeper .....	21.3
[21.120] Gearbox .....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.101] Mechanical control .....	23.1
[23.202] Electro-hydraulic control .....	23.2
[23.314] Drive shaft.....	23.3
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.300] Rear hydrostatic transmission.....	29.1
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control.....	31.1
[31.225] Clutches.....	31.2
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes.....	33.1
[33.110] Parking brake or parking lock.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems</b> .....	<b>35</b>
[35.525] Auxiliary hydraulic valves and lines.....	35.1
[35.162] Front hitch cylinders and lines.....	35.2
[35.100] Main lift system.....	35.3
<b>Steering</b> .....	<b>41</b>
[41.101] Steering control.....	41.1
[41.216] Cylinders.....	41.2
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5

[55.013] Engine oil system .....	55.6
[55.024] Transmission control system .....	55.7
[55.512] Cab controls.....	55.8
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.110] Operator platform less cab .....	90.1

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)