

SERVICE MANUAL

T3010 / T3020 / T3030 T3040


Tractors

Print No. 84183229B





NEW HOLLAND

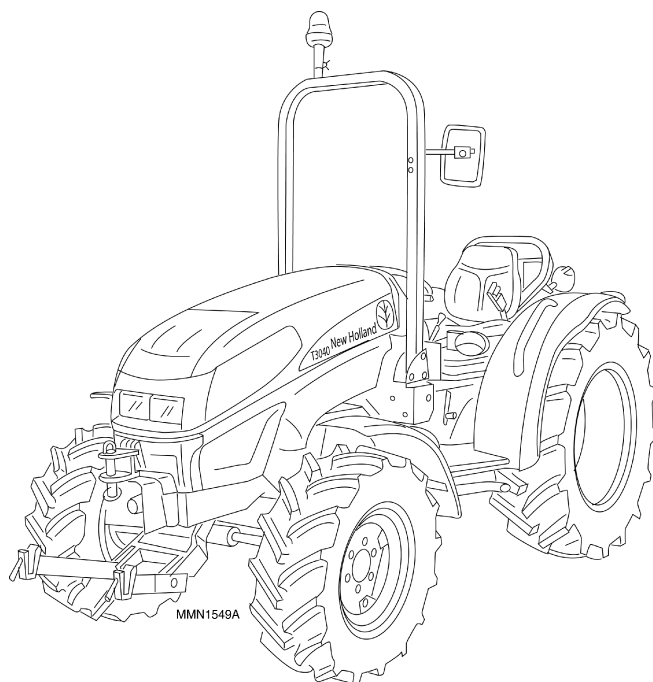

T3010 - T3020 - T3030 - T3040

SERVICE MANUAL

SECTIONS	
SECTION GENERAL GUIDELINES	00
SECTION ENGINE	10
SECTION CLUTCH	18
SECTION TRANSMISSIONS	21
SECTION FRONT MECHANICAL TRANSMISSION	25
SECTION REAR MECHANICAL TRANSMISSION	27
SECTION POWER TAKE-OFF	31
SECTION BRAKES	33
SECTION HYDRAULIC SYSTEMS	35
SECTION STEERING	41
SECTION CAB AIR CONDITIONING SYSTEM	50
SECTION ELECTRICAL SYSTEM	55
SECTION CAB	90

T E C H N I C A L S U P P O R T

CONTENTS

	Page	Date		Page	Date
00 - GENERAL GUIDELINES			T3040 Engine removal-in-		
General instructions	1-2	01-09	stallation	35-36-37-38-39	01-09
Safety regulations	3-4	01-09	EGR system	40-41-42-43-44	01-09
Safety regulations	5	01-09	Inspecting and cleaning		
Tractor refuelling	6	01-09	EGR system components .	44-45-46	01-09
			For Safe Installation	46	01-09
10 - ENGINE			Compression test	47-48-49	01-09
CHAPTER 1 - Engine			Engine disassembly-as-		
Index	1-2	01-09	sembly	50-51-52-53-54-55-56-57-58-59-60-61-62-63-64-65-66-67	01-09
General specifications	3-4-5-6-7-8	01-09	Valve clearance adjustment	68-69-70	01-09
Engine lubrication circuit			Belt tension check	71	01-09
data	9	01-09	Injectors and injection jet		
Engine cooling circuit data	9	01-09	pressure check and reading	72-73-74-75	01-09
Torque Values	10	01-09	Injection timing adjustment		
Tools	11	01-09	and check	75-76-77	01-09
Cross-sectional views of			Idle speed regulation (mini-		
engine	12-13	01-09	imum and maximum)	77	01-09
Cross-sectional views of in-			Cooling and radiator system		
jection pump	14-15	01-09	check	77	01-09
Cross-sectional views of			Sensor check	78	01-09
regulator	16	01-09	Checks, measurements		
Cross-sectional views of			and repairs - cylinder head	79-80-81-82-83-84-85	01-09
fuel pump	17	01-09	Checks, measurements		
Cross-sectional views of			and repairs - cylinder block		
cold starting aid	18	01-09	and liners	86-87-88	01-09
Cross-sectional views of			Checks, measurements		
turbocharger	19	01-09	and repairs - rocker arm .	89-90	01-09
Engine lubrication circuit			Checks, measurements		
diagram	20	01-09	and repairs - pistons and	91-92-93-94-95	01-09
Engine cooling circuit dia-			Checks, measurements		
gram	21	01-09	and repairs - connecting rod	95-96-97-98	01-09
Engine fuel circuit diagram	22	01-09			
Troubleshooting	23-24-25-26-27-28-29-30	01-09			
Engine removal-installation	31-32-33-34	01-09			

	Page	Date		Page	Date
Checks, measurements and repairs – camshaft ...	99-100	01-09	Sections	4-5	01-09
Checks, measurements and repairs – crankshaft ..	101-102-103	01-09	Description and operation .	6	01-09
Checks, measurements and repairs – gears	104-105	01-09	Troubleshooting	6-7-8	01-09
Checks, measurements and repairs – oil pump	106-107	01-09	Removal-Installation – rear transmission – gearbox casing	9-10	01-09
Injection Pump			Disassembly-Assembly – transmission-gearbox casing	11-12-13-14-15-16-17-18-19	01-09
Removal-Installation – injection pump	108-109	01-09	Transmission-gearbox casing adjustment	20-21	01-09
Disassembly-Assembly – injection pump	110-111-112-113-114-115-116-117-118-119-120-121-122-123-124-125-126-127-128-129-130	01-09	Disassembly-Assembly – clutch casing	22-23-24-25-26-27	01-09
Plunger			25 - FRONT AXLE MECHANICAL TRANSMISSION		
adjustment	131-132	01-09	CHAPTER 1 - Front axle mechanical transmission		
Turbocharger			Specifications	2	01-09
Disassembly- Assembly ..	133-134-135-136-137	01-09	Tools	2	01-09
18 - CLUTCH			Torque settings	3	01-09
General specifications	1	01-09	Sections	4-5-6	01-09
Torque settings	1	01-09	Description and Operation	7	01-09
Tools	2	01-09	Troubleshooting	8	01-09
Sections	3	01-09	Removal-Installation – front axle	9-10	01-09
Troubleshooting	4-5	01-09	Removal-Installation – front axle differential and bevel drive support	11-12	01-09
Removal-Installation – clutch	6-7-8-9-10-11-12-13-14-15-16-17-18	01-09	Overhaul – front axle bevel drive	13-14	01-09
Clutch adjustments	19	01-09	Adjustments – bevel drive	14-15-16-17-18	01-09
PTO clutch lever adjustment	20	01-09	Disassembly-Assembly – front differential lock device	19-20	01-09
21 - TRANSMISSIONS			Disassembly-Assembly – wheel hub	21-22	01-09
CHAPTER 1 - Mechanical transmission (12 + 12) and (16 + 16)			Removal-Installation – front reduction unit	23-24	01-09
Specifications	1-2	01-09	Disassembly-Assembly – front reduction unit	25-26-27-28-29	01-09
Torque settings	2-3	01-09	Removal-Installation – axle steering cylinder	30-31-32	01-09

	Page	Date
27 - REAR MECHANICAL TRANSMISSION		
Specifications	1	01-09
Torque settings	2-3	01-09
Tools	4	01-09
Sections	5-6	01-09
Description and Operation	7	01-09
Troubleshooting	7-8	01-09
Disassembly-Assembly - transmission-gearbox casing	9-10	01-09
Removal-Installation - right or left-hand final drive casing assembly	11-12-13-14-15-16	01-09
Disassembly-Assembly - drive wheel shaft.	17-18-19	01-09
Bevel drive adjustments ..	20-21-22-23-24	01-09

31 - MECHANICAL POWER TAKE-OFF

CHAPTER 1 - Mechanical power take-off

Specifications	1	01-09
Torque settings	2	01-09
Sections	3	01-09
Description and Operation	4-5-6	01-09
Troubleshooting	6-7	01-09
Disassembly-Assembly - mechanical power take-off	8-9-10	01-09

33 - BRAKES

Specifications	1	01-09
Torque settings	2	01-09
Sections	3	01-09
Description and Operation	4	01-09
Troubleshooting	5-6	01-09
Removal-Installation - right or left-hand brake	7-8	01-09
Adjustments	9-10-11	01-09

35 - HYDRAULIC SYSTEMS

CHAPTER 1 - Rear mechanical hydraulic lift

Tools	1	01-09
Specifications and data ...	2	01-09

Hydraulic circuit diagram .	3	01-09
Using the control levers ..	4	01-09
Description and Operation	5-6-7-8-9-10-11-12	01-09
Check internal cap measurement	13	01-09
Check assembly of reaction springs	14	01-09
Removal-Installation of the hydraulic lift control valve .	15	01-09
Removal-Installation of the hydraulic lift	16	01-09
Hydraulic lift working pressure check	17	01-09

CHAPTER 2 - Open centre system auxiliary control valves

Specifications	1	01-09
Tools	1	01-09
Sections	2	01-09
Description and Operation	3-4-5-6	01-09

41 - STEERING

CHAPTER 1 - Mechanical power take-off

Specifications	2	01-09
Tools	2	01-09
Cross-sectional and exploded views	3-4	01-09
Description and Operation	5-6-7-8-9-10	01-09
Working pressure check ..	11	01-09

50 - CAB AIR-CONDITIONING SYSTEM

CHAPTER 1 - Cab air-conditioning system

Safety regulations	2	01-09
Operating instructions	3	01-09
Tools	4	01-09
General specifications	4	01-09
Operating principles	5	01-09
Conditioning system components	6-7-8-9-10	01-09
Cab controls	11-12-13-14-15	01-09
Testing operation and cooling	16-17	01-09

	Page	Date		Page	Date
Air conditioning system maintenance	18-19	01-09	Senders, Sensors and Switches	5-6-7-8-9-10-11	01-09
Troubleshooting	20-21-22-23	01-09	Instrument error indicator diagnostics table	12-13-14-15	01-09
Refrigerant recovery - recycling and evacuation - charging stations	24	01-09	Service	16	01-09
Checking for and eliminating any gas leaks	25-26	01-09	CHAPTER 2 - Components		
Compressor drive belt tension adjustment	27	01-09	Description of components	1-2-3	01-09
Cab heating/air-conditioning system. Removal - Installation	28-29-30-31-32-33	01-09	Service	4-5-6	01-09
50 - CAB AIR-CONDITIONING SYSTEM			CHAPTER 3 - Starting System		
CHAPTER 2 - Cab air-conditioning system (valid from chassis no. HSSN19539)			Technical data	1	01-09
Safety regulations	2	09-11	Description and Operation	2	01-09
Operating instructions	3	09-11	Troubleshooting	3-4	01-09
Tools	4	09-11	System testing	5-6	01-09
General specifications	4	09-11	Removal-Installation - starter motor	7	01-09
Operating principles	5	09-11	CHAPTER 4 - Charging system		
Conditioning system components	6-7-8-9-10	09-11	Technical data	1	01-09
Cab controls	11-12-13-14-15	09-11	Description and Operation	2-3	01-09
Testing operation and cooling	16-17	09-11	System testing and troubleshooting	4-5-6-7	01-09
Air conditioning system maintenance	18-19	09-11	Removal-Installation - alternator	8	01-09
Troubleshooting	20-21-22-23	09-11	CHAPTER 5 - Battery		
Refrigerant recovery-recycling and evacuation-charging stations	24	09-11	Technical data	1	01-09
Checking for and eliminating any gas leaks	25-26	09-11	Description and Operation	1	01-09
Compressor drive belt tension adjustment	27	09-11	Removal-Installation - battery	2	01-09
Cab heating/air-conditioning system. Removal - Installation	28-29-30-31-32-33-34	09-11	Battery checking and maintenance	3	01-09
55 - ELECTRICAL SYSTEM			Battery charging	4-5-6	01-09
CHAPTER 1 - Instruments			Battery troubleshooting ...	6	01-09
Analogue instrumentation .	1-2-3-4	01-09	CHAPTER 6 - Electrical circuits (models T3010-T3020-T3030)		
			Index	1	01-09
			Electrical circuits components	2-3-4	01-09
			Location of main connections and fuse box.	5	01-09
			Location of fuses and relays	6-7-8-9-10	01-09
			Symbols and colour codes	9-10	01-09

	Page	Date
Main wiring and electrical circuits	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	01-09 01-09 01-09 01-09 01-09 01-09 09-11

CHAPTER 7 - Electrical circuits (model T3040)

Index	1	01-09
Electrical circuit components	2-3-4	01-09
Location of main connections and fuse box	5-	01-09
Location of fuses and relays	6-7-8	01-09
Symbols and colour codes	9-10	01-09
Main wiring and electrical circuits	11-12-13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28-29-30	01-09 01-09 01-09 01-09 01-09 01-09 01-09 01-09 09-11

CHAPTER 8 - Cab electrical components

Index	1	01-09
Cab controls	2-3-4	01-09
Fuses and relays	5-6	01-09
Air-conditioner controls ..	7	01-09
Components outside the cab	8-9-10	01-09
Electrical circuits components	11	01-09

	Page	Date
Location of components ..	13-14	01-09
Symbols and codes	15-16	01-09
Air-conditioner - radio - window-washer circuit ...	18-19-20-21-22-23-24-25	01-09
Work lights - rotating beacon - internal lighting - rear window wiper circuit	26-27-28-29-30-31-32	01-09

CHAPTER 9 - Wiring Harnesses and Connectors

Index	1	01-09
Electrical circuit components	2-3-4-5	01-09
Harnesses	6-7-8-9	01-09
List of connectors	10-11-12-13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28-29-30-31-32-33-34-35-36-37-38-39-40-41-42	01-09

	Page	Date
CHAPTER 10 - Cab electrical components (from chassis no. HSSN19539)		
Contents	1	09-11
Cab controls	2-3-4	09-11
Fuses and relays	4-5	09-11
Air-conditioner controls ..	6	09-11
Components outside the cab	7-8-9	09-11
Electrical circuits compo- nents	10	09-11
Location of components ..	11-12	09-11
Symbols and codes	13-14-15	09-11
Work lights circuit - internal lighting - windshield wa- shers (Diagram A)	16-17	09-11
Air-conditioner - radio - windshield wiper circuit ...	18-19	09-11
Connectors	21-22-23- 24-25-26- 27-28-29- 30	09-11

	Page	Date
90 - PLATFORM, CAB, BODYWORK		
Hood. Removal - Installa- tion	2	01-09
Right/left-hand side panels. Removal - Installation	3	01-09
Instrument panel lower guard. Removal - Installa- tion	4-5	01-09
Cab assembly with platform. Removal - Installation	6-7-8-9- 10-11-12- 13-14	01-09
Replacing windows (up to and excluding chassis no. HSSN19539)	15-16-17- 18-19-20	01-09
Replacing windows (from chassis HSSN19539 on- wards)	21-22-23- 24-25-26	09-11

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com