

SERVICE MANUAL

T4.75F / T4.85F / T4.95F / T4.105F
T4.75LP / T4.85LP / T4.95LP / T4.105LP
Tractor

Part number 47888360

English

July 2016





SERVICE MANUAL

**T4.105F With cab [ZDJD11527 -], T4.105F Without cab [ZDJD11911 -],
T4.105LP With cab [ZFJD00717 -], T4.105LP Without cab [ZEJD00007 -
], T4.75F With cab [ZDJD10166 -], T4.75F Without cab [ZDJD10836 -],
T4.75LP With cab [ZFJD01559 -], T4.75LP Without cab [ZFJD01319 -],
T4.85F With cab [ZDJD11099 -], T4.85F Without cab [ZDJD11022 -], T4.85LP
With cab [ZFJD01714 -], T4.85LP Without cab [ZFJD00163 -], T4.95F With
cab [ZDJD10640 -], T4.95F Without cab [ZDJD10215 -], T4.95LP With cab
[ZFJD01191 -], T4.95LP Without cab [ZFJD00162 -]**

Link Product / Engine

Product	Market Product	Engine
T4.105F With cab [ZDJD11527 -]	Middle East Africa	F4CE9484
T4.105F With cab [ZDJD11527 -]	Europe	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Middle East Africa	F4CE9484
T4.105F Without cab [ZDJD11911 -]	Europe	F4CE9484
T4.75F With cab [ZDJD10166 -]	Europe	F5AE9484B
T4.75F With cab [ZDJD10166 -]	Middle East Africa	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Europe	F5AE9484B
T4.75F Without cab [ZDJD10836 -]	Middle East Africa	F5AE9484B
T4.85F With cab [ZDJD11099 -]	Middle East Africa	F5AE9484G
T4.85F With cab [ZDJD11099 -]	Europe	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Europe	F5AE9484G
T4.85F Without cab [ZDJD11022 -]	Middle East Africa	F5AE9484G
T4.95F With cab [ZDJD10640 -]	Middle East Africa	F4CE9484
T4.95F With cab [ZDJD10640 -]	Europe	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Europe	F4CE9484
T4.95F Without cab [ZDJD10215 -]	Middle East Africa	F4CE9484
T4.105LP With cab [ZFJD00717 -]	Middle East Africa	F4CE9484
T4.105LP With cab [ZFJD00717 -]	Europe	F4CE9484
T4.105LP Without cab [ZEJD00007 -]	Middle East Africa	F4CE9484
T4.105LP Without cab [ZEJD00007 -]	Europe	F4CE9484
T4.75LP With cab [ZFJD01559 -]	Europe	F5AE9484B
T4.75LP With cab [ZFJD01559 -]	Middle East Africa	F5AE9484B
T4.75LP Without cab [ZFJD01319 -]	Europe	F5AE9484B
T4.75LP Without cab [ZFJD01319 -]	Middle East Africa	F5AE9484B
T4.85LP With cab [ZFJD01714 -]	Europe	F5AE9484G
T4.85LP With cab [ZFJD01714 -]	Middle East Africa	F5AE9484G
T4.85LP Without cab [ZFJD00163 -]	Europe	F5AE9484G
T4.85LP Without cab [ZFJD00163 -]	Middle East Africa	F5AE9484G
T4.95LP With cab [ZFJD01191 -]	Europe	F4CE9484
T4.95LP With cab [ZFJD01191 -]	Middle East Africa	F4CE9484
T4.95LP Without cab [ZFJD00162 -]	Middle East Africa	F4CE9484
T4.95LP Without cab [ZFJD00162 -]	Europe	F4CE9484

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
[18.100] Clutch mechanical release control	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.118] Transmission/Rear drive	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.160] Creeper	21.7
[21.162] Reverser	21.8
[21.168] Hi-Lo unit.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO)	31
[31.101] Rear mechanical control.....	31.1
[31.146] Front Power Take-Off (PTO).....	31.2
Brakes and controls	33
[33.202] Hydraulic service brakes.....	33.1
[33.110] Parking brake or parking lock.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.204] Remote control valves.....	35.4
[35.600] High flow hydraulics.....	35.5
[35.100] Main lift system.....	35.6
[35.114] Three-point hitch control valve.....	35.7
[35.116] Three-point hitch cylinder.....	35.8
[35.160] Front hitch controls and lines.....	35.9
[35.410] Header or attachment height system.....	35.10
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch.....	37.1
[37.162] Front hitch.....	37.2
Steering	41
[41.101] Steering control.....	41.1

[41.200] Hydraulic control components.....	41.2
Wheels.....	44
[44.511] Front wheels.....	44.1
Cab climate control.....	50
[50.100] Heating.....	50.1
[50.104] Ventilation.....	50.2
[50.200] Air conditioning.....	50.3
Electrical systems.....	55
[55.000] Electrical system.....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.202] Cold start aid.....	55.6
[55.640] Electronic modules.....	55.7
[55.048] Rear Power Take-Off (PTO) control system.....	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.9
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.10
[55.523] Cab hitch controls.....	55.11
[55.130] Rear three-point hitch electronic control system.....	55.12
[55.518] Wiper and washer system.....	55.13
[55.404] External lighting.....	55.14
[55.514] Cab lighting.....	55.15
[55.511] Light harnesses.....	55.16
[55.408] Warning indicators, alarms, and instruments.....	55.17
[55.DTC] FAULT CODES.....	55.18
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1

[90.151] Cab interior..... 90.2
[90.154] Cab doors and hatches 90.3
[90.160] Cab interior trim and panels..... 90.4

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com