

# SERVICE MANUAL

**T4.75N / T4.85N / T4.95N**  
**T4.105N / T4.65V / T4.75V**  
**T4.85V / T4.95V / T4.105V**  
Tractor

Part number 47888373

English  
July 2016





## **SERVICE MANUAL**

**T4.105N With cab [ZDJE16586 - ], T4.105N Without cab [ZDJE18360 - ], T4.105V With cab [ZDJE17896 - ], T4.105V Without cab [ZDJE13827 - ], T4.65V With cab [ZDJE10473 - ], T4.65V Without cab [ZDJE11549 - ], T4.75N With cab [ZDJE10131 - ], T4.75N Without cab [ZDJE11495 - ], T4.75V With cab [ZDJE10095 - ], T4.75V Without cab [ZDJE11310 - ], T4.85N With cab [ZDJE09941 - ], T4.85N Without cab [ZDJE12418 - ], T4.85V With cab [ZDJE11669 - ], T4.85V Without cab [ZDJE10317 - ], T4.95N With cab [ZDJE10238 - ], T4.95N Without cab [ZDJE12231 - ], T4.95V With cab [ZDJE11682 - ], T4.95V Without cab [ZDJE11554 - ]**

## Link Product / Engine

Product	Market Product	Engine
T4.105N With cab [ZDJE16586 - ]	Australia New Zealand	F4CE9484
T4.105N With cab [ZDJE16586 - ]	Europe	F4CE9484
T4.105N With cab [ZDJE16586 - ]	Middle East Africa	F4CE9484
T4.105N With cab [ZDJE16586 - ]	Asia Pacific	F4CE9484
T4.105N Without cab [ZDJE18360 - ]	Australia New Zealand	F4CE9484
T4.105N Without cab [ZDJE18360 - ]	Asia Pacific	F4CE9484
T4.105N Without cab [ZDJE18360 - ]	Middle East Africa	F4CE9484
T4.105N Without cab [ZDJE18360 - ]	Europe	F4CE9484
T4.75N With cab [ZDJE10131 - ]	Australia New Zealand	F5AE9484B
T4.75N With cab [ZDJE10131 - ]	Asia Pacific	F5AE9484B
T4.75N With cab [ZDJE10131 - ]	Middle East Africa	F5AE9484B
T4.75N With cab [ZDJE10131 - ]	Europe	F5AE9484B
T4.75N Without cab [ZDJE11495 - ]	Australia New Zealand	F5AE9484B
T4.75N Without cab [ZDJE11495 - ]	Middle East Africa	F5AE9484B
T4.75N Without cab [ZDJE11495 - ]	Europe	F5AE9484B
T4.75N Without cab [ZDJE11495 - ]	Asia Pacific	F5AE9484B
T4.85N With cab [ZDJE09941 - ]	Europe	F5AE9484G
T4.85N With cab [ZDJE09941 - ]	Middle East Africa	F5AE9484G
T4.85N With cab [ZDJE09941 - ]	Asia Pacific	F5AE9484G
T4.85N With cab [ZDJE09941 - ]	Australia New Zealand	F5AE9484G
T4.85N Without cab [ZDJE12418 - ]	Asia Pacific	F5AE9484G
T4.85N Without cab [ZDJE12418 - ]	Australia New Zealand	F5AE9484G
T4.85N Without cab [ZDJE12418 - ]	Middle East Africa	F5AE9484G
T4.85N Without cab [ZDJE12418 - ]	Europe	F5AE9484G
T4.95N With cab [ZDJE10238 - ]	Middle East Africa	F4CE9484
T4.95N With cab [ZDJE10238 - ]	Asia Pacific	F4CE9484
T4.95N With cab [ZDJE10238 - ]	Australia New Zealand	F4CE9484
T4.95N With cab [ZDJE10238 - ]	Europe	F4CE9484
T4.95N Without cab [ZDJE12231 - ]	Middle East Africa	F4CE9484
T4.95N Without cab [ZDJE12231 - ]	Europe	F4CE9484
T4.95N Without cab [ZDJE12231 - ]	Asia Pacific	F4CE9484
T4.95N Without cab [ZDJE12231 - ]	Australia New Zealand	F4CE9484
T4.105V With cab [ZDJE17896 - ]	Asia Pacific	F4CE9484

Product	Market Product	Engine
T4.105V With cab [ZDJE17896 - ]	Middle East Africa	F4CE9484
T4.105V With cab [ZDJE17896 - ]	Australia New Zealand	F4CE9484
T4.105V With cab [ZDJE17896 - ]	Europe	F4CE9484
T4.105V Without cab [ZDJE13827 - ]	Middle East Africa	F4CE9484
T4.105V Without cab [ZDJE13827 - ]	Australia New Zealand	F4CE9484
T4.105V Without cab [ZDJE13827 - ]	Europe	F4CE9484
T4.105V Without cab [ZDJE13827 - ]	Asia Pacific	F4CE9484
T4.65V With cab [ZDJE10473 - ]	Australia New Zealand	F5AE9484A
T4.65V With cab [ZDJE10473 - ]	Middle East Africa	F5AE9484A
T4.65V With cab [ZDJE10473 - ]	Asia Pacific	F5AE9484A
T4.65V With cab [ZDJE10473 - ]	Europe	F5AE9484A
T4.65V Without cab [ZDJE11549 - ]	Middle East Africa	F5AE9484A
T4.65V Without cab [ZDJE11549 - ]	Asia Pacific	F5AE9484A
T4.65V Without cab [ZDJE11549 - ]	Europe	F5AE9484A
T4.65V Without cab [ZDJE11549 - ]	Australia New Zealand	F5AE9484A
T4.75V With cab [ZDJE10095 - ]	Asia Pacific	F5AE9484B
T4.75V With cab [ZDJE10095 - ]	Europe	F5AE9484B
T4.75V With cab [ZDJE10095 - ]	Australia New Zealand	F5AE9484B
T4.75V With cab [ZDJE10095 - ]	Middle East Africa	F5AE9484B
T4.75V Without cab [ZDJE11310 - ]	Middle East Africa	F5AE9484B
T4.75V Without cab [ZDJE11310 - ]	Asia Pacific	F5AE9484B
T4.75V Without cab [ZDJE11310 - ]	Australia New Zealand	F5AE9484B
T4.75V Without cab [ZDJE11310 - ]	Europe	F5AE9484B
T4.85V With cab [ZDJE11669 - ]	Middle East Africa	F5AE9484G
T4.85V With cab [ZDJE11669 - ]	Australia New Zealand	F5AE9484G
T4.85V With cab [ZDJE11669 - ]	Europe	F5AE9484G
T4.85V With cab [ZDJE11669 - ]	Asia Pacific	F5AE9484G
T4.85V Without cab [ZDJE10317 - ]	Middle East Africa	F5AE9484G
T4.85V Without cab [ZDJE10317 - ]	Europe	F5AE9484G
T4.85V Without cab [ZDJE10317 - ]	Asia Pacific	F5AE9484G
T4.85V Without cab [ZDJE10317 - ]	Australia New Zealand	F5AE9484G
T4.95V With cab [ZDJE11682 - ]	Australia New Zealand	F4CE9484
T4.95V With cab [ZDJE11682 - ]	Europe	F4CE9484
T4.95V With cab [ZDJE11682 - ]	Middle East Africa	F4CE9484
T4.95V With cab [ZDJE11682 - ]	Asia Pacific	F4CE9484

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T4.95V Without cab [ZDJE11554 - ]	Asia Pacific	F4CE9484
T4.95V Without cab [ZDJE11554 - ]	Europe	F4CE9484
T4.95V Without cab [ZDJE11554 - ]	Middle East Africa	F4CE9484
T4.95V Without cab [ZDJE11554 - ]	Australia New Zealand	F4CE9484

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
Clutch .....	18
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
Transmission.....	21
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.145] Gearbox internal components.....	21.7
[21.160] Creeper .....	21.8
[21.162] Reverser .....	21.9
[21.168] Hi-Lo unit.....	21.10
[21.182] Differential.....	21.11
Four-Wheel Drive (4WD) system .....	23
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.1
[23.314] Drive shaft.....	23.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3

[25.122] Axle suspension control .....	25.4
[25.310] Final drives .....	25.5
[25.400] Non-powered front axle .....	25.6
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential .....	27.2
[27.120] Planetary and final drives .....	27.3
[27.126] Spur gear and final drives .....	27.4
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.146] Front Power Take-Off (PTO) .....	31.2
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
<b>Hydraulic systems.....</b>	<b>35</b>
[35.160] Front hitch controls and lines .....	35.1
[35.000] Hydraulic systems.....	35.2
[35.300] Reservoir, cooler, and filters.....	35.3
[35.104] Fixed displacement pump.....	35.4
[35.204] Remote control valves .....	35.5
[35.600] High flow hydraulics .....	35.6
[35.100] Main lift system.....	35.7
[35.114] Three-point hitch control valve .....	35.8
[35.116] Three-point hitch cylinder .....	35.9
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
[37.108] Rear three-point hitch external controls .....	37.2

[37.162] Front hitch .....	37.3
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors.....	55.2
[55.201] Engine starting system.....	55.3
[55.301] Alternator.....	55.4
[55.302] Battery.....	55.5
[55.202] Cold start aid .....	55.6
[55.640] Electronic modules .....	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.9
[55.047] Steering control system .....	55.10
[55.523] Cab hitch controls .....	55.11
[55.130] Rear three-point hitch electronic control system .....	55.12
[55.404] External lighting .....	55.13
[55.514] Cab lighting .....	55.14
[55.511] Light harnesses .....	55.15
[55.408] Warning indicators, alarms, and instruments .....	55.16
[55.DTC] FAULT CODES.....	55.17



Platform, cab, bodywork, and decals ..... 90

[90.110] Operator platform less cab ..... 90.1

[90.114] Operator protections ..... 90.2

[90.150] Cab..... 90.3

[90.151] Cab interior..... 90.4

[90.154] Cab doors and hatches ..... 90.5

[90.100] Engine hood and panels ..... 90.6

[90.102] Engine shields, hood latches, and trims ..... 90.7

[90.160] Cab interior trim and panels..... 90.8

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)