

SERVICE MANUAL

T4.80V
T4.90V
T4.100V
T4.110V
T4.80N
T4.90N
T4.100N
T4.110N
Tractor

PIN ZGLJ04271 and above

Part number 51523366

English
August 2018





SERVICE MANUAL

**T4.100N With cab [ZHLJ01382 -], T4.100N Without cab [ZHLJ01816 -],
T4.100V With cab [ZHLJ00619 -], T4.100V Without cab, T4.110N With
cab [ZHLJ01217 -], T4.110N Without cab [ZHLJ02312 -], T4.110V With
cab [ZHLJ01709 -], T4.110V Without cab [ZHLJ01680 -], T4.80N With
cab [ZHLJ02071 -], T4.80N Without cab [ZHLJ01960 -], T4.80V With cab
[ZGLJ04271 -], T4.80V Without cab [ZHLJ02720 -], T4.90N With cab
[ZHLJ01597 -], T4.90N Without cab [ZHLJ01779 -], T4.90V With cab
[ZHLJ00171 -], T4.90V Without cab [ZHLJ03996 -]**

Link Product / Engine

Product	Market Product	Engine
T4.100N With cab [ZHLJ01382 -]	Australia New Zealand	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 -]	Europe	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 -]	Asia Pacific	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 -]	Middle East Africa	F5DFL413K*C001
T4.100N With cab [ZHLJ01382 -]	Latin America	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 -]	Asia Pacific	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 -]	Australia New Zealand	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 -]	Latin America	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 -]	Europe	F5DFL413K*C001
T4.100N Without cab [ZHLJ01816 -]	Middle East Africa	F5DFL413K*C001
T4.110N With cab [ZHLJ01217 -]	Australia New Zealand	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 -]	Europe	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 -]	Asia Pacific	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 -]	Middle East Africa	F5DFL413J*C002
T4.110N With cab [ZHLJ01217 -]	Latin America	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 -]	Middle East Africa	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 -]	Australia New Zealand	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 -]	Europe	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 -]	Asia Pacific	F5DFL413J*C002
T4.110N Without cab [ZHLJ02312 -]	Latin America	F5DFL413J*C002
T4.80N With cab [ZHLJ02071 -]	Latin America	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 -]	Australia New Zealand	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 -]	Middle East Africa	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 -]	Europe	F5DFL413B*H001
T4.80N With cab [ZHLJ02071 -]	Asia Pacific	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 -]	Australia New Zealand	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 -]	Europe	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 -]	Asia Pacific	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 -]	Latin America	F5DFL413B*H001
T4.80N Without cab [ZHLJ01960 -]	Middle East Africa	F5DFL413B*H001
T4.90N With cab [ZHLJ01597 -]	Australia New Zealand	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 -]	Europe	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 -]	Middle East Africa	F5DFL413L*C001
T4.90N With cab [ZHLJ01597 -]	Latin America	F5DFL413L*C001

Product	Market Product	Engine
T4.90N With cab [ZHLJ01597 -]	Asia Pacific	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 -]	Australia New Zealand	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 -]	Asia Pacific	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 -]	Europe	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 -]	Middle East Africa	F5DFL413L*C001
T4.90N Without cab [ZHLJ01779 -]	Latin America	F5DFL413L*C001
T4.100V With cab [ZHLJ00619 -]	Australia New Zealand	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 -]	Latin America	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 -]	Asia Pacific	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 -]	Middle East Africa	F5DFL413K*C001
T4.100V With cab [ZHLJ00619 -]	Europe	F5DFL413K*C001
T4.100V Without cab	Australia New Zealand	F5DFL413K*C001
T4.100V Without cab	Asia Pacific	F5DFL413K*C001
T4.100V Without cab	Europe	F5DFL413K*C001
T4.100V Without cab	Middle East Africa	F5DFL413K*C001
T4.100V Without cab	Latin America	F5DFL413K*C001
T4.110V With cab [ZHLJ01709 -]	Latin America	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 -]	Asia Pacific	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 -]	Australia New Zealand	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 -]	Middle East Africa	F5DFL413J*C002
T4.110V With cab [ZHLJ01709 -]	Europe	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 -]	Australia New Zealand	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 -]	Asia Pacific	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 -]	Latin America	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 -]	Middle East Africa	F5DFL413J*C002
T4.110V Without cab [ZHLJ01680 -]	Europe	F5DFL413J*C002
T4.80V With cab [ZGLJ04271 -]	Australia New Zealand	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 -]	Middle East Africa	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 -]	Asia Pacific	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 -]	Latin America	F5DFL413B*H001
T4.80V With cab [ZGLJ04271 -]	Europe	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 -]	Europe	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 -]	Latin America	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 -]	Asia Pacific	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 -]	Australia New Zealand	F5DFL413B*H001
T4.80V Without cab [ZHLJ02720 -]	Middle East Africa	F5DFL413B*H001
T4.90V With cab [ZHLJ00171 -]	Middle East Africa	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 -]	Latin America	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 -]	Australia New Zealand	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 -]	Europe	F5DFL413L*C001
T4.90V With cab [ZHLJ00171 -]	Asia Pacific	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 -]	Europe	F5DFL413L*C001
T4.90V Without cab [ZHLJ03996 -]	Latin America	F5DFL413L*C001

Product		Market Product	Engine
T4.90V Without cab	[ZHLJ03996 -]	Asia Pacific	F5DFL413L*C001
T4.90V Without cab	[ZHLJ03996 -]	Middle East Africa	F5DFL413L*C001
T4.90V Without cab	[ZHLJ03996 -]	Australia New Zealand	F5DFL413L*C001

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.202] Air cleaners and lines	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.310] Aftercooler.....	10.10
[10.304] Engine lubrication system.....	10.11
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components.....	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8
[21.160] Creeper	21.9

[21.162] Reverser	21.10
[21.168] Hi-Lo unit	21.11
[21.109] Transmission cooler and lines.....	21.12
[21.118] Transmission/Rear drive	21.13
[21.182] Differential.....	21.14
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.142] Front Power Take-Off (PTO) control	31.2
[31.146] Front Power Take-Off (PTO)	31.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2

[33.220] Trailer brake hydraulic control.....	33.3
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.204] Remote control valves	35.3
[35.100] Main lift system.....	35.4
[35.114] Three-point hitch control valve	35.5
[35.124] Three-point hitch hydraulic adjustment	35.6
[35.160] Front hitch controls and lines	35.7
[35.162] Front hitch cylinders and lines	35.8
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.166] Front hitch linkage.....	37.3
[37.110] Rear three-point hitch	37.4
Frames and ballasting	39
[39.140] Ballasts and supports	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.216] Cylinders	41.3
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3

[50.300] Cab pressurizing system	50.4
Electrical systems	55
[55.100] Harnesses and connectors	55.1
[55.525] Cab engine controls	55.2
[55.015] Engine control system	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator	55.5
[55.302] Battery	55.6
[55.011] Fuel tank system	55.7
[55.010] Fuel injection system	55.8
[55.014] Engine intake and exhaust system	55.9
[55.989] Exhaust Gas Recirculation (EGR) electrical system	55.10
[55.640] Electronic modules	55.11
[55.513] Cab transmission controls	55.12
[55.024] Transmission control system	55.13
[55.021] Transmission pressure sensors and switches	55.14
[55.541] Cab Front-Wheel Drive (FWD) controls	55.15
[55.040] Four-Wheel Drive (4WD) control system	55.16
[55.542] Cab axle controls	55.17
[55.522] Cab Power Take-Off (PTO) controls	55.18
[55.048] Rear Power Take-Off (PTO) control system	55.19
[55.049] Front Power Take-Off (PTO) control system	55.20
[55.031] Parking brake electrical system	55.21
[55.032] Trailer brake electrical system	55.22
[55.512] Cab controls	55.23
[55.035] Remote control valve electric control	55.24
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.25
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.26

[55.523] Cab hitch controls	55.27
[55.130] Rear three-point hitch electronic control system	55.28
[55.518] Wiper and washer system.....	55.29
[55.404] External lighting	55.30
[55.405] External lighting switches and relays	55.31
[55.514] Cab lighting	55.32
[55.408] Warning indicators, alarms, and instruments	55.33
[55.DTC] FAULT CODES.....	55.34
Accessories	88
[88.100] Accessories	88.1
Platform, cab, bodywork, and decals.....	90
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches	90.4
[90.110] Operator platform less cab	90.5
[90.118] Protections and footboards.....	90.6
[90.114] Operator protections	90.7
[90.120] Mechanically-adjusted operator seat.....	90.8
[90.124] Pneumatically-adjusted operator seat.....	90.9
[90.100] Engine hood and panels	90.10

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com