

# **SERVICE MANUAL**

**T5.100 Electro Command  
T5.110 Electro Command  
T5.120 Electro Command  
Tractor**

Part number 51487926

English  
May 2018



# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.206] Fuel filters .....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.6
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.7
[10.400] Engine cooling system .....	10.8
[10.414] Fan and drive .....	10.9
[10.310] Aftercooler.....	10.10
[10.218] Fuel injection system.....	10.11
Clutch .....	18
[18.100] Clutch mechanical release control .....	18.1
[18.112] Slip clutch or flywheel damper .....	18.2
Transmission.....	21
[21.111] Semi-Powershift transmission .....	21.1
[21.133] Semi-Powershift transmission external controls .....	21.2
[21.103] Semi-Powershift transmission hydraulic components.....	21.3
[21.152] Semi-Powershift transmission internal components .....	21.4
[21.160] Creeper .....	21.5
[21.109] Transmission cooler and lines.....	21.6
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2

<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO) .....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.2
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.3
[31.142] Front Power Take-Off (PTO) control .....	31.4
[31.146] Front Power Take-Off (PTO) .....	31.5
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control .....	33.4
[33.204] Front axle brake.....	33.5
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.304] Combination pump units .....	35.2
[35.322] Regulated/Low pressure system .....	35.3
[35.204] Remote control valves .....	35.4
[35.100] Main lift system.....	35.5
[35.114] Three-point hitch control valve .....	35.6

[35.116] Three-point hitch cylinder .....	35.7
[35.160] Front hitch controls and lines .....	35.8
[35.162] Front hitch cylinders and lines .....	35.9
[35.300] Reservoir, cooler, and filters.....	35.10
[35.350] Safety and main relief valves .....	35.11
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.100] Drawbars and towing hitches .....	37.1
[37.106] Automatic pickup hitch .....	37.2
[37.110] Rear three-point hitch .....	37.3
[37.120] Rear three-point hitch linkage.....	37.4
[37.162] Front hitch .....	37.5
[37.166] Front hitch linkage.....	37.6
<b>Frames and ballasting .....</b>	<b>39</b>
[39.140] Ballasts and supports .....	39.1
<b>Steering.....</b>	<b>41</b>
[41.101] Steering control .....	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders .....	41.4
<b>Wheels .....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning.....	50.3
<b>Electrical systems .....</b>	<b>55</b>

[55.100] Harnesses and connectors.....	55.1
[55.525] Cab engine controls .....	55.2
[55.015] Engine control system.....	55.3
[55.201] Engine starting system.....	55.4
[55.301] Alternator.....	55.5
[55.302] Battery.....	55.6
[55.202] Cold start aid .....	55.7
[55.011] Fuel tank system .....	55.8
[55.010] Fuel injection system.....	55.9
[55.014] Engine intake and exhaust system.....	55.10
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.11
[55.989] Exhaust Gas Recirculation (EGR) electrical system .....	55.12
[55.012] Engine cooling system .....	55.13
[55.013] Engine oil system .....	55.14
[55.640] Electronic modules .....	55.15
[55.513] Cab transmission controls.....	55.16
[55.024] Transmission control system.....	55.17
[55.020] Transmission speed sensors.....	55.18
[55.021] Transmission pressure sensors and switches .....	55.19
[55.022] Transmission temperature sensors .....	55.20
[55.040] Four-Wheel Drive (4WD) control system.....	55.21
[55.045] Front axle control system .....	55.22
[55.046] Rear axle control system.....	55.23
[55.522] Cab Power Take-Off (PTO) controls .....	55.24
[55.048] Rear Power Take-Off (PTO) control system .....	55.25
[55.049] Front Power Take-Off (PTO) control system .....	55.26
[55.519] Cab brake controls .....	55.27
[55.031] Parking brake electrical system .....	55.28
[55.032] Trailer brake electrical system .....	55.29

[55.512] Cab controls.....	55.30
[55.035] Remote control valve electric control .....	55.31
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.32
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.33
[55.523] Cab hitch controls .....	55.34
[55.130] Rear three-point hitch electronic control system .....	55.35
[55.785] Precision farming system .....	55.36
[55.911] Satellite navigation systems.....	55.37
[55.680] Autopilot/Autoguidance .....	55.38
[55.518] Wiper and washer system.....	55.39
[55.404] External lighting .....	55.40
[55.405] External lighting switches and relays .....	55.41
[55.408] Warning indicators, alarms, and instruments .....	55.42
[55.905] ISOBUS components .....	55.43
[55.DTC] FAULT CODES.....	55.44
<b>Front loader and bucket.....</b>	<b>82</b>
[82.100] Arm.....	82.1
<b>Accessories .....</b>	<b>88</b>
[88.100] Accessories .....	88.1
<b>Platform, cab, bodywork, and decals .....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.160] Cab interior trim and panels.....	90.3
[90.154] Cab doors and hatches .....	90.4
[90.156] Cab windshield and windows .....	90.5
[90.118] Protections and footboards.....	90.6
[90.120] Mechanically-adjusted operator seat.....	90.7
[90.124] Pneumatically-adjusted operator seat.....	90.8

[90.100] Engine hood and panels .....	90.9
[90.102] Engine shields, hood latches, and trims .....	90.10
[90.116] Fenders and guards .....	90.11

**Thank you so much for reading.**

**Please click the “Buy Now!”  
button below to download the  
complete manual.**

***Buy Now***



**After you pay.**

**You can download the most  
perfect and complete manual in  
the world immediately.**

**Our support email:**

**ebooklibonline@outlook.com**