

SERVICE MANUAL

**T9.390 / T9.450 / T9.505 /
T9.560 / T9.615 / T9.670**

Tractor

PIN ZCF200001 and above

PIN ZDF200001 and above

Part number 47488219


English

March 2013





SERVICE MANUAL

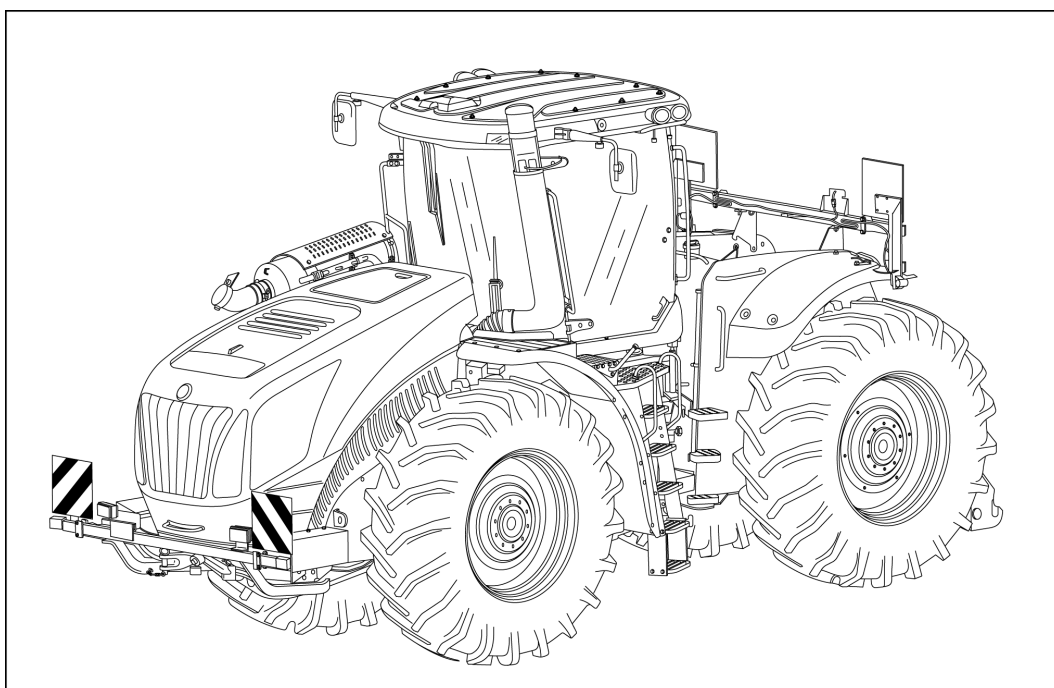

T9.390 [ZCF200001 -] , T9.390 [ZDF200001 -] , T9.450 [ZCF200001 -] , T9.450 [ZDF200001 -] , T9.505 [ZCF200001 -] , T9.505 [ZDF200001 -] , T9.560 [ZCF200001 -] , T9.560 [ZDF200001 -] , T9.615 [ZCF200001 -] , T9.615 [ZDF200001 -] , T9.670 [ZCF200001 -] , T9.670 [ZDF200001 -]

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.202] Air cleaners and lines	10.2
[10.400] Engine cooling system	10.3
[10.414] Fan and drive	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.5
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.310] Final drives	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.220] Gearbox	31.3
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1

[33.202] Hydraulic service brakes	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.105] Charge pump.....	35.3
[35.106] Variable displacement pump	35.4
[35.204] Remote control valves	35.5
[35.220] Auxiliary hydraulic pump and lines	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8
[35.600] High flow hydraulics	35.9
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
Frames and ballasting	39
[39.100] Frame	39.1
[39.110] Drawbar and hitch assembly	39.2
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump	41.3
[41.910] Auxiliary steering	41.4
Wheels	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.104] Ventilation	50.1
[50.200] Air conditioning.....	50.2
[50.300] Cab pressurizing system	50.3

Electrical systems	55
[55.010] Fuel injection system	55.1
[55.014] Engine intake and exhaust system	55.2
[55.024] Transmission control system	55.3
[55.035] Remote control valve electric control	55.4
[55.045] Front axle control system	55.5
[55.046] Rear axle control system	55.6
[55.048] Rear Power Take-Off (PTO) control system	55.7
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.8
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.9
[55.100] Harnesses and connectors	55.10
[55.130] Rear three-point hitch electronic control system	55.11
[55.301] Alternator	55.12
[55.302] Battery	55.13
[55.404] External lighting	55.14
[55.522] Cab Power Take-Off (PTO) controls	55.15
[55.640] Electronic modules	55.16
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.17
[55.DTC] FAULT CODES	55.18
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.102] Engine shields, hood latches, and trims	90.2
[90.124] Pneumatically-adjusted operator seat	90.3
[90.150] Cab	90.4
[90.151] Cab interior	90.5

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com