

# SERVICE MANUAL

**TC5.30 / TC5.30**

Combine

Part number 48068867

1<sup>st</sup> edition English





## **SERVICE MANUAL**

**TC5.30 Combine Without Cab  
TC5.30 Combine with CAB**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.103] Crankshaft and flywheel.....	10.2
[10.216] Fuel tanks .....	10.3
[10.202] Air cleaners and lines .....	10.4
[10.254] Intake and exhaust manifolds and muffler .....	10.5
[10.400] Engine cooling system .....	10.6
[10.418] Rotary screen .....	10.7
[10.450] Engine air compressor .....	10.8
Clutch .....	18
[18.110] Clutch and components .....	18.1
Transmission.....	21
[21.600] Traction variator .....	21.1
[21.114] Mechanical transmission .....	21.2
[21.130] Mechanical transmission external controls.....	21.3
[21.120] Gearbox .....	21.4
[21.145] Gearbox internal components.....	21.5
[21.182] Differential.....	21.6
Front axle system .....	25
[25.310] Final drives .....	25.1
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
Brakes and controls .....	33
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2

<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.359] Main control valve.....	35.3
[35.701] Front loader arm hydraulic system.....	35.4
[35.410] Header or attachment height system.....	35.5
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders.....	41.2
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Cab climate control</b> .....	<b>50</b>
[50.104] Ventilation.....	50.1
[50.200] Air conditioning.....	50.2
<b>Electrical systems</b> .....	<b>55</b>
[55.100] Harnesses and connectors.....	55.1
[55.301] Alternator.....	55.2
[55.302] Battery.....	55.3
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls.....	55.4
[55.518] Wiper and washer system.....	55.5
[55.404] External lighting.....	55.6
[55.408] Warning indicators, alarms, and instruments.....	55.7
<b>Attachments/Headers</b> .....	<b>58</b>
[58.101] Attachment/Header reel.....	58.1
<b>Product feeding</b> .....	<b>60</b>
[60.105] Floating roll, feed chain, and drive.....	60.1
[60.110] Feeder housing.....	60.2

[60.112] Stone trapping system .....	60.3
[60.122] Length-of-cut gearbox.....	60.4
<b>Threshing .....</b>	<b>66</b>
[66.000] Threshing .....	66.1
[66.330] Drum .....	66.2
[66.321] Drum/Rotor variator with electrical control .....	66.3
[66.105] Concave.....	66.4
<b>Separation .....</b>	<b>72</b>
[72.350] Beater .....	72.1
[72.420] Rotary separator .....	72.2
[72.101] Straw walkers and shafts .....	72.3
<b>Cleaning.....</b>	<b>74</b>
[74.000] Cleaning.....	74.1
[74.101] Cleaning drive systems .....	74.2
[74.110] Grain pan.....	74.3
[74.114] Upper shaker shoe .....	74.4
[74.118] Lower shaker shoe .....	74.5
[74.130] Fan housing.....	74.6
[74.136] Fan drive system.....	74.7
[74.140] Tailings return system .....	74.8
<b>Crop storage / Unloading .....</b>	<b>80</b>
[80.101] Clean grain elevator.....	80.1
[80.180] Grain tank unload .....	80.2
<b>Platform, cab, bodywork, and decals.....</b>	<b>90</b>
[90.150] Cab.....	90.1
[90.151] Cab interior.....	90.2
[90.154] Cab doors and hatches .....	90.3

[90.118] Protections and footboards..... 90.4

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)