SERVICE MANUAL

TK4020F / TK4020V / TK4030
TK4030F / TK4030V / TK4040
TK4040M / TK4050 / TK4050M / TK4060
Tractor

Part number 47830952
English
February 2015





SERVICE MANUAL

TK4020F , TK4020V , TK4030F , TK4030V , TK4030 , TK4040M , TK4040 , TK4050M , TK4050 , TK4060

47830952 26/03/2015

Link Product / Engine

Product	Market Product	Engine
TK4020F	Middle East Africa	F5AE9484A
TK4020F	Asia Pacific	F5AE9484A
TK4020F	Europe	F5AE9484A
TK4020F	Australia New Zealand	F5AE9484A
TK4020V	Asia Pacific	F5AE9484A
TK4020V	Australia New Zealand	F5AE9484A
TK4020V	Europe	F5AE9484A
TK4020V	Middle East Africa	F5AE9484A
TK4030	Australia New Zealand	F5AE9484B
TK4030	Middle East Africa	F5AE9484B
TK4030	Asia Pacific	F5AE9484B
TK4030	Europe	F5AE9484B
TK4030F	Middle East Africa	F5AE9484B
TK4030F	Asia Pacific	F5AE9484B
TK4030F	Europe	F5AE9484B
TK4030F	Australia New Zealand	F5AE9484B
TK4030V	Asia Pacific	F5AE9484B
TK4030V	Middle East Africa	F5AE9484B
TK4030V	Europe	F5AE9484B
TK4030V	Australia New Zealand	F5AE9484B
TK4040	Middle East Africa	F5AE9484G
TK4040	Australia New Zealand	F5AE9484G
TK4040	Europe	F5AE9484G
TK4040	Asia Pacific	F5AE9484G
TK4040M	Europe	F5AE9484G
TK4040M	Asia Pacific	F5AE9484G
TK4040M	Australia New Zealand	F5AE9484G
TK4040M	Middle East Africa	F5AE9484G
TK4050	Europe	F4CE9487N
TK4050	Australia New Zealand	F4CE9487N
TK4050	Middle East Africa	F4CE9487N
TK4050	Asia Pacific	F4CE9487N
TK4050M	Asia Pacific	F4CE9487N
TK4050M	Middle East Africa	F4CE9487N
TK4050M	Europe	F4CE9487N
TK4050M	Australia New Zealand	F4CE9487N
TK4060	Europe	F4CE9487A
TK4060	Asia Pacific	F4CE9487A
TK4060	Middle East Africa	F4CE9487A
TK4060	Australia New Zealand	F4CE9487A

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.400] Engine cooling system	10.3
Clutch	18
[18.104] Clutch hydraulic release control	18.1
[18.100] Clutch mechanical release control	18.2
[18.110] Clutch and components	18.3
Transmission	21
[21.114] Mechanical transmission	21.1
[21.118] Transmission/Rear drive	21.2
[21.140] Mechanical transmission internal components	21.3
[21.148] Transmission/Rear drive internal components	21.4
[21.160] Creeper	21.5
[21.162] Reverser	21.6
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.126] Spur gear and final drives	27.2
Power Take-Off (PTO)	31
[31.114] Two-speed rear Power Take-Off (PTO)	31.1
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.202] Hydraulic service brakes	33.2
Hydraulic systems	35
[35.114] Three-point hitch control valve	35.1

[35.322] Regulated/Low pressure system	35.2
[35.204] Remote control valves	35.3
Steering clutches	46
[46.110] Steering clutch	46.1
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.110] Front suspension	48.3
[48.114] Rear suspension	48.4
[48.134] Track tension units	48.5
[48.138] Track rollers	48.6
Electrical systems	55
Electrical systems	
	55.1
[55.100] Harnesses and connectors	55.1 55.2
[55.100] Harnesses and connectors	55.1 55.2 55.3
[55.100] Harnesses and connectors. [55.201] Engine starting system. [55.301] Alternator.	55.1 55.2 55.3 55.4
[55.100] Harnesses and connectors. [55.201] Engine starting system. [55.301] Alternator. [55.302] Battery.	
[55.100] Harnesses and connectors. [55.201] Engine starting system. [55.301] Alternator. [55.302] Battery. [55.640] Electronic modules.	
[55.100] Harnesses and connectors. [55.201] Engine starting system. [55.301] Alternator. [55.302] Battery. [55.640] Electronic modules. [55.404] External lighting.	
[55.100] Harnesses and connectors. [55.201] Engine starting system. [55.301] Alternator. [55.302] Battery. [55.640] Electronic modules. [55.404] External lighting. [55.408] Warning indicators, alarms, and instruments	

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com