




NEW HOLLAND

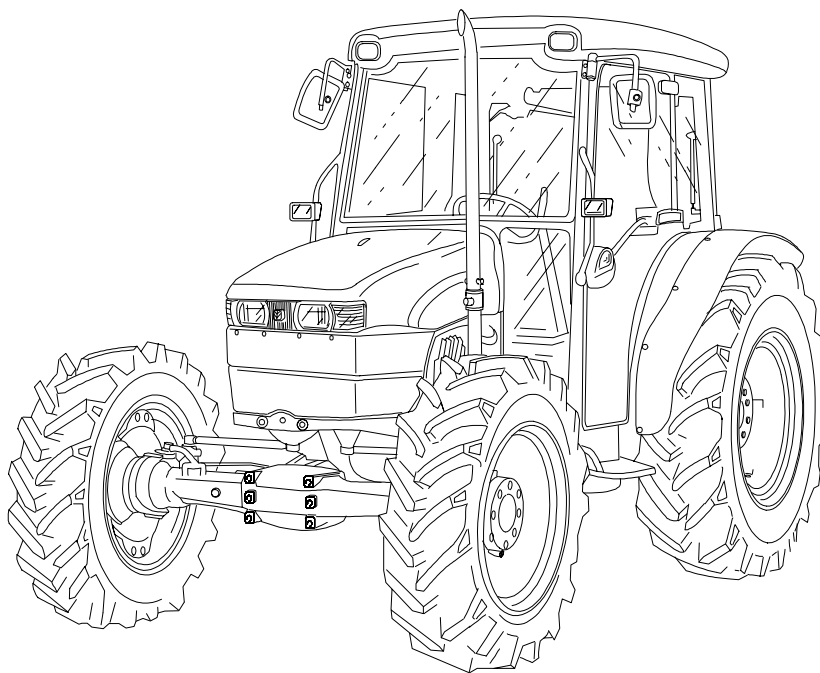

27594

TN55D - TN55S - TN65D - TN65S - TN70D - TN70S - TN75D - TN75S TRACTORS SERVICE MANUAL

CROSS-SECTIONAL VIEWS

GENERAL GUIDELINES	00
ENGINE	10
CLUTCH	18
TRANSMISSIONS	21
DRIVE LINES	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
CAB AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
PLATFORM, CAB, BODYWORK	90

S E R V I C E

CONTENTS

	Page	Date		Page	Date
00 - GENERAL GUIDELINES			Engine Disassembly - Assembly	34-35-36-37-38-39-40-41-42-43-44-45-46-47-48-49-50	09-98
General instructions	1-2	09-98			
Safety regulations	3-4	09-98			
Safety regulations	5	03-02			
Consumables	6	03-02			
10 - ENGINE			Checks and measurements - cylinder block and liners	51-52	09-98
Summary	1	03-02	Checks and measurements - crankshaft, bearings and flywheel	53-54-55-56	09-98
General specifications	2-3-4	03-02	Checks and measurements - connecting rods .	57	09-98
Fuel system data	5	03-02	Checks and measurements - pistons	58-59-60	09-98
Fuel system data	12	09-98	Checks and measurements - camshaft, tappets and valves	61-62-63	09-98
Injection pump calibration and engine performance data	6	03-02	Checks and measurements - cylinder head	64	09-98
Injection pump calibration and engine performance data	7-8-9-10-11	09-98	Re-facing valve seats	65	03-02
Engine block data	12	09-98	Checks and measurements - lubrication system	66	03-02
Crankshaft data	13-14	09-98	Checks and measurements - lubrication system	67	09-98
Connecting rod data	14	09-98	Checks and measurements - cooling system ..	68	09-98
Piston data	15	03-02	Replacing valve guides ...	69-70-71	09-98
Timing gear data	16	03-02	Replacing injector sleeves and support	72-73	09-98
Timing gear data	17	09-98	Removal-Installation - crankshaft front seal	74-75	09-98
Cylinder head data	18	09-98	Valve clearance adjustment	76-77	09-98
Lubrication and cooling system data	19	03-02	Removal-Installation - injectors	78-79	09-98
Tightening Torques	20	03-02	Removal - Installation Bosch injection pump	80	09-98
Tools	21-22	03-02	Removal - Installation Bosch injection pump	81-82	03-02
Cross-sectional views of engine	23-24	09-98	Bosch injection pump - timing	83-84	03-02
Lubrication diagrams	25	09-98			
Engine cooling system diagram	26	09-98			
Troubleshooting	27-28-29-30	09-98			
Engine Removal - Installation	31-32	09-98			
Compression test	33	09-98			

	Page	Date
Bosch injection pump – air bleeding	85	09-98
Exhaust pipe. Removal-Refitting	86	09-98
Removal-Refitting – coolant pump	87	09-98
Coolant pump overhaul ...	88	09-98
Removal-Refitting – thermostat valve	89-90	09-98
Removal-Refitting – radiator	91-92-93-94	09-98
Injection pump calibration and engine performance data	95-96	03-02

18 - CLUTCH

Main specifications	1-2	03-02
Tightening Torques	2	03-02
Tools	2-3	03-02
Cross-sectional views ...	3-4	03-02
Troubleshooting	5	03-02
Removal-Refitting – clutch	6-11-12-13-14-15	03-02
Removal-Refitting – clutch	7-8-9-10	09-98
Clutch Overhaul	16	03-02
Clutch Overhaul	17-18-19-20	09-98
Checks and measurements – clutch	21-22	09-98
Adjustments – clutch disengagement lever	22-23	09-98
Adjustments – clutch pedal	24	09-98
PTO control adjustment ..	25	03-02
Sectional view of PTO clutch servo control	26	03-02
Description and operation of PTO servo control	27-28	03-02
PTO servo control adjustment	29	03-02
PTO engaged switch adjustment	30	03-02

21 - TRANSMISSIONS

CHAPTER 1 - Transmission and range gear (16x16)

Main specifications	1-2	09-98
Tightening Torques	2-3	09-98
Tools	4-5-6-7	09-98
Cross-sectional views ...	8-9-10-11	09-98
Description and Operation	12	09-98
Troubleshooting	12-13	09-98
Removal-Refitting – Rear transmission – gearbox casing	14-15-16-17-18-19-20	09-98
Disassembly-Assembly – transmission-gearbox casing	21-22-23-24-25-26-27-28	09-98
Gearbox driving and driven shafts clearance adjustment.	29	03-02
Sealing compound application diagram	30	03-02
Gearbox control lever. Removal-Refitting	31	09-98
Range gear control lever. Removal-Refitting	32	09-98
Shuttle control lever. Removal-Refitting	33	09-98
Fuel tank. Removal-Refitting	34-35	09-98

CHAPTER 2 - Mechanical transmission and splitter

Main specifications	1-2	09-98
Tightening Torques	2	09-98
Tools	2	09-98
Cross-sectional views ...	3-4-5	09-98
Description and Operation	6	09-98
Troubleshooting	7	09-98
Splitter device and creeper unit casing, shafts and bearings disassembly	8-9-10	09-98

	Page	Date
CHAPTER 3 - Power Shuttle transmission with 2 Speed Power Shift		
Main specifications	1-2	03-02
Tightening Torques	3	09-98
Tools	4-5-6	09-98
Cross-sectional views ...	7-8-9-11	09-98
Cross-sectional views ...	10	03-02
Clutch control pressure test	10	03-02
Description and Operation	12	09-98
Troubleshooting	12	09-98
Disassembly-Assembly - transmission-gearbox casing	13-14	09-98
Disassembly-Reassembly - Power Shuttle control valve	15-16-17	09-98
Disassembly-Assembly - accumulator	18	09-98
Gearbox control valve solenoid valve. Removal-Refitting	19-20	09-98
Disassembly-Assembly - clutch casing	21-22-23-24	09-98
Disassembly-Assembly - clutch casing	25	03-02
Faults code decoding	26	03-02
Calibration	27-28-29-30-31-32-33-34-35-36-37-38-39-40-41-42-43-44-45	03-02
First start-up procedure ..	46	03-02
Diagnostics	47 to 148	03-02
Power Shuttle control unit input/output wiring diagram	150-151-152-153	03-02
Description and operation of the control unit	154-155-156-157-157	03-02

CHAPTER 4 - Mechanical transmission (8 + 8 NASO version)

Main specifications	1	09-98
Tightening Torques	1	09-98
Tools	1	09-98
Cross-sectional views ...	2-3-4	09-98

CHAPTER 4 - Power Shuttle transmission (16 + 16 and 8 + 8 versions)

Main specifications	1	09-98
Tightening Torques	2	09-98
Cross-sectional views ...	3-4-5-6	09-98

23 - DRIVE LINES

Main specifications	1	03-02
Tightening Torques	2	03-02
Tools	3-4	03-02
Cross-sectional views ...	5-6-7	09-98
Description and Operation	8-9	09-98
Troubleshooting	9	09-98
Drive shafts and guard.		
Disassembly - Assembly .	10-11-12	09-98
Removal-Refitting - drive gear casing	13-14	09-98
Disassembly-Assembly - drive gear casing	15-16-17-18	09-98
Faults code decoding	19	03-02
Calibration	20-21-22-23-24-25-26-27	03-02
First start-up procedure ..	28	03-02
Diagnostics	29 to 66	03-02
PTO control unit input/output wiring diagram	68-69	03-02

25 - FRONT MECHANICAL TRANSMISSION

CHAPTER 1 - Front mechanical transmission (super steer axle)

Main specifications	1-2	03-02
Main specifications	3	09-98
Tightening Torques	4-5-6	09-98

	Page	Date		Page	Date
Tools	7-8	03-02	Removal-Refitting - front axle	11-12-13-14	09-98
Tools	9	09-98	Front axle. Disassembly - Assembly	15-16-17-18-19-20-21-22-23	09-98
Cross-sectional views ...	10-11-12-13	09-98	Overhaul - differential lock unit	24-25	09-98
Description and Operation	13-14	03-02	Replacing steering knuckle pins and bearings	26	09-98
Troubleshooting	15	09-98	Adjustments - steering knuckle bearings	27-28	09-98
Removal-Refitting - front axle	16-17-18-19	09-98	Adjustments - bevel drive	29-30	03-02
Removal-Installation - front axle bevel drive support and differential	20-21-22-23	09-98	Adjustments - bevel drive	31-32-33-34-35	09-98
Overhaul - front axle bevel drive	24-25	09-98	Overhaul - front differential	36	09-98
Adjustments - bevel drive	26-27-28-29-30-31	09-98	LIM-SLIP self-locking differential	37-38	09-98
Overhaul - front differential	32	09-98	Checking leading wheels alignment	39	03-02
Overhaul - differential lock unit	33-34-35	09-98	Disassembly-Assembly - front epicyclic final drive ..	40-41	03-02
Disassembly-Assembly - front epicyclic final drive with brake	36-37-38-39	09-98	Disassembly-Assembly - front epicyclic final drive with brake	42-43-44	03-02
Disassembly-Assembly - front epicyclic final drive ..	40-43	09-98			
Disassembly-Assembly - front epicyclic final drive ..	41-42	03-02	27 - REAR MECHANICAL TRANSMISSION		
Disassembly-Assembly - wheel hubs and steering knuckle	44	09-98	Main specifications	1-2	03-02
Adjustments - steering knuckle bearings	45	09-98	Tightening Torques	3-4	03-02
Replacing steering knuckle pins and bearings	46	09-98	Tools	5-6-7-8	09-98
CHAPTER 2 - Front mechanical transmission			Cross-sectional views ...	9-10	09-98
Main specifications	1-2	03-02	Description and Operation	11-12	09-98
Main specifications	3	09-98	Troubleshooting	12-13	09-98
Tightening Torques	3-4	09-98	Disassembly-Assembly - transmission-gearbox casing	14-15-16-17-18-19	09-98
Tools	5-6	03-02	Adjustment - differential lock engagement sleeve position	20	09-98
Cross-sectional views ...	7-8	03-02	Adjustments - bevel drive	21-22	03-02
Description and Operation	8-9	09-98	Adjustments - bevel drive	23-24-25	09-98
Troubleshooting	10	09-98			

	Page	Date
Removal-Refitting - side gear casing	26-27-28-29	09-98
Disassembly-Assembly - drive wheel shaft	29-30-31	09-98
Disassembly-Assembly - epicyclic reduction gear ..	31	09-98

31 - POWER TAKE-OFF

CHAPTER 1 - Mechanical power take-off

Main specifications	1-2-3	03-02
Tools	3-4	03-02
Tightening Torques	5-6	09-98
Cross-sectional views ...	7-8	09-98
Description and Operation	9-10-11	09-98
Troubleshooting	11	09-98
Disassembly - Assembly - power take-off	12-13-14-15	09-98

33 - BRAKES

Main specifications	1-2	09-98
Tightening Torques	2	09-98
Cross-sectional views ...	3-4	03-02
Cross-sectional views ...	5	09-98
Tools	5-6	09-98
Description and Operation	6	09-98
Troubleshooting	7-8	09-98
Removal-Refitting - service brake	9-10	09-98
Removal-Refitting - service brake pump	11-12-13-14	09-98
Adjustments - service brake pedals travel	15-16	09-98
Service brake circuit air bleeding	16-17-18	09-98
Removal-Refitting - parking brake	19-20	09-98
Adjustments - parking handbrake travel	20	09-98

35 - HYDRAULIC SYSTEMS

CHAPTER 1 - Rear mechanical hydraulic lift

Main specifications	1-2-3	09-98
Tightening Torques	3-4	09-98
Tools	5-6	09-98
Cross-sectional views ...	7-8-9-10-11	09-98
Description and Operation	12-13-14-15	09-98
Troubleshooting	16	09-98
Troubleshooting	17	03-02
Lift internal controls. Disassembly - Assembly	18-19-20-21	03-02
Adjusting the lift	22-31	03-02
Adjusting the lift	23-24-25-26-27-28-29-30	09-98
Lift cylinder and arms shaft. Disassembly - Assembly .	32	03-02
Lift cylinder and arms shaft. Disassembly - Assembly .	33-34-35	09-98
Disassembly-Assembly - lift control valve	36-37-38	09-98
Disassembly-Assembly - lift control valve	39	03-02
Lift pressure relief valve ..	40	03-02

CHAPTER 2 - Open centre system auxiliary control valves

Main specifications	2	03-02
Tools	2	03-02
Tightening Torques	2	03-02
Cross-sectional views ...	3-4-5	09-98
Description and Operation	5-6-7-8	09-98
Lift electronic control unit. Replacement	9	09-98
Control valves. Disassembly - Assembly	10-11-12	09-98

	Page	Date		Page	Date
CHAPTER 3 - Trailer brakes auxiliary control valves			Electronic lift calibration . .	44-45-46- 47-48-49- 50-51-52- 53-54-55- 56	03-02
Cross-sectional views . . .	1	09-98	First start-up procedure . .	57	03-02
Description and Operation	1-2-3-4-5 -6-7	09-98	Diagnostics	58 to 145	03-02
Troubleshooting	8-9-10	09-98	Electronic lift control unit input/output wiring diagram	146-147	03-02
Removal-Refitting - trailer brake valve	11	09-98			
CHAPTER 4 - Electronically controlled hydraulic lift			CHAPTER 5 - Non-stop flow gear pump		
Main specifications	2-3	03-02	Main specifications	2-3	09-98
Tightening Torques	4	09-98	Diagrams	3	09-98
Tools	4-5-6	09-98	Description and Operation	3	09-98
Cross-sectional views . . .	7-8-9	09-98	Disassembly-Assembly - lift oil pump	4	09-98
Location of parts	10-11	09-98	CHAPTER 6 - Electronic lift and front Power Take-Off		
Description and Operation	12-13-14- 15-16-17- 18	09-98	Main specifications of front lift	1-2-3	03-02
Removal-Installation - lift .	19-20-21- 22-23	09-98	Tightening Torques	3-4-5	03-02
Draft sensor support. Removal-Refitting	24	09-98	Cross-sectional views of implement linkage	6-7	03-02
Replacement - control unit	25	09-98	Cross-sectional views of front PTO	8-9-10	03-02
Lift arm potentiometer. Re- placement	26-27	09-98	Description and Operation	11-12-13- 14	03-02
Replacement - draft sen- sor	28-29-30	09-98	Front lift hydraulic diagram	15	03-02
Electronically controlled hydraulic lift. Disassembly - Assembly	31-32-33- 34-35	09-98	Front lift troubleshooting . .	16-17	03-02
Removal-Installation - hy- draulic control valve	36	09-98	Removal-Refitting - Front power take-off trans- mission shaft	18-19-20- 21-22-23- 24-25	03-02
Hydraulic control valve. Disassembly - Assembly .	37-38	09-98	Disassembly-Assembly - Front PTO transmission shaft	26	03-02
Hydraulic control valve. Disassembly - Assembly .	39	03-02	Front PTO casing cross- sectional view	27	03-02
Lift calibration	40-41	03-02	Removal-Refitting - Front PTO electromagnetic coupling	28-29-30	03-02
Connecting calibration in- strument 294084 to the lift diagnosis socket	42	03-02	Disassembly-Assembly - Front PTO electromagnetic coupling	31-32-33- 34	03-02
Faults code decoding	43	03-02			

	Page	Date		Page	Date
Removal-Refitting - Front lift support	35-36-37	03-02	Disassembly-Assembly - hydrostatic control valve ..	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27	09-98
Front PTO fault codes decoding	38	03-02	Hydrostatic steering control valve bench testing	28-29	09-98
Front PTO calibration	39-40-41-42-43-44-45-46	03-02	Pressure relief valve testing	30	09-98
Front PTO first start-up ..	47	03-02	CHAPTER 2 - Non-stop flow gear pump		
Front PTO troubleshooting	48 to 62	03-02	Main specifications	1-2	09-98
Front electronic lift calibration	63-64	03-02	Diagrams	3	09-98
Connecting calibration instrument 294084 to the lift diagnosis socket	65	03-02	Description and Operation	4	09-98
Front lift fault codes decoding	66	03-02	Disassembly-Assembly - hydrostatic steering oil pump	5	03-02
Front electronic lift calibration	67-68-69-70-71-72-73-74-75-76-77-78-79	03-02	44 - AXLES AND WHEELS		
Front electronic lift troubleshooting	81 to 126	03-02	Main specifications	1-2	03-02
Front PTO control unit input/output wiring diagram	128-129	03-02	Front wheel track diagram	2	03-02
Front electronic lift control unit input/output wiring diagram	130-131	03-02	Cross-sectional views ...	3	09-98
41 - STEERING			Tightening Torques	4-5-6	09-98
CHAPTER 1 - Steering			Tools	6-7	09-98
Main specifications	2	09-98	Troubleshooting	7	09-98
Tightening Torques	2	09-98	Disassembly-Assembly - wheel axle hub	8-9-10	09-98
Tools	2	09-98	Removal-Refitting - front axle	11-12-13	09-98
Description and Operation	3-4-5	09-98	Stub axle hub overhaul ...	14-15-16-17	09-98
View of hydrostatic steering control valve components .	6	09-98	Checking leading wheels alignment	18	09-98
Troubleshooting	7-8	09-98	50 - CAB AIR CONDITIONING SYSTEM		
Replacement - hydrostatic steering wheel	9	09-98	Safety regulations	2	09-98
Removal-Refitting - hydrostatic steering control valve	10-11-12	09-98	Main specifications	3	09-98
			Tools	4	09-98
			Operating principles	5	09-98
			Components of cab air conditioning system	6-7-8-9-10	09-98
			Cab controls	11-12-13	09-98
			Operation control and cooling	14-15	09-98

	Page	Date
Conditioning system maintenance	16-17	09-98
Troubleshooting	18-19-20-21	09-98
Refrigerant recovery - recycling and evacuation - charging stations	22-23	09-98
Dehydration, recharging and refrigeration check ...	24-25-26-27-28-29-30	09-98
Checking for fluid/gas leaks in the air conditioning system	31-32	09-98
Compressor drive belt tension adjustment	33	09-98
Cab air infeed vents. Removal-Refitting	34	09-98
Cab heating/air-conditioning system. Removal-Refitting	35-36	09-98
Cab heater. Disassembly-Assembly	37	09-98
Cab air conditioning system evaporator unit. Disassembly - Assembly	38	09-98
Cab electric fan unit. Disassembly - Assembly	39	09-98

55 - ELECTRICAL SYSTEM

CHAPTER 1 - Instruments

Analog instruments	1-2-3-4	09-98
Transmitters, sensors and switches	5-6-7-8-9-10	09-98
Transmitters, sensors and switches	11-12	03-02
Electronic Instrument Panel	13-14-15	09-98
Maintenance	16	09-98

Version of frame No. 1269072

Analog instruments	17-18-19	03-02
Transmitters, sensors and switches	20-21-22-23	03-02

	Page	Date
Electronic Instrument Panel	24-25-26	03-02

CHAPTER 2 - Components

Introduction	1	09-98
Components	1-2-3-4-5-6-7-8-9-10-11-12-13-14	09-98
Maintenance	15-16-17	09-98

Version of frame No. 1269072

Introduction	19	03-02
Components	20-21-22-23-24-25-26-27-28-29-30-31-32-33	03-02

CHAPTER 3 - Starting System

Technical data	1	09-98
Tightening Torques	1	09-98
Description and Operation	2	09-98
Electrical diagram	3	09-98
Troubleshooting	4	09-98
System testing	5-6-7	09-98
Overhaul	8-9	09-98
Starter motor testing	10-11	09-98

Version of frame No. 1269072

Technical data	13	03-02
Tightening Torques	13	03-02
Electrical diagram	14	03-02

CHAPTER 4 - Charging system

Technical data	1	09-98
Tightening Torques	1	09-98
Description and Operation	2-3	09-98
System testing	4-5-6-7-8-9	09-98
Alternator Removal-Refitting and overhaul	9-10-11-12-13-14-15-16	09-98

CHAPTER 5 - Battery

Technical data	1	09-98
----------------------	---	-------

	Page	Date
Description and Operation	1	09-98
Battery Removal-Refitting	2	09-98
Battery maintenance	3	09-98
Battery recharging	4-5-6	09-98
Battery troubleshooting . . .	6	09-98

CHAPTER 6 - Electrical circuits

Contents	1	09-98
Index (Version of frame No. 1269072)	111	03-02

CHAPTER 7 - Cab electrical components

Direction indicator switch. Replacement	2	09-98
Multi-function control panel. Removal-Refitting .	3	09-98
Services electronic control unit. Replacement	4	09-98
Power Shuttle electronic control unit. Replacement .	5	09-98
Fusebox. Replacement . . .	6	09-98
Fuses - Relays. Replacement	7	09-98
Loudspeakers. Removal-Refitting	8	09-98
Cab lamp fitting. Removal-Refitting	9	09-98
Rear windscreen wiper motor. Removal-Refitting .	10	09-98

	Page	Date
Rear windscreen wiper motor. Removal-Refitting .	11	09-98

90 - PLATFORM, CAB, BODYWORK

CHAPTER 1 - Cab

Hood opening. Removal-Refitting	2	09-98
Protective grill. Removal-Refitting	3	09-98
Hood guard. Removal-Refitting	4	09-98
Instrument panel lower guard. Removal-Refitting .	5	09-98
Platform assembly. Removal-Refitting	6-7-8-9-10-11-12	09-98
Safety frame roof. Removal-Refitting	13	09-98
Cab assembly with platform. Removal-Refitting . .	14-15-16-17-18-19-20-21	09-98
Cab windows. Replacement	22-23-24	09-98
Right/left-hand upright seals. Removal-Refitting .	25	09-98
Cab ceiling fitting. Removal-Refitting	26-27	09-98

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com