




NEW HOLLAND

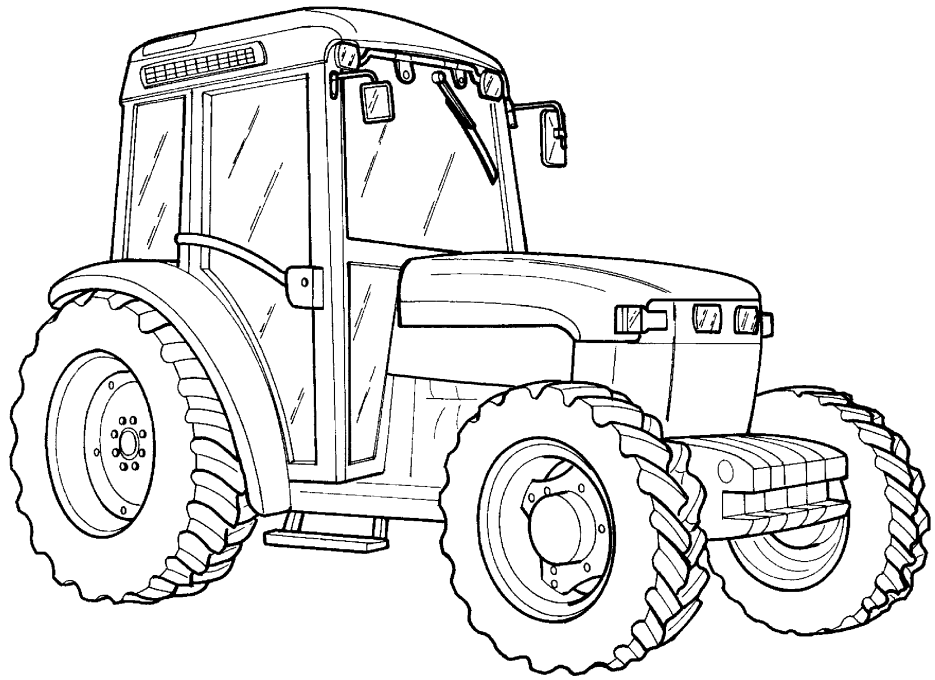

TN75FA – TN85FA – TN95FA TRACTORS SERVICE MANUAL

SECTIONS

GENERAL GUIDELINES	00
ENGINE	10
CLUTCH	18
TRANSMISSIONS	21
DRIVE LINES	23
FRONT MECHANICAL TRANSMISSION	25
REAR MECHANICAL TRANSMISSION	27
POWER TAKE-OFF	31
BRAKES	33
HYDRAULIC SYSTEMS	35
STEERING	41
AXLE AND WHEELS	44
CAB AIR CONDITIONING SYSTEM	50
ELECTRICAL SYSTEM	55
PLATFORM, CAB, BODYWORK	90

T E C H N I C A L S U P P O R T

CONTENTS VOLUME 1

	Page	Date		Page	Date
00 - GENERAL GUIDELINES			Engine Disassembly - As-		
General instructions	1-2	01-04	sembly	37-38-39- 40-41-42- 43-44-45- 46-47-48- 49-50-51- 52-53-54- 55-56-57- 58-59	01-04
Safety regulations	3-4-5	01-04			
Consumables	6	01-04			
10 - ENGINE					
Summary	1	01-04	Checks and measure-		
General specifications	2-3-4	01-04	ments - cylinder block and	60-61	01-04
Fuel system data	5-12	01-04	liners		
Injection pump calibration			Checks and measure-		
and engine performance			ments - crankshaft, bear-		
data	6-7-8-9- 10-11	01-04	ings and flywheel	62-63-64- 65	01-04
Engine block data	12	01-04	Checks and measure-		
Crankshaft data	13-14	01-04	ments - connecting rods .	66	01-04
Connecting rod data	14	01-04	Checks and measure-		
Piston data	15	01-04	ments - pistons	67-68-69	01-04
Timing gear data	16	01-04	Checks and measure-		
Timing gear data - Rotating			ments - camshaft, tappets		
counterweights main data .	17	01-04	and valves	70-71-72	01-04
Cylinder head data	18	01-04	Checks and measure-		
Lubrication and cooling			ments - cylinder heads . .	73	01-04
system data	19	01-04	Replacing valve guides . .	74-75-76	01-04
Tightening torques	20	01-04	Re-facing valve seats . . .	77	01-04
Tools	21-22	01-04	Replacing injector sleeves		
Cross-sectional views of			and support	78-79	01-04
engine	23-24	01-04	Checks and measure-		
Lubrication diagrams	25	01-04	ments - rotating counter-	80	01-04
Engine cooling system dia-			weights		
gram	26	01-04	Checks and measure-		
Fault diagnosis	27-28-29- 30	01-04	ments - lubrication system	81-82	01-04
Engine Removal - Installa-			Checks and measure-		
tion	31-32-33- 34-35-36	01-04	ments - cooling system . .	82-83	01-04
			Removal-Installation -		
			radiator	84-85-86	01-04
			Removal-Installation -		
			crankshaft front seal	87-88-89- 90-91	01-04

	Page	Date		Page	Date
Removal-Installation - coolant pump	92-93-94- 95	01-04	Servo control adjustment .	25	01-04
Removal-Installation - thermostat valve	96-97	01-04	PTO clutch engaged switch adjustment	26	01-04
Removal - Installation Bosch injection pump	98-99-100	01-04	21 - TRANSMISSIONS		
Bosch injection pump - tim- ing	101-102	01-04	CHAPTER 1 - Transmission and range gear (16x16)		
Bosch injection pump - air bleeding	103	01-04	Data	1-2	01-04
Removal-Installation - in- jectors	104-105	01-04	Tightening torques	2-3	01-04
Valve clearance adjust- ment	106-107	01-04	Tools	4-5	01-04
Coolant pump overhaul ...	108	01-04	Cross-sectional views ...	6-7-8-9- 10	01-04
Compression Test	109	11-96	Description and Operation	11	01-04
18 - CLUTCH			Fault diagnosis	11-12	01-04
Data	1-2	01-04	Removal-Installation - Rear transmission - gear- box casing	13-14-15- 16-17-18- 19-20-21- 22-23-24	01-04
Tightening torque - Tools .	2	01-04	Disassembly-Assembly - transmission-gearbox cas- ing	25-26-27- 28-29-30- 31-32	01-04
Cross-sectional views ...	3-4	01-04	Gearbox driving and driven shafts end float adjustment.	33	01-04
Fault diagnosis	5	01-04	Sealing compound applica- tion diagram	34	01-04
Removal-Installation - clutch	6-7-8-9- 10	01-04	CHAPTER 2 - Mechanical transmission and splitter		
Clutch overhaul	11-12-13- 14-15	01-04	Data	1-2	01-04
Checks and measure- ments - clutch	16-17	01-04	Tightening torques	2	01-04
Adjustments - clutch disen- gagement levers	17-18	01-04	Tools	2	01-04
Adjustments - clutch pedal	19	01-04	Cross-sectional views ...	3-4-5	01-04
PTO clutch lever adjust- ment	20	01-04	Description and Operation	6	01-04
PTO clutch servo control adjustment	21	01-04	Fault diagnosis	7	01-04
PTO clutch servo control			Splitter device and creeper unit casing, shafts and bearings disassembly	8-9-10	01-04
Cross-sectional views ...	22	01-04			
Description and Operation	23-24	01-04			

	Page	Date		Page	Date
CHAPTER 3 - Power Shuttle transmission			Clutch pedal position and dump switch display (HA) .	38-39-40	01-04
Data	1-2	01-04	Transmission oil tempera- ture display (HB)	40	01-04
Tightening torques	3	01-04	Synchroniser position (HD)	40-41	01-04
Tools	4-5	01-04	Gear shift operation adjust- ments (HE)	41	01-04
Cross-sectional views ...	6-7-8-9- 10	01-04	Faults saved in the non- volatile ECU memory (ECU) (HF)	41-42	01-04
Clutch control pressure test	9	01-04	First start-up procedure ..	43	01-04
Description and Operation	11	01-04	Diagnostics	44 to 145	01-01
Fault diagnosis	11	01-04	Power shuttle electronic control unit input/output wiring diagram	146-147	01-04
Disassembly-Assembly - transmission-gearbox cas- ing	12-13-14- 15-16-17- 18	01-04	Electric control unit oper- ation	148-149- 150-151- 152	01-04
Disassembly-Reassembly - Power Shuttle control valve	19-20-21	01-04	23 - DRIVE LINES		
Disassembly-Assembly - accumulator	22	01-04	Data	1	01-04
Faults code signals	23	01-04	Tightening torques	2	01-04
Calibrations	24	01-04	Cross-sectional views ...	3-4	01-04
HH MENU access	24-25	01-04	Description and Operation	5-6	01-04
Clutch A and B calibration (H1)	26-27-28	01-04	Fault diagnosis	6	01-04
Clutch A and B calibration values display (H2)	29	01-04	Removal-Installation - drive gear casing	7-8-9	01-04
System configuration (H3)	29-30	01-04	Disassembly-Assembly - drive gear casing	10-11	01-04
Software revision level (H4)	31	01-04	Diagnosis	12-14	01-04
Control switch diagnostics (H5)	31-32-33	01-04	Faults code signals	12	01-04
Clutch A fill time modifica- tion and display (H6)	34	01-04	Calibrations	13	01-04
Clutch B fill time modifica- tion and display (H7)	34-35	01-04	HH MENU access	13-14	01-04
Deleting the non volatile memory (NVM) (EEPROM) (H8)	35-36	01-04	System configuration (H3)	14-15	01-04
Voltmeter function (H9) ...	36-37	01-04	Software revision level (H4)	16	01-04
			Control switch diagnostics (H5)	16	01-04

	Page	Date		Page	Date
Deleting the non volatile memory (NVM) (EEPROM) (H8)	17	01-04	Overhaul – differential lock unit	33-34-35	01-04
Voltmeter function (H9) ...	18	01-04	Overhaul – front axle bevel drive	36-37	01-04
Four-wheel drive engagement position (HD)	19	01-04	Adjustments – bevel drive	38-39-40-41-42-43-44	01-04
Faults saved in the non-volatile ECU memory (ECU) (HF)	19-20	01-04	Overhaul – front differential	45	01-04
First start-up procedure ..	21	01-04	Replacing steering knuckle pins and bearings	46	01-04
Diagnostics	22 to 59	01-01			
Front PTO and 4WD electronic control unit input/output wiring diagram	60-61	01-04			
25 - FRONT MECHANICAL TRANSMISSION			27 - REAR MECHANICAL TRANSMISSION		
Data	1-2	01-04	Data	1-2	01-04
Tightening torques	3-4-5	01-04	Tightening torques	3-4	01-04
Tools	6	01-04	Tools	5-6-7	01-04
Cross-sectional views ...	7-8-9-10-11	01-04	Cross-sectional views ...	8-9	01-04
Description and Operation	11-12	01-04	Description and Operation	9-10	01-04
Fault diagnosis	13	01-04	Fault diagnosis	11-12	01-04
Removal-Installation – front axle	14-15-16-17-18-19-20-21	01-04	Disassembly-Assembly – transmission-gearbox casing	13-14-15-16-17-18	01-04
Disassembly-Assembly – front epicyclic final drive with brake	22-23	01-04	Adjustment – differential lock engagement sleeve position	19	01-04
Disassembly-Assembly – front epicyclic final drive ..	24-25-26	01-04	Adjustments – bevel drive	20-21-22-23-24-25	01-04
Disassembly-Assembly – wheel hubs and steering knuckle	27	01-04	Removal-Installation – side gear casing	26-27-28	01-04
Adjustments – steering knuckle bearings	28	01-04	Disassembly-Assembly – drive wheel shaft	28-29-30	01-04
Removal-Installation – front axle bevel drive support and differential	29-30-31-32	01-04	Disassembly-Assembly – epicyclic final drive	30	01-04
			31 - POWER TAKE-OFF		
			CHAPTER 1 - Mechanical power take-off		
			Data	1-2-3	01-04
			Tools	3	01-04
			Tightening torques	4-5	01-04
			Cross-sectional views ...	6-7	01-04

	Page	Date
Description and Operation	8-9-10	01-04
Fault diagnosis	10	01-04
Power take-off overhaul . .	11-12-13-14	01-04

33 - BRAKES

Data	1-2	01-04
Tightening torques	2	01-04
Cross-sectional views . . .	3-4-5	01-04
Tools	5-6	01-04
Description and Operation	6	01-04
Fault diagnosis	7-8	01-04
Removal-Installation - service brake	9-10	01-04
Removal-Installation - service brake pump	11-12-13-14	01-04
Adjustments - service brake pedals travel	14-15	01-04
Service brake circuit air bleeding	15-16-17	01-04
Removal-Installation - parking brake	17-18	01-04
Adjustments - parking handbrake travel	19	01-04

CONTENTS VOLUME 2

	Page	Date		Page	Date
35 – HYDRAULIC SYSTEM					
CHAPTER 1 – Rear mechanical hydraulic lift			Adjustment of the auto- matic detent release pres- sure	15	01-04
Data	1-2-3	01-04	Removal-Installation – flow control valve	16	01-04
Tightening torques	3-4	01-04	Flow control valve adjust- ment	17-18	01-04
Tools	5	01-04	CHAPTER 3 – Auxiliary control valve for trailer brakes		
Cross-sectional views ...	6-7-8-9- 10	01-04	Cross-sectional views ...	1	01-04
Description and Operation	11-12-13- 14	01-04	Description and Operation	1-2-3-4-5- -6-7	01-04
Fault diagnosis	15-16	01-04	Fault diagnosis	8-9-10	01-04
Removal-Installation – lift .	17-18-19	01-04	Removal-Installation – trailer brake valve	11	01-04
Disassembly-Assembly – lift	20-21-22- 23-24-25	01-04	CHAPTER 4 – Electronically controlled hydraulic lift		
Adjusting the lift	26-27-28- 29-30-31- 32-33-34- 35	01-04	Data	2-3	01-04
Lift pressure relief valve ..	36	01-04	Tightening torques	4	01-04
Disassembly-Assembly – lift control valve	37-38-39- 40	01-04	Tools	5	01-04
CHAPTER 2 – Auxiliary control valves Open centre system			Cross-sectional views ...	6-7-8	01-04
Data	1	01-04	Location of parts	9-10	01-04
Tools	1	01-04	Description and Operation	11-12-13- 14-15-16- 17	01-04
Tightening torques	2	01-04	Removal-Installation – lift .	18-19-20- 21-22	01-04
Cross-sectional views ...	3-4-5	01-04	Replacement – control unit	23	01-04
Description and Operation	6-7-8-9	01-04	Position sensor replace- ment	24-25	01-04
Removal-Installation – front auxiliary control valves	10-11-12	01-04	Replacement – draft sen- sor	26-27-28	01-04
Disassembly-Assembly – auxiliary control valves ...	13-14	01-04	Disassembly-Assembly – lift	29-30-31- 32	01-04
Rod hardening test	14	01-04	Cylinder safety valve	33	01-04
Blow-by test	15	01-04	Removal-Installation – hy- draulic control valve	34-35	01-04

	Page	Date		Page	Date
Disassembly–Assembly – hydraulic control valve . . .	35–36–37	01–04	CHAPTER 6 – Electronic lift and front Power Take–Off		
Calibration	38–39	01–01	Data	1–2–3	01–04
Calibration and diagnosis instrument connection . . .	40	01–04	Tightening torques	3–4–5	01–04
Faults code signals	41	01–04	Cross–sectional views . . .	6–7–8–9–10	01–04
Electronic lift calibration . .	42	01–04	Description and Operation	11–12–13–14–15	01–04
HH MENU access	42–43	01–04	Lift troubleshooting	16–17	01–04
Raise and Lower solenoids calibration (H1)	44–45–46	01–01	Front Power Take–Off propeller shaft. Removal – Installation	18–19–20–21–22–23–24–25	01–04
Rear lift current calibration values display (H2)	46–47	01–04	Front Power Take–Off propeller shaft. Disassembly – Assembly	26	01–04
System configuration (H3)	47–48	01–04	Front Power Take–Off cross–sectional view	27	01–04
Software revision level (H4)	48–49	01–04	Front Power Take–Off electromagnetic coupling. Removal – Installation	28–29–30	01–04
Control switch diagnostics (H5)	49	01–04	Front Power Take–Off electromagnetic coupling. Disassembly – Assembly	31–32–33–34	01–04
Draft sensors values display (LVDT) (H6)	50	01–04	Front lift support. Removal – Installation	35–36–37	01–04
Deleting the non volatile memory (NVM) (EEPROM) (H8)	50–51	01–04	Front power take–off		
Voltmeter function (H9) . . .	51–52	01–04	Faults code signals	38	01–04
Lift arms position (HA) . . .	52–53	01–04	Faults code calibrations . .	39	01–04
Faults saved in the non–volatile ECU memory (ECU) (HF)	53–54	01–04	HH MENU access	39–40	01–04
First start–up procedure . .	55	01–04	System configuration (H3)	40–41	01–04
Diagnostics	56 to 138	01–01	Software revision level (H4)	42	01–04
Electronic lift electronic control unit input/output wiring diagram	140–141	01–04	Control switch diagnostics (H5)	42	01–04
CHAPTER 5 – Constant flow gear pump			Deleting the non volatile memory (NVM) (EEPROM) (H8)	43	01–04
Data	1–2	01–04	Voltmeter function (H9) . . .	44	01–04
Tightening torques	2	01–04			
Description and Operation	2	01–04			
Diagrams	3	01–04			
Disassembly–Reassembly – gear pumps	4	01–04			

	Page	Date		Page	Date
Four-wheel drive engagement position (HD)	45	01-04	Front PTO and 4WD electronic control unit input/output wiring diagram	128-129	01-04
Faults saved in the non-volatile ECU memory (ECU) (HF)	45-46	01-04	Electronic lift electronic control unit input/output wiring diagram	130-131	01-04
First start-up procedure	47	01-04			
Power Take-Off diagnostics	48 to 62	01-01			
Front electronic lift			41 – STEERING		
Lift calibrations	63-64	01-01	CHAPTER 1 – Steering		
Calibration unit connection 3800000282	65	01-04	Data	2	01-04
Faults code signals	66	01-04	Tightening torques	2	01-04
Front electronic lift calibration	67	01-04	Tools	2	01-04
HH MENU access	67-68	01-04	Description and Operation	3-4-5	01-04
Raise and Lower solenoids calibration (H1)	69-70-71	01-04	View of hydrostatic steering control valve components	6	01-04
Rear lift current calibration values display (H2)	71-72	01-04	Fault diagnosis	7-8	01-04
System configuration (H3)	72-73	01-04	Removal-Installation – steering wheel	9	01-04
Software revision level (H4)	73-74	01-04	Removal-Installation – hydrostatic steering control valve	10-11-12	01-04
Control switch diagnostics (H5)	74	01-04	Disassembly-Assembly – hydrostatic control valve	13-14-15-16-17-18-19-20-21-22-23-24-25-26-27-28	01-04
Draft sensors values display (LVDT) (H6)	75	01-04	Hydrostatic steering control valve bench testing	29-30	01-04
Deleting the non volatile memory (NVM) (EEPROM) (H8)	75-76	01-04	Pressure relief valve testing	31	01-04
Voltmeter function (H9)	76-77	01-04			
Lift arms position (HA)	77-78	01-04	CHAPTER 2 – Constant flow gear pump		
Front lift arms position (HB)	78	01-04	Data	1-2	01-04
Faults saved in the non-volatile ECU memory (ECU) (HF)	79	01-04	Tightening torques	2	01-04
First start-up procedure	80	01-04	Diagrams	3-4	01-04
Front Lift diagnostics	81 to 126	01-01	Description and Operation	4	01-04
			Disassembly-Reassembly – gear pumps	5	01-04

	Page	Date		Page	Date
44 – AXLES AND WHEELS			Air conditioning system maintenance	33	01–04
Data	1–2	01–04	Compressor drive belt tension adjustment	34	01–04
Front wheel track diagram	2	01–04			
Cross-sectional views ...	3	01–04	Removal–Installation – air conditioning unit	35–36–37–38	01–04
Tightening torques	4–5–6	01–04			
Tools	6–7	01–04	55 – ELECTRICAL SYSTEM		
Fault diagnosis	7	01–04	CHAPTER 1 – Instruments		
Removal–Installation – front axle	8–9–10	01–04	Analog instruments	1–2–3–4	01–04
Disassembly–Assembly – wheel axle hub	11–12–13	01–04	Transmitters, sensors and switches	5–6–7–8–9–10–11–12	01–04
Stub axle hub overhaul ...	14–15–16–17	01–04	Electronic instruments	13–14–15–16	01–04
Checking leading wheel alignment	18	01–04	Maintenance	16	01–04
50 – CAB AIR CONDITIONING SYSTEM			CHAPTER 2 – Components		
Safety regulations	2	01–04	Introduction	1	01–04
Main specifications	3	01–04	Components	1–2–3–4–5–6–7–8–9–10–11–12–13–14–15–16–17	01–04
Tools	4	01–04	Maintenance	18–19–20–21	01–04
Operating principles	5	01–04	CHAPTER 3 – Starting System		
Components of cab air conditioning system	6–7–8–9–10–11	01–04	Technical data	1	01–04
Cab controls	12–13–14	01–04	Tightening torques	1	01–04
Instructions for use – air conditioning system	15	01–04	Description and Operation	2	01–04
Refrigerant recovery – recycling and evacuation – charging stations	16–17	01–04	Wiring diagram	3	01–04
Dehydration, recharging and refrigeration check ...	18–19–20–21–22	01–04	Fault diagnosis	4	01–04
System recharging function check	23–24–25–26–27–28	01–04	System testing	5–6–7	01–04
Fault diagnosis	29–30–31–32	01–04	Overhaul	8–9	01–04
			Starter motor testing	10–11	01–04
			CHAPTER 4 – Charging system		
			Technical data	1	01–04

	Page	Date		Page	Date
Tightening torques	1	01-04	90 – BODYWORK AND DRIVING POSITION		
Description and Operation	2-3	01-04	CHAPTER 1 – Cab Removal-Installation		
System testing	4-5-6-7-8 -9-10	01-04	Cab Removal-Installation .	1-2-3-4-5 -6	01-04
Removal-Installation and Overhaul – alternator	11-12-13- 14-15-16- 17-18	01-04	CHAPTER 2 – Removal of cab internal com- ponents		
CHAPTER 5 – Battery			Multi-function panel Removal-Installation	1	01-04
Technical data	1	01-04	Fuse or relay replacement	2	01-04
Description and Operation	1	01-04	Fusebox replacement	3	01-04
Removal-Installation – bat- tery	2	01-04	Removal-Installation – electronic control unit	4-5-6	01-04
Battery maintenance	3	01-04	Removal-Installation wind- screen wiper motor	7	01-04
Battery charging	4-5-6	01-04	Removal-Installation rear windscreen wiper motor . .	8	01-04
Battery troubleshooting . . .	7	01-04	Replacement of glued cab windows	9-10	01-04
CHAPTER 6 – Electrical circuits					
Contents	1	01-04			

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com