

SERVICE MANUAL

TT55 / TT65 / TT75

Tractor

Part number 47899732

1st edition English

June 2015





SERVICE MANUAL

TT55 Tier3 engine, 2WD tractor , TT55 Tier3 engine, 4WD tractor , TT65 Tier3 engine, 2WD tractor , TT65 Tier3 engine, 4WD tractor , TT75 Tier3 engine, 4WD tractors , TT75 Tier3, 2WD tractor

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.218] Fuel injection system.....	10.8
[10.250] Turbocharger and lines.....	10.9
[10.400] Engine cooling system	10.10
[10.414] Fan and drive	10.11
[10.304] Engine lubrication system.....	10.12
Clutch	18
[18.110] Clutch and components	18.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.126] Gearbox external controls.....	21.3
[21.145] Gearbox internal components.....	21.4
Four-Wheel Drive (4WD) system	23
[23.314] Drive shaft.....	23.1
Front axle system	25
[25.400] Non-powered front axle	25.1
[25.100] Powered front axle	25.2

[25.102] Front bevel gear set and differential	25.3
[25.108] Final drive hub, steering knuckles, and shafts	25.4
Rear axle system	27
[27.100] Powered rear axle	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO)	31
[31.101] Rear mechanical control	31.1
[31.201] Power Take-Off (PTO) drive shaft	31.2
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems	35
[35.000] Hydraulic systems	35.1
[35.104] Fixed displacement pump	35.2
[35.359] Main control valve	35.3
[35.204] Remote control valves	35.4
[35.100] Main lift system	35.5
Steering	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components	41.2
[41.216] Cylinders	41.3
Wheels	44
[44.511] Front wheels	44.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3

[55.301] Alternator 55.4

[55.302] Battery..... 55.5

[55.404] External lighting 55.6

[55.408] Warning indicators, alarms, and instruments 55.7

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com