

SERVICE MANUAL

WI30C / WI70C

Tier 4B (final)

Wheel Loader

Part number 47841828

English

February 2015



Contents

INTRODUCTION

| | |
|--|------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.202] Air cleaners and lines | 10.2 |
| [10.500] Selective Catalytic Reduction (SCR) exhaust treatment | 10.3 |
| [10.400] Engine cooling system | 10.4 |
| [10.414] Fan and drive | 10.5 |
| [10.310] Aftercooler..... | 10.6 |
| [10.304] Engine lubrication system..... | 10.7 |
| Transmission..... | 21 |
| [21.113] Powershift transmission | 21.1 |
| [21.135] Powershift transmission external controls..... | 21.2 |
| [21.155] Powershift transmission internal components..... | 21.3 |
| [21.700] Torque converter | 21.4 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.314] Drive shaft..... | 23.1 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| Rear axle system..... | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential..... | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |

| | |
|---|-----------|
| [33.110] Parking brake or parking lock | 33.2 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.106] Variable displacement pump | 35.3 |
| [35.357] Pilot system | 35.4 |
| [35.752] Hydraulic fan drive cooling system..... | 35.5 |
| [35.355] Hydraulic hand control | 35.6 |
| [35.724] Front loader hydraulic system control..... | 35.7 |
| [35.701] Front loader arm hydraulic system | 35.8 |
| [35.723] Front loader bucket hydraulic system..... | 35.9 |
| [35.734] Tool quick coupler hydraulic system | 35.10 |
| Frames and ballasting | 39 |
| [39.100] Frame | 39.1 |
| Steering..... | 41 |
| [41.101] Steering control | 41.1 |
| [41.200] Hydraulic control components..... | 41.2 |
| [41.216] Cylinders | 41.3 |
| [41.910] Auxiliary steering | 41.4 |
| Wheels..... | 44 |
| [44.511] Front wheels..... | 44.1 |
| [44.520] Rear wheels..... | 44.2 |
| Cab climate control | 50 |
| [50.200] Air conditioning..... | 50.1 |
| Electrical systems | 55 |
| [55.100] Harnesses and connectors..... | 55.1 |
| [55.301] Alternator..... | 55.2 |

| | |
|--|-----------|
| [55.302] Battery..... | 55.3 |
| [55.011] Fuel tank system | 55.4 |
| [55.988] Selective Catalytic Reduction (SCR) electrical system | 55.5 |
| [55.989] Exhaust Gas Recirculation (EGR) electrical system | 55.6 |
| [55.012] Engine cooling system | 55.7 |
| [55.519] Cab brake controls | 55.8 |
| [55.030] Service brake electrical system | 55.9 |
| [55.031] Parking brake electrical system | 55.10 |
| [55.512] Cab controls..... | 55.11 |
| [55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls..... | 55.12 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.13 |
| [55.047] Steering control system | 55.14 |
| [55.530] Camera..... | 55.15 |
| [55.518] Wiper and washer system..... | 55.16 |
| [55.514] Cab lighting | 55.17 |
| [55.408] Warning indicators, alarms, and instruments | 55.18 |
| [55.DTC] FAULT CODES..... | 55.19 |
| Front loader and bucket..... | 82 |
| [82.300] Bucket..... | 82.1 |
| Platform, cab, bodywork, and decals | 90 |
| [90.150] Cab..... | 90.1 |
| [90.156] Cab glazing | 90.2 |
| [90.114] Operator protections | 90.3 |

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com