

W50TC
W60TC
W70TC
W80TC

Repair manual

INDEX

SECTION 00 - INTRODUCTION

1. SAFETY INSTRUCTIONS	1
2. TECHNICAL SPECIFICATIONS	11

SECTION 10 - ENGINE

1. DIESEL ENGINE	1
2. FUEL SYSTEM	2

SECTION 25 - FRONT AXLES

1. REMOVAL AND INSTALLATION	1
2. DIMENSIONS	3
3. TECHNICAL SPECIFICATIONS	4
4. OIL CHANGE AND GREASING	7
5. DISASSEMBLY AND ASSEMBLY	8
5.1 BRAKE DISC ASSY	8
5.2 BRAKE CALIPER	15
5.3 EPICYCLIC REDUCTION GEAR ASSY (W50TC)	23
5.4 EPICYCLIC REDUCTION GEAR ASSY (W60TC, W70TC, W80TC)	27
5.5 WHEEL HUB ASSY (W50TC)	31
5.6 WHEEL HUB ASSY (W60TC, W70TC, W80TC)	40
5.7 WHEEL SHAFT ASSY (W60TC, W70TC, W80TC)	46
5.8 BRAKE AND WHEEL SHAFT ASSY (W60TC, W70TC, W80TC HIGH SPEED)	50
5.9 DIFFERENTIAL SUPPORT ASSY	58
5.10 DIFFERENTIAL ASSY	66
5.11 PINION ASSY	73
6. TROUBLESHOOTING	80
7. SPECIAL TOOLS	83

SECTION 27 - REAR AXLES

1. REMOVAL AND INSTALLATION	1
2. DIMENSIONS	3
3. TECHNICAL SPECIFICATIONS	7
4. OIL CHANGE AND GREASING	13
5. DISASSEMBLY AND ASSEMBLY	14
5.1 HYDRAULIC MOTOR ASSY TB150	14
5.2 HYDRAULIC MOTOR ASSY TB138.5 HIGH SPEED	17
5.3 TRANSMISSION BOX ASSY TB150	21
5.4 TRANSMISSION BOX ASSY TB138.5 HIGH SPEED	30
5.5 EPICYCLIC REDUCTION GEAR ASSY (W50TC)	51
5.6 EPICYCLIC REDUCTION GEAR ASSY (W60TC, W70TC, W80TC)	55
5.7 WHEEL HUB ASSY (W50TC)	59
5.8 WHEEL HUB ASSY (W60TC, W70TC, W80TC)	68

5.9 WHEEL SHAFT ASSY (W60TC, W70TC, W80TC)	74
5.10 DIFFERENTIAL SUPPORT ASSY	78
5.11 DIFFERENTIAL ASSY	87
5.12 LIMITED SLIP DIFFERENTIAL ASSY	94
5.13 PINION ASSY	101
6. TROUBLESHOOTING	108
7. SPECIAL TOOLS	112

SECTION 33 - BRAKES SYSTEM

1. BRAKES SYSTEM DIAGRAM	1
2. OPERATION	2
2.1 SERVICE BRAKE	4
2.2 PARKING BRAKE	6
3. BRAKE PEDAL VALVE	7
3.1 ADJUSTMENTS	10
3.2 TROUBLESHOOTING	13
4. ACCUMULATORS	14
4.1 BRAKE ACCUMULATOR	14
4.2 PUMP ACCUMULATOR	15
4.3 MAINTENANCE	16
5. TROUBLESHOOTING	18

SECTION 35 - HYDRAULIC SYSTEM

1. HYDRAULIC DIAGRAMS	1
1.1 W50TC HYDRAULIC DIAGRAM	1
1.2 W50TC HYDRAULIC DIAGRAM WITH OPTIONAL OUTFITS	3
1.3 W60TC HYDRAULIC DIAGRAM	5
1.4 W60TC HYDRAULIC DIAGRAM WITH OPTIONAL OUTFITS	7
1.5 W70TC BASIC MODEL HYDRAULIC DIAGRAM	9
1.6 W70TC HYDRAULIC DIAGRAM WITH OPTIONAL OUTFITS	11
1.7 W80TC HYDRAULIC DIAGRAM	13
1.8 W80TC HYDRAULIC DIAGRAM WITH OPTIONAL OUTFITS	15
2. TRANSMISSION HYDRAULIC SYSTEM	17
3. PISTON PUMP AT VARIABLE DISPLACEMENT	24
4. GEAR PUMP	60
5. PRIORITY VALVE	65
6. HYDRAULIC MOTOR	66
7. ONE-WAY DISTRIBUTOR VALVE	85
8. HYDRAULIC OIL TANK	86
9. TROUBLESHOOTING	88

SECTION 39 - FRAME

1. ARTICULATED JOINT	1
----------------------------	---

SECTION 41 - STEERING SYSTEM

1. STEERING SYSTEM DIAGRAM	1
2. OPERATION	2
3. ADJUSTMENTS	3
4. POWER STEERING	4
4.1 TECHNICAL SPECIFICATIONS	5
4.2 HYDRAULIC DIAGRAM	5
4.3 COMPONENTS	6
4.4 DISASSEMBLY AND ASSEMBLY	7
4.5 TROUBLESHOOTING	24
4.6 SPECIAL TOOLS	25
5. STEERING CYLINDER	26
5.1 REMOVAL AND INSTALLATION	27
5.2 DISASSEMBLY	29
6. TROUBLESHOOTING	34

SECTION 50 - HEATING AND AIR CONDITIONING SYSTEM

1. HEATING	1
2. AIR CONDITIONING	3
3. TROUBLESHOOTING	30

SECTION 55 - ELECTRICAL SYSTEM

1. ELECTRICAL DIAGRAMS	1
2. FUSES AND RELAYS	16
3. VOLTAGE AND CONTINUITY CHECK	18
4. BATTERY	19
5. BULBS	22
6. TROUBLESHOOTING	26

SECTION 82 - WORKING EQUIPMENT

1. HYDRAULIC DIAGRAM	2
2. OPERATION	3
3. REMOVAL AND INSTALLATION	4
4. QUICK TOOL COUPLER	6
5. BUCKET	10
6. LIFTING FORKS	14
7. CYLINDERS	18
8. CONTROL VALVE	26
9. LOAD HOLDING VALVE	29
10. TROUBLESHOOTING	30

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.
You can download the most
perfect and complete manual in
the world immediately.

Our support email:
ebooklibonline@outlook.com