

## 6620, Sidehill 6620 7720 and 8820 Combines



### **TECHNICAL MANUAL**

6620, Sidehill 6620 7720 and 8820 Combines

TM1202 (01JAN88) English

John Deere Harvester Works TM1202 (01JAN88)

ENGLISH



# 6620, SIDEHILL 6620, 7720 AND 8820 COMBINES TECHNICAL MANUAL

TM-1202 (Jan-88)

### CONTENTS

SECTION 10 - GENERAL Group 00 - General Specifications	SECTION 80 - SEPARATOR SHELL REPAIR Group 00 - Specifications
Group 05 - Diagnosing and Testing Procedures	Group 05 - Rear Hood
Group 10 - Tune-Up and Adjustment	Group 10 - Cylinder Rear Cover
SECTION 20 - ENGINE REPAIR	Group 15 - Separator Uprights
Group 00 - Specifications and Special Tools	SECTION 90 - OPERATOR STATION REPAIR
Group 05 - Cylinder Head, Valves and Camshaft	Group 00 - Specifications and Special Tools
Group 10 - Block, Liners, Pistons, and Rods	Group 05 - Air Conditioning System
Group 15 - Crankshaft and Main Bearings	Group 10 - Air Intake (Pressurizer) System
Group 20 - Lubrication System	Group 15 - Heating System
Group 25 - Cooling System	Group 20 - Personal Posture Seat
	Group 25 - Miscellaneous Components
SECTION 30 - FUEL AND AIR REPAIR	SECTION 100 - HEADER REPAIR
Group 00 - Specifications and Special Tools	Group 00 - Specifications and Special Tools
Group 05 - Air Intake System	Group 05 - 200 and 900 Series Cutting Platforms
Group 10 - Diesel Fuel System	Group 10 - 40 Series Corn Heads
Group 15 - Control Linkage	Group 15 - 50, 50A Series Row-Crop Heads
SECTION 40 - ELECTRICAL REPAIR	SECTION 110 - FEEDER HOUSE REPAIR
Group 00 - Specifications and Special Tools	Group 00 - Specifications and Special Tools
Group 05 - Harness Replacement	Group 05 - Feeder Conveyor Chain
Group 10 - Charging Circuit Repair	Group 10 - Feeder Conveyor Drum
Group 15 - Starting Circuit Repair	Group 15 - Feeder House Drives and Reverser
Group 20 - Lights, Instruments, and Accessories	Gear Case
ranga kanggalahan mengalah 1980 di Kanggalah mengalah 1980 di Kanggalah mengalah 1980 di Kanggalah 1980 di Kang	Group 20 - Feeder House Drives (SideHill 6620
SECTION 50 - POWER TRAIN REPAIR	Combines) ( -610300)
Group 00 - Specifications and Special Tools	Group 25 - Feeder House Paddles, Stripper and
Group 05 - Clutch	Front Closure Sheets (SideHill 6620
Group 10 - Transmission	Combines [ -403300])
Group 15 - Differential	Group 30 - Feeder Conveyor Chain, Upper Shaft,
Group 20 - Final Drive	Paddle and Shaft, Conveyor Drum and
Group 25 - Sundstrand Hydrostatic Drive	Front Closure Sheets (SideHill 6620
Group 26 - Eaton Hydrostatic Drive	Combines [403301- ]) SECTION 120 - SEPARATOR REPAIR
Group 30 - 4-Wheel Drive (Planetary Gearing)	Group 00 - Specifications and Special Tools
Group 31 - 4-Wheel Drive (Cam Lobe)	Group 05 - Cylinder, Concave, and Beater
Group 35 - Posi-Torq Ground Drive	Group 10 - POSI-TORQ™ Cylinder Drive
Group 40 - Tires and Wheels	Group 12 - Dual-Range Cylinder Drive
SECTION 60 - STEERING/BRAKES REPAIR	Group 15 - Straw Walkers and Crankshafts
Group 00 - Specifications and Special Tools	Group 20 - Straw Chopper and Straw Spreader
Group 05 - Power Steering	Group 25 - Shoe Augers, Fan, and Shoe Frame
Group 10 - Brakes	Group 30 - Tailings Elevator and Augers
TATA CARANTAN AND AND AND AND AND AND AND AND AND A	Group 35 - Lower Auger, Clean Grain Elevator, and
SECTION 70 - HYDRAULIC REPAIR	Grain Tank Loading Auger
Group 00 - Specifications	SECTION 130 - GRAIN TANK UNLOADING
Group 05 - Reservoir	SYSTEM
Group 10 - Hydraulic Pump	Group 00 - Specifications
Group 15 - Hydraulic Valves	Group 05 - Grain Tank Cross Augers
Group 20 - Hydraulic Cylinders	Group 10 - Vertical Auger and Bevel Gears
Group 25 - Hydraulic Motors	Group 15 - Horizontal Auger and Gearcase
Group 30 - Accumulator	

#### CONTENTS

SECTION 140 - MAJOR DRIVES REPAIR Group 00 - Specifications Group 05 - Engine Powershaft Group 10 - Primary Countershaft Group 15 - Secondary Countershaft SECTION 150 - SIDEHILL LEVELING SYSTEM REPAIR Group 00 - Specifications and Special Tools Group 05 - Electrical Components Group 10 - Hydraulic Components SECTION 160 - AUTOMATIC HEADER HEIGHT CONTROL REPAIR Group 00 - Specifications and Special Tools Group 05 - Repair of Components SECTION 220 - ENGINE OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 05 - System Operation Group 10 - System Tests and Diagnosis SECTION 230 - FUEL/AIR OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 05 - Air Intake System Group 10 - Diesel Fuel System Group 15 - Control Linkage SECTION 240 - ELECTRICAL OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 05 - General Information and Diagnosis Group 06 - Electrical System Diagnosis Group 10 - Charging Circuit Group 15 - Starting Circuit Group 20 - Lights, Instruments and Accessory Circuits SECTION 250 - POWER TRAIN OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 05 - Clutch Diagnosis Group 10 - Transmission Diagnosis Group 15 - Final Drive Diagnosis Group 20 - Hydrostatic Drive Tests and Diagnosis Group 25 - 4-Wheel Drive Diagnosis (Planetary Gearing) Group 26 - 4-Wheel Drive (Cam Lobe) Group 30 - Posi-Torq Ground Drive Diagnosis

SECTION 270 - HYDRAULIC OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 01 - Hydraulic System Operation Group 05 - Hydraulic System Tests Group 10 - Reservoir Group 15 - Hydraulic Pumps Group 20 - Hydraulic Valves Group 25 - Hydraulic Cylinders Group 30 - Hydraulic Motors Group 35 - Accumulator SECTION 290 - OPERATOR STATION **OPERATION AND TESTS** Group 00 - Specifications and Special Tools Group 05 - Air Conditioning System Group 10 - Heating System SECTION 350 - SIDEHILL LEVELING SYSTEM OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 05 - General Information, Diagnosis, and Tests Group 10 - Electrical System Group 15 - Hydraulic System SECTION 360 - AUTOMATIC HEADER HEIGHT CONTROL OPERATION AND TESTS Group 00 - Specifications and Special Tools Group 05 - General Information, Diagnosis, and Group 10 - Mechanical System Group 15 - Electrical System Group 20 - Hydraulic System Group 25 - General Information, Diagnosis, and Tests - DIAL-A-MATIC™ Group 30 - Mechanical System - DIAL-A-MATIC Group 35 - Electrical System - DIAL-A-MATIC Group 40 - Hydraulic System - DIAL-A-MATIC All information, illustrations and specifications contained

in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

The specifications given in this technical manual are intended for service only. They do not include normal factory manufacturing tolerances.

> Copyright® 1988 Deere & Company Moline, Illinois All rights reserved.

**Previous Editions** Copyright® 1987, 1986, 1985, 1984, 1983, 1982, 1981, 1980, 1979, and 1978 Deere & Copany

Group 05 - Power Steering

Group 10 - Brakes

SECTION 260 - STEERING/BRAKES OPERATION

AND TESTS

Thank you so much for reading. Please click the "Buy Now!" button below to download the complete manual.



After you pay.

You can download the most perfect and complete manual in the world immediately.

Our support email: ebooklibonline@outlook.com