

655, 755, 855, 955, 756 and 856 Compact Utility Tractors

TECHNICAL MANUAL

**John Deere
Lawn & Grounds Care Division
TM1360 (June 1996)**

Contents

SECTION 10—GENERAL INFORMATION

- Group 05—Safety
- Group 10—Repair Specifications
- Group 15—Repair Information
- Group 20—Fuels, Lubricants, and Coolants
- Group 25—Serial Number Locations

SECTION 20—DIESEL ENGINE REPAIR

- Group 05—Yanmar Diesel Engine Repair
- Group 10—Remove and Install Oil Cooler
- Group 15—Remove and Install Radiator
- Group 20—Remove and Install Diesel Engine

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Fuel Transfer Pump
- Group 10—Fuel Tank
- Group 15—Fuel Tank Tube and Sender
- Group 20—Air Cleaner

SECTION 40—ALTERNATOR REPAIR

- Group 05—Alternator Repair Specifications
- Group 10—Alternator Installation

SECTION 50—POWER TRAIN REPAIR

- Group 05—Hydrostatic Transmission
- Group 10—Transaxle
- Group 15—Final Drives
- Group 20—Mechanical Front Wheel Drive (MFWD)
- Group 25—Power Train Gears and Shafts
- Group 30—Speed Control Linkage

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Standard Front Axle
- Group 10—Steering Valve
- Group 15—Brake Linkage

SECTION 70—HYDRAULICS REPAIR

- Group 05—Hydraulic Pump
- Group 10—Flow Divider and Selective Control Valves (SCV's)
- Group 15—Rockshaft
- Group 20—Hydraulic Hoses

SECTION 80—MISCELLANEOUS REPAIR

- Group 15—Operator's Seat
- Group 20—European Roll-Gard®
- Group 25—German Rear Hitch
- Group 30—3-Point Hitch

SECTION 210—MACHINE OPERATIONAL CHECKOUT PROCEDURE

- Group 05—Machine Operational Checkout Procedure

SECTION 220—ENGINE/FUEL OPERATION AND TESTS

- Group 05—Engine Systems Operational Checkout Procedure
- Group 10—Engine System Diagnosis

SECTION 240—ELECTRICAL OPERATION AND TESTS

- Group 05—Electrical System Checkout
- Group 10—Electrical System Diagnosis
- Group 15—Theory of Operation

SECTION 250—POWER TRAIN OPERATION AND TESTS

- Group 05—Power Train System Checkout
- Group 10—Power Train Tests and Adjustments
- Group 15—Theory of Operation

SECTION 260—STEERING AND BRAKE OPERATION AND TESTS

- Group 05—Steering and Brakes System Checkout
- Group 10—Steering and Brakes Tests and Adjustments
- Group 15—Theory of Operation

SECTION 270—HYDRAULIC OPERATION AND TESTS

- Group 05—Hydraulic System Checkout
- Group 10—Hydraulic System Tests and Adjustments
- Group 15—Theory of Operation

INDEX

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

TM 1360-19-01Jun 96

10

20

30

40

50

60

70

80

210

220

Section 10

General Information

Contents

	Page		Page
Group 05—Safety		Group 25—Serial Number Locations	
Safety Items	10-05-1	Product Serial Number	10-25-1
		Engine Serial Number	10-25-1
Group 10—Repair Specifications		Transaxle Serial Number	10-25-1
General Tractor Specifications	10-10-1	Mower Deck Serial Number	10-25-1
Group 15—Repair Information			
Metric Fastener Torque Values	10-15-1		
Inch Fastener Torque Values	10-15-2		
O-Ring Face Seal Fittings	10-15-3		
O-Ring Boss Fittings	10-15-4		
Group 20—Fuels, Lubricants, and Coolants			
Diesel Fuel—North America	10-20-1		
Diesel Fuel Lubricity—North America	10-20-1		
Diesel Fuel Storage—North America	10-20-1		
Diesel Fuel—Europe	10-20-2		
Diesel Fuel Lubricity—Europe	10-20-2		
Diesel Fuel Storage—Europe	10-20-2		
Engine Oil—North America	10-20-3		
Engine Oil—Europe	10-20-4		
Break-in Engine Oil—North America	10-20-5		
Break-in Engine Oil—Europe	10-20-6		
Hydrostatic Transmission and Hydraulic Oil— North America	10-20-7		
Hydrostatic Transmission and Hydraulic Oil— Europe	10-20-8		
Gear Case Oil (MFWD)—North America	10-20-9		
Gear Case Oil (MFWD)—Europe	10-20-10		
Grease—North America	10-20-11		
Grease—Europe	10-20-12		
North America			
Alternative Lubricants	10-20-13		
Synthetic Lubricants	10-20-13		
Lubricant Storage	10-20-13		
Mixing of Lubricants	10-20-13		
Oil Filters	10-20-13		
Europe			
Alternative Lubricants	10-20-14		
Synthetic Lubricants	10-20-14		
Lubricant Storage	10-20-14		
Mixing of Lubricants	10-20-14		
Oil Filters	10-20-14		
Diesel Engine Coolant—North America	10-20-15		
Diesel Engine Coolant—Europe	10-20-16		

HANDLE FLUIDS SAFELY—AVOID FIRES

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



DX,FLAME -19-04JUN90


10
05
1
-UN-23AUG88
TS227

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

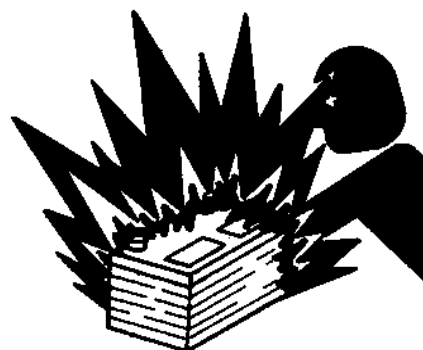

DX,SPARKS -19-04JUN90


-UN-23AUG88
TS204

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

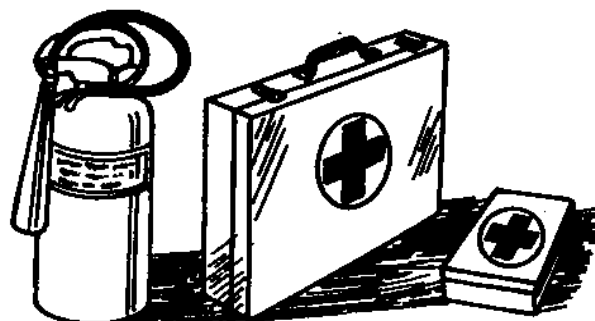

DX,FIRE2 -19-04JUN90

-UN-23AUG88
TS291

PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

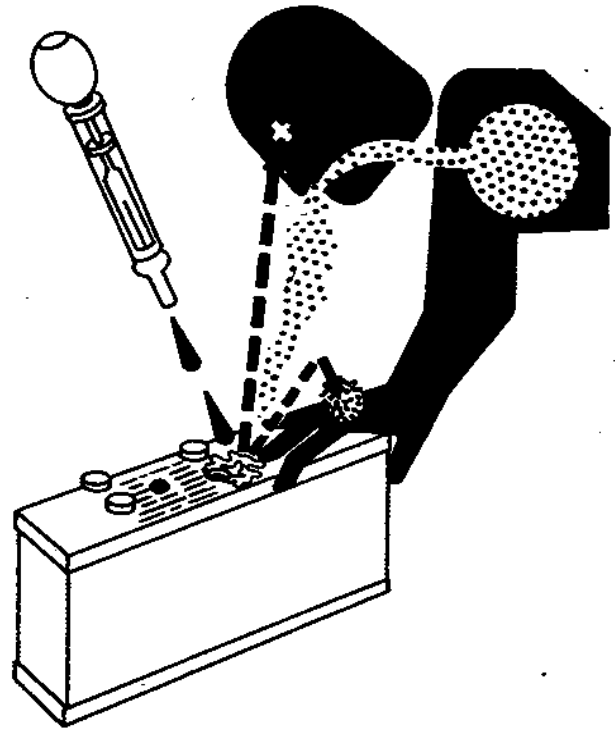

DX, POISON -19-04JUN90

TS203 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com