



**GENERAL MANUAL FOR MODEL
DP.6 PLUS
GIS-READY**

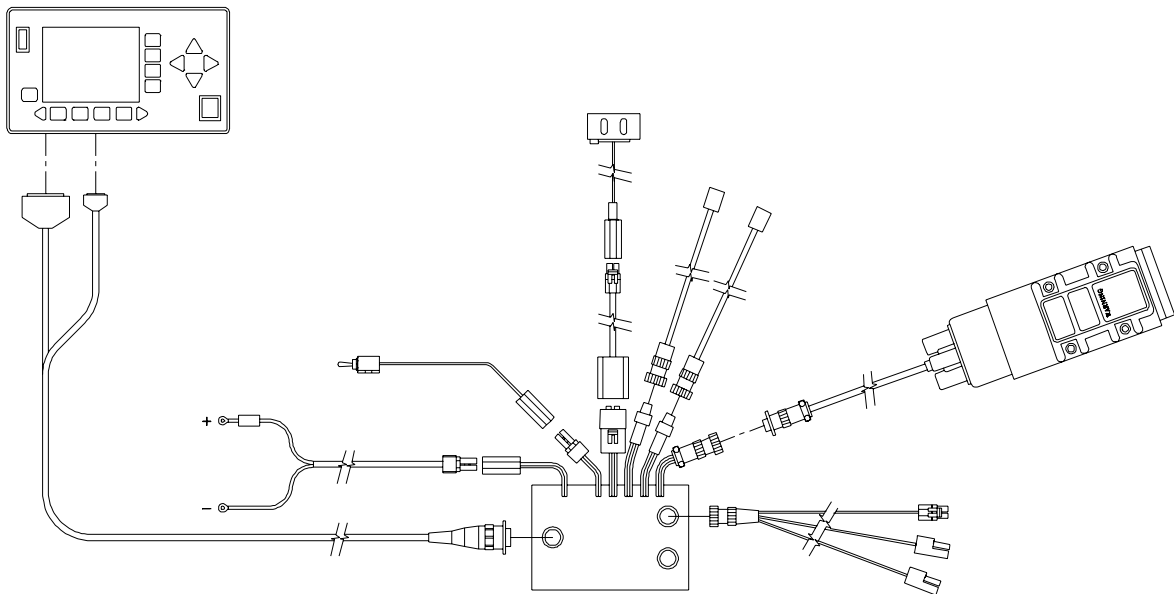

**SAFETY GUIDELINES
INSTALLATION
OPERATION
TROUBLESHOOTING
PARTS LIST**

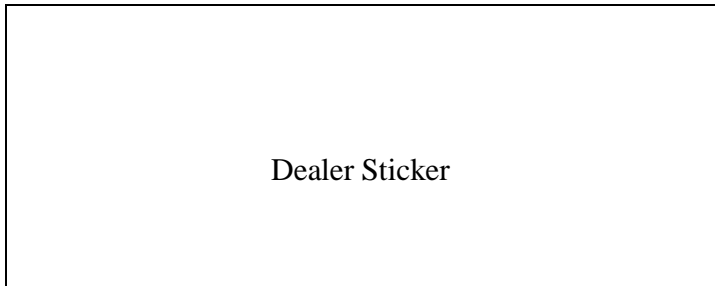

**This unit may have been built with
SPECIAL FEATURES. Provide
SERIAL NUMBER when ordering
parts.**

SERIAL NO. _____

IMPORTANT: READ THE SAFETY GUIDELINES AND ALL INSTRUCTIONS CAREFULLY BEFORE OPERATING

**HIGHWAY EQUIPMENT COMPANY – NEW LEADER DIVISION
1330 76TH AVE SW, CEDAR RAPIDS, IOWA 52404-7052
PH. (319) 363-8281 www.highwayequipment.com FAX (319) 632-3081**

TABLE OF CONTENTS

Warranty	3
Preface	4
Safety	5
General Description	8
Installation Instructions	9
General System Layout	9
Console and Cabling	9
Spinner Sensor	10
Radar	10
Console Overview	11
Keypad and Display	11
Main Screen Display	13
Cable Connections	14
Calibration & Machine Settings	15
Configuration Setup	15
Machine Settings	15
Distance Calibration: Radar	21
Console	22
Card Setup	25
Memory Setup	27
Boundary	28
Programming a Job	32
Job Description	32
Creating the First Job	32
Changing Jobs	40
Activating, Creating New, Editing and Deleting Jobs	41
Fields	42
Logging As Applied Data to Card	45
Operating Procedures	47
Prescription Files	47
Activating Jobs	51
Clearing Total and Area Applied	51
Overriding Active Job Rate	52
Conveyor Switch	53
DGPS-5000 and Lightbar	53
Alarms	54
Troubleshooting	55
GPS Adapter Cable Installation	57
Calibrated CFR	58
Application Charts	61
English/Metric Conversion Chart	63
Instructions for Ordering Parts	64
Parts List	
Control Box & Cables	65
Spinner Sensor	66
Radar	67
Quick Reference Sheets-Setup	68-71



Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com