

# **1600A Mower-Conditioner**

**John Deere Ottumwa Works  
OME83188 Issue J3**

LITHO IN U.S.A.  
ENGLISH

# Contents

	Page		Page
<b>Safety</b> .....	05-1	Producing Uniform Windrows:	
<b>Safety Signs</b> .....	10-1	Augers .....	35-4
<b>Preparing the Tractor</b>		Conditioner .....	35-4
Adjusting the Drawbar .....	15-1	Cutterbar .....	35-5
Attaching Hitch to Drawbar .....	15-1	Gauge Shoes and Carrier Frame	
Checking Ballast .....	15-2	Height .....	35-5
Selecting Tractor PTO Speed .....	15-2	Ground Speed .....	35-5
Setting Hydraulic Outlets .....	15-2	Knife Hold-Downs .....	35-6
Tractor Electrical Hookup .....	15-3	Knife Overlap .....	35-6
Changing 3-Pin Convenience Outlet to		Platform Float .....	35-6
Socket Outlet .....	15-3	Platform Guard Angle .....	35-7
Using Drawbar Shield .....	15-4	Reel .....	35-7
<b>Preparing the Mower-Conditioner</b>		Cutting	
Checking Tire Inflation .....	20-1	Alfalfa .....	35-8
Checking Wheel Bolt Torque .....	20-1	Grass .....	35-9
<b>Attaching and Detaching</b>		Tall Crop .....	35-10
Attaching Mower-Conditioner to Tractor		<b>Attachments</b> .....	40-1
Hitch .....	25-1	<b>Lubrication and Maintenance</b>	
Detaching Mower-Conditioner from		Lubrication	
Tractor Hitch .....	25-2	Grease .....	45-1
Attaching Mower-Conditioner with		Hydrostatic Drive Oil .....	45-2
Three-Point Hitch .....	25-3	Knife Drive Case Oil .....	45-2
Detaching Mower-Conditioner with		As Required .....	45-3
Three-Point Hitch .....	25-5	Every 10 Hours .....	45-3
<b>Transporting</b> .....	30-1	Every 50 Hours .....	45-6
<b>Operating the Mower-Conditioner</b>		Maintenance	
Prestarting Checks .....	35-1	Checking Bolt Torque .....	45-8
Breaking in the Mower-Conditioner .....	35-2	Checking Tire Inflation .....	45-9
Engine RPM and Ground Speed .....	35-2	Checking Wheel Bolt Torque .....	45-9
Opening a New Field .....	35-3	<b>Troubleshooting</b> .....	50-1
Turning in Field .....	35-3	<b>Service</b>	
Dirt or Mud Buildup .....	35-4	Practice Safe Service Procedures .....	55-1
		Unplugging Machine .....	55-1
		Working on Hydrostatic System .....	55-1
		Tightening Bearing Locking Collars .....	55-2

Continued on next page

*All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

OME83188 J3-19-25FEB97

COPYRIGHT© 1993  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
A John Deere ILLUSTRATION™ Manual

Contents

	<b>Page</b>		<b>Page</b>
<b>Adjusting:</b>		<b>Electrical</b>	
Auger to Upper and Lower Stripper		Wiring Harness - Warning lights . . . . .	55-48
Clearance . . . . .	55-2	<b>Hydraulic</b>	
Auger to Center Stripper Clearance . . . . .	55-2	Hydraulic Drive Diagram . . . . .	55-49
Carrier Frame Height . . . . .	55-3	Hydraulic Steering and Lift Diagram . . . . .	55-50
Conditioner Roll Sprockets . . . . .	55-6	Phasing Cylinders . . . . .	55-51
Conditioner Roll Adjusting Bolt . . . . .	55-6	<b>Reel Teeth</b>	
Conditioner Roll Pressure . . . . .	55-7	Replacing Right-Hand and Center	
Conditioner Roll Spacing . . . . .	55-8	Section . . . . .	55-51
Conditioner Roll Timing . . . . .	55-9	Replacing Left-Hand Section . . . . .	55-52
Guard Angle . . . . .	55-10	<b>Storage</b> . . . . .	60-1
Guard Angle—Electric Guard Angle		<b>Specifications</b> . . . . .	65-1
Controller . . . . .	55-11	<b>Crime Prevention Tips</b> . . . . .	70-1
Gauge Shoes . . . . .	55-12	<b>Index</b>	
Platform Float . . . . .	55-13		
Reel . . . . .	55-14		
Reel Cam . . . . .	55-15		
Reel Speed . . . . .	55-17		
Reel Cam Followers . . . . .	55-18		
Wheel Bearings . . . . .	55-19		
Windrow Width . . . . .	55-19		
<b>Cutterbar</b>			
Timing Knives . . . . .	55-20		
Removing Knives . . . . .	55-21		
Installing Knives . . . . .	55-21		
Installing Regular Guards . . . . .	55-22		
Installing Non-Clog Guards . . . . .	55-29		
Adjusting Regular Knife Hold-Down . . . . .	55-31		
Adjusting Non-Clog Knife Hold-Downs . . . . .	55-32		
Knife Sections . . . . .	55-32		
Replacing Bolt-On Knife Sections . . . . .	55-33		
Replacing Center Knife Sections . . . . .	55-34		
Sharpening Knife Sections . . . . .	55-35		
<b>Drive Belts</b>			
Adjusting Knife Drive Belt (Both Sides) . . . . .	55-35		
Adjusting Reel Drive Belt . . . . .	55-35		
Adjusting Auger Drive Belt . . . . .	55-36		
Adjusting Platform Drive Belt . . . . .	55-36		
Aligning Knife Drive Belt . . . . .	55-36		
Care of V-Belts . . . . .	55-37		
Replacing Knife Drive Belt (Both Sides) . . . . .	55-38		
Replacing Reel Drive Belt . . . . .	55-38		
Replacing Platform Drive Belt . . . . .	55-39		
Replacing Auger Drive Belt . . . . .	55-40		
<b>Drive Chains</b>			
Installing O-Ring Connector Link . . . . .	55-42		
Care of Chains . . . . .	55-43		
Adjusting Auger Drive Chain Tension . . . . .	55-44		
Replacing Auger Drive Chain . . . . .	55-44		
Replacing Conditioner Drive Chain . . . . .	55-45		

# Safety

## RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

## UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


## FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

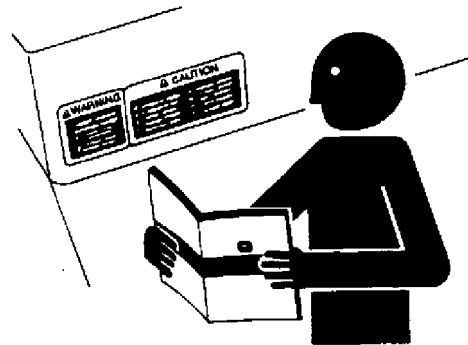

DX,READ -19-03MAR93


TS201 -UN-23AUG88



## OPERATE MOWER-CONDITIONER SAFELY

Be sure bystanders stand clear before operating mower-conditioner.

Provide sufficient weight to stabilize tractor when operating on hilly land or other adverse conditions.

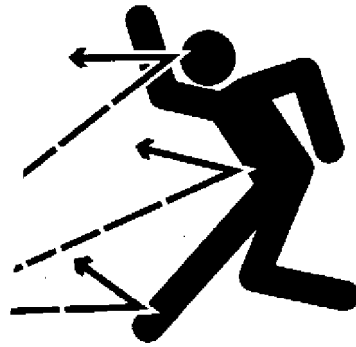


EX,1600C,A -19-12JUL90

TS265 -UN-23AUG88

## KEEP RIDERS OFF MACHINE

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

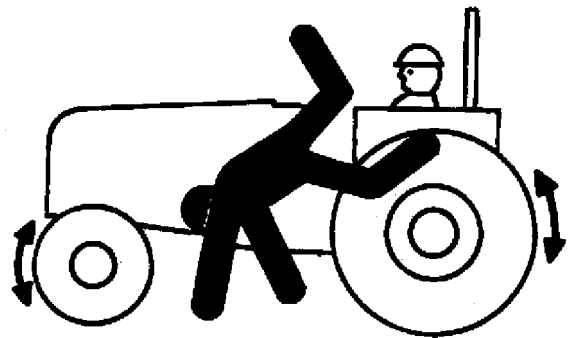

DX,RIDER -19-03MAR93


TS290 -UN-23AUG88

## PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

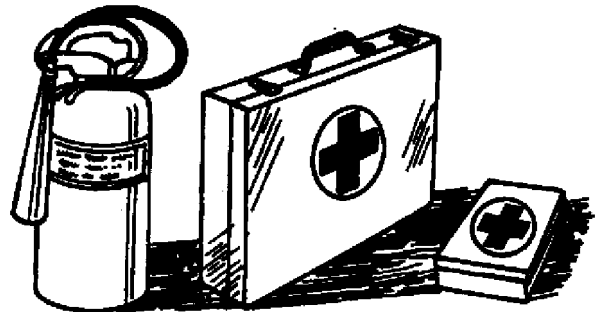


DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88

## WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

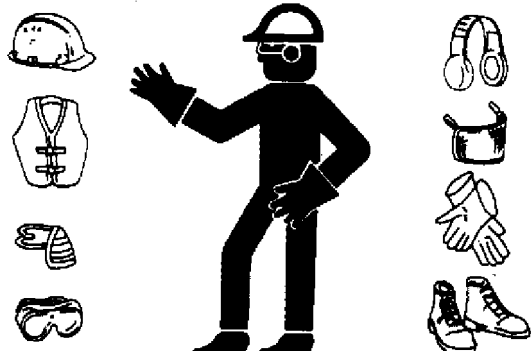

DX,WEAR2 -19-03MAR93

TS206 -UN-23AUG88




## HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)

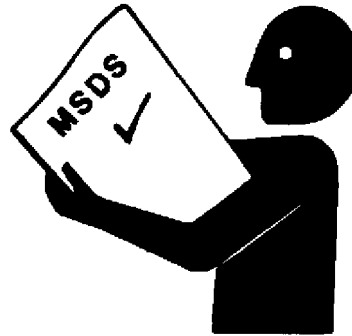

DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

## PROTECT AGAINST NOISE

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



DX,NOISE -19-03MAR93

TS207 -UN-23AUG88

## STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-03MAR93

TS198 -UN-23AUG88




## USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driven on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

Whenever driving on public roads, use flashing warning lights and turn signal according to local regulation. To increase visibility, use the lights and devices provided with your machine. For some equipment, install extra flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

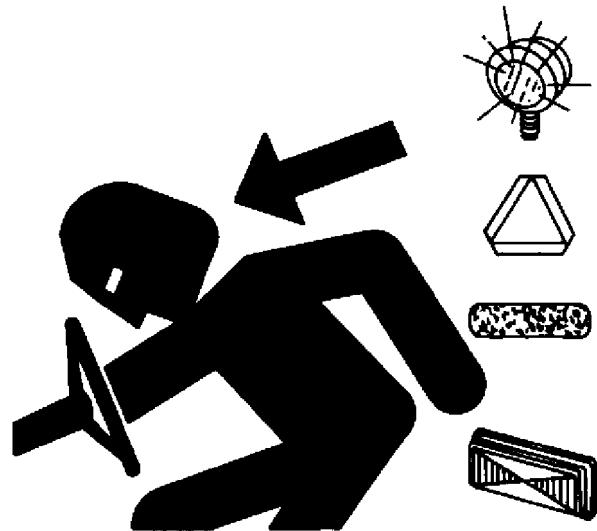

DX,FLASH -19-15MAR93


TS951 -UN-12APR90

## USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

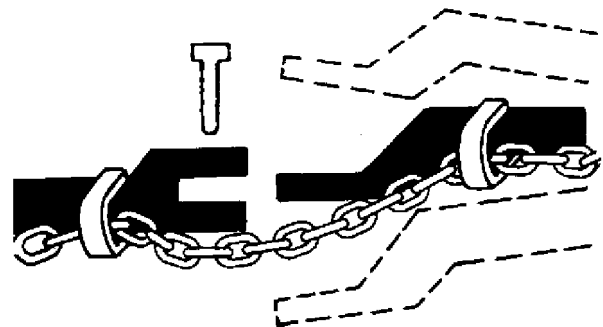

DX,CHAIN -19-03MAR93

TS217 -UN-23AUG88




## REDUCE SPEED WHEN TOWING LOADS

Braking to stop towed loads from transport speeds can cause the towed load to swerve and upset. Reduce speed if towed load weighs more than the tractor and is not equipped with brakes.

Follow recommended speed-weight ratio guidelines:

- Maximum speed is 32 km/h (20 mph) when towing load equal to or less in weight than the tractor.
- Reduce speed to 16 km/h (10 mph) when towing load up to double the tractor weight.
- Do not tow loads exceeding double the tractor weight.
- Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

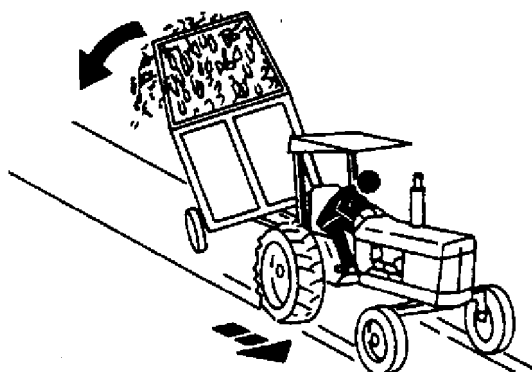

TS216 -UN-23AUG88

DX,TOW -19-03MAR93

## PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



TS216 -UN-23AUG88

DX,SERV -19-03MAR93





## REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

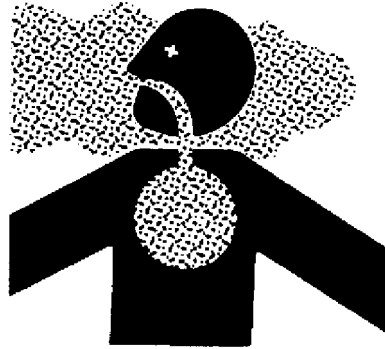

DX,PAINT -19-03MAR93

TS220 -UN-23AUG68

## AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90




## AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

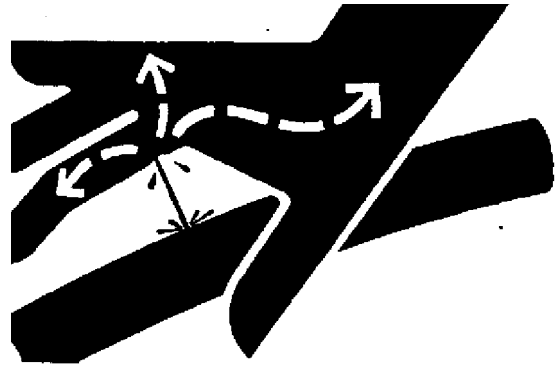

X9811 -JUN-23AUG88

DX,FLUID -19-03MAR93

## DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

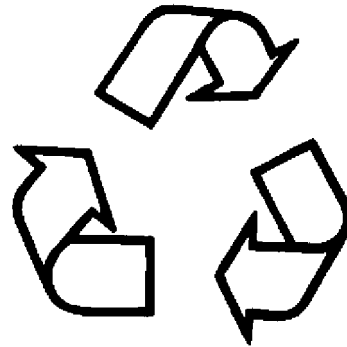


TS1133 -JUN-26NOV90

DX,DRAIN -19-03MAR93

# Safety Signs




E35998 -UN-16JUL91

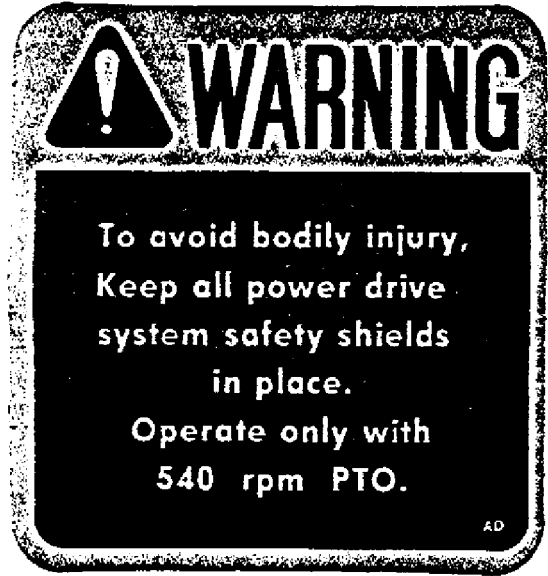

EJD5438 -19-15JUL91

(A)

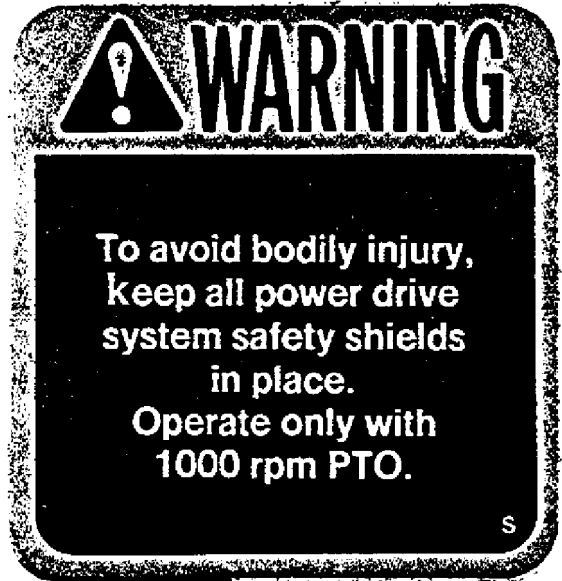

EJD5439 -19-15JUL91

(A)

EX,1600Z,D -19-01JUL91

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)