

466 and 566
Round Balers
(Serial No. 114001-)

John Deere Ottumwa Works
OME92593 Issue L7
(This manual replaces OME86581 H6)

LITHO IN U.S.A.
ENGLISH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should

it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty applicable to your machine may not apply outside the U.S.



John Deere 466 Round Baler

E40014
-UN-28MAY96

Contents

	Page		Page
Safety	05-1	Preparing Baler for Net Wrap	
Safety Signs	10-1	Selecting Net Wrap Material	25-1
Preparing the Tractor		Care of Net Wrap Material	25-1
Adjusting the Drawbar	15-1	Additional Net Wrap Storage	25-1
Using Heavy-Duty Tractor Drawbar	15-2	Opening and Closing Net Wrap Cover	25-2
Using Drawbar Shield	15-3	Using Net Wrap After Extended Storage	25-2
Making Drawbar Shield	15-3	Manually Releasing Net Wrap Brake	25-7
Three-Point Hitch Position	15-3	Threading Net Wrap and Routing	
Adjusting Tractor Wheels	15-4	Through Rolls	25-8
Checking Ballast, Wheel Spacing and		Attaching and Detaching	
Tire Inflation	15-4	Attaching Baler to Tractor Drawbar	30-1
Setting Tractor Hydraulic Outlets	15-5	PTO Driveline	
Tractor Convenience Outlet	15-5	Assembling (If Necessary)	30-2
Installing BaleTrak® PLUS		Connecting	30-3
Monitor-Controller on Tractor		Attaching to Tractor Hydraulic System	30-4
Open-Station	15-7	Using Tractor Convenience Outlet	30-6
ComfortGard™ Cab	15-7	Connecting Baler Wiring Harness to	
SOUND-GARD® Cab	15-8	Tractor	30-6
Using Extended Rear-View Mirror	15-9	Connecting Warning Light Wiring Harness	
Preparing the Baler		to Tractor	30-7
Checking Oversize Bale Switch	20-1	Detaching Baler from Tractor	30-8
Selecting Twine	20-1	Transporting	35-1
Loading Twine Boxes	20-2	Handling Round Bales	40-1
Routing Twine from Left-Hand Twine Box		Operating the Baler	
(Front Arm)	20-3	How the Baler Forms a Bale	45-1
Routing Twine from Right-Hand Twine		Crop Preparation	45-2
Box (Rear Arm)	20-6	Breaking In Baler	45-2
Wheel Spindle Positions 11L-14 Tires		Keep Riders Off Machine	45-3
Regular or Mega Pickup	20-9	Rotating Output Shaft By Hand	45-3
Wide Pickup (466)	20-10	BaleTrak® PLUS Monitor-Controller	
Wheel Spindle Positions 31 x 13.5-15		Introduction	45-4
Tires		Description	45-5
Regular or Mega Pickup	20-11	Keys and Switches	45-6
Wide Pickup (466)	20-12	Displays and Indicators	45-7
Adjusting Wheel Spindles	20-12	Setup Values and Initial Settings	45-8
Tire Inflation	20-13		
Checking Wheel Nut Torque	20-13		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OME92593 L7-19-20DEC97

COPYRIGHT© 1997
DEERE & COMPANY
Moline, Illinois
All rights reserved
A John Deere ILLUSTRATION® Manual
Previous Editions
Copyright 1996 Deere & Company

Contents

	Page		Page
<i>BaleTrak® PLUS Monitor-Controller—Continued</i>			
Diagnostic and Setup Modes	45-9	Checking Baler Performance in the Field . . .	45-46
Diagnostic and Setup Channels	45-10	Locking the Gate	45-47
Operating	45-11	Unplugging Baler With Hydraulic Pickup	
Resetting to Initial Settings (Channel		Lift (If Equipped)	45-48
01)	45-12	Unplugging Baler Under Power	45-49
Activating Alarms	45-13	Compressor Rack Assembly	
Adjusting Audible Alarm Volume	45-13	Removing	45-50
Setting Bale Diameter	45-14	Installing	45-51
Adjusting Bale Diameter Display	45-15	Adjusting (Regular/Mega Pickup)	45-52
Understanding Variable Core Feature	45-16	Adjusting Channel (Mega Pickup)	45-53
Adjusting Variable Core Diameter	45-17	Setting Pickup Feeder Forks (Wide	
Understanding Twine Wrap Terms and		Pickup—466)	45-53
Settings	45-19	Starting a Bale in Difficult Conditions	45-54
Setting Twine Spacing	45-21	Baling	
Setting Number of Twine End Wraps	45-22	Short, Dry, Slick Crops	45-55
Setting Twine End Wrap Distance	45-23	Cornstalks	45-56
Setting Number of Net Wraps (If		Long, Stiff, Cane-Type Crops	45-57
Equipped)	45-25	Wet Hay	45-58
Recommended Baling Guidelines	45-26	Fire Prevention	45-59
Interpreting Bale Shape Indicators	45-27	Extinguishing a Fire	45-59
Weaving in the Windrow	45-29	Bale Push Bar (If Equipped)	
Viewing and Resetting Bale Counters	45-30	Operation	45-60
Using Manual Actuator, Wrap, and		Operating	45-61
By-Pass Switches	45-31	Locking Out	45-63
Using By-Pass Switch (Twine Wrap)	45-32	Engaging	45-64
Advanced Operational Information		Attachments	50-1
Using Dry Straw Twine Wrap Program		Lubrication and Maintenance	
(Channel 17)	45-33	Grease	55-1
Setting Bale Shape Sensitivity (Channel		Gear Case Oil	55-1
24)	45-34	Alternative and Synthetic Lubricants	55-2
Setting Near-Full Indicator Set Point		Observe Lubrication Symbols	55-2
(Channel 25)	45-35	Perform Lubrication and Maintenance	55-3
Adjusting New Wrap Delay (Channel		Fire Prevention	55-3
26)	45-36	Lubrication and Maintenance	
Adjusting Bale Shape Bars (Channel		Every 10 Hours	55-4
28)	45-37	Every 30 Hours	55-8
Changing Monitor-Controller Display to		Every 50 Hours	55-10
Metric or English Units	45-38	Every 100 Hours	55-11
Changing Baler Model Program	45-39	Annually	55-11
Bale Density Gauge	45-40	Troubleshooting	
Adjusting		PTO Driveline Difficulties	60-1
Bale Density	45-41	Main Drive Slip-Clutch Difficulties	60-2
Twine Tension	45-41	Drive Chain Difficulties	60-2
Pickup Height	45-43	Gear Case Difficulties	60-3
Gauge Wheels—Regular or Mega		Diagnosing Hydraulic Functions	60-4
Pickup	45-44	Automatic Twine Wrap	60-7
Gauge Wheels—Wide Pickup (466)	45-45		
Gathering Wheel Height	45-45		

Continued on next page

Contents

	Page		Page
BaleTrak® PLUS Monitor-Controller		Adjusting	
Difficulties	60-15	Take-Up Arm Compression Spring	65-28
Feeding Difficulties	60-26	Twine Indicator Retaining Strap	65-29
Pickup Difficulties	60-29	Twine Cutter Tension	65-30
Bale Quality	60-33	Cutter Link Support and Twine Arm	
General Baler Difficulties	60-35	Clearance	65-33
Push Bar Difficulties	60-41	Twine Arm Distance from Right	
High-Moisture Kit Difficulties	60-43	Sidesheet (466)	65-34
Net Wrap Difficulties	60-45	Front Twine Arm	65-35
		Twine Cutter to Twine Arm	65-36
Service—Baler		Twine Arm Timing (566)	65-37
Practice Safe Service Procedures	65-1	Checking Knife Adjustment	65-38
Fire Prevention	65-2	Twine Electric Actuator Installation	
Keep Service Area Clean	65-3	Adjustment	65-39
Service Tires Safely	65-4	Adjusting Twine Arm to Starter Roll and	
BaleTrak® PLUS Component Locations	65-5	Twine Arm Stop	65-43
Wiring Diagrams		Adjusting Pickup Float Springs	
BaleTrak® PLUS Control System	65-6	Regular Pickup	65-48
Warning Light	65-7	Mega Pickup	65-49
Replacing Monitor Fuses and Relays	65-8	Wide Pickup (466)	65-50
Hydraulic System Diagram	65-10	Adjusting Pickup Lift Crank Stop Nuts	
Installing Orifice in Tractors With Low		(Wide Pickup—466)	65-51
Hydraulic Flow	65-11	Hydraulic Pickup Lift Cylinder Dimension	65-52
Pickup Idler Spring Dimension (Regular		Checking Pickup Tooth End Play	65-53
Pickup)	65-13	Adjusting Gate Latch Stop	65-54
Adjusting		Adjusting Gate Latch Linkage	65-54
Pickup Belt Idler (Regular Pickup)	65-14	Replacing Sensors	
Pickup Drive Chain—Mega Pickup	65-15	Twine Wrap	65-55
Pickup Chains—Wide Pickup (466)	65-15	Bale Diameter	65-55
Lower Drive Roll Chain	65-16	Bale Shape	65-56
Upper Drive Roll Chain	65-16	Adjusting	
Servicing Upper Chain and Idler	65-17	Twine Wrap Sensor (Channel 03—With	
Replacing Chain Idler Bushing	65-17	Sound)	65-56
Main Drive Slip-Clutch		Bale Diameter Sensor (Channel	
Adjusting	65-18	05—With Sound)	65-59
Slipping	65-19	Bale Shape Bar Display (Channels 07	
Checking Pickup Slip-Clutch Torque		and 09)	65-60
(Mega or Wide—466 Pickup)	65-20	Bale Shape Sensor (Channels 07 and	
Belt Tracking		09—With Sound)	65-61
Checking	65-23	Testing Switches	
Adjusting	65-24	Gate Latch and Oversize Bale	
Adjusting Scraper(s)		Switches (Channels 11-12-13)	65-62
Lower Feed Roll	65-26	Twine Wrap Actuator Current (Channel	
Starter Roll (If Equipped)	65-27	14)	65-63
Idler Roll (High-Moisture Kit)	65-27	Tractor Convenience Outlet Voltage	
Auger Scrapers (Wide Pickup—466)	65-28	(Channel 15)	65-64
		Liquid Crystal Display (LCD) Panel	
		(Channel 16)	65-65

Continued on next page

Contents


	Page		Page
Adjusting Switches		Bolt and Cap Screw Torque Value Charts	
Oversize Bale	65-66	Metric	80-7
Gate Latch	65-67	Inch	80-8
Checking Microswitches	65-67	Crime Prevention Tips	85-1
Raising Gate With Hoist	65-68	Index	
Checking Belt Pins	65-68		
Correct Belt Lacing and Pin Installation	65-69		
Incorrect Belt Lacing and Pin Installation	65-70		
Installing Belts	65-71		
Repairing Belts	65-72		
Belts Not Eligible for Warranty			
Replacement	65-78		
Service—Net Wrap			
Practice Safe Service Procedures	70-1		
Releasing Feed Roll Brake	70-2		
Correcting Net Wrap Feeding Problems	70-3		
Repairing Cuts On Feed Roll	70-6		
Brake Bar Tension			
Decreasing	70-7		
Increasing	70-8		
Adjusting Knife Arm Stop	70-9		
Checking Feed Roll Brake	70-12		
Adjusting Feed Roll Pressure	70-14		
Net Wrap Switch			
Testing (Channel 10)	70-15		
Adjusting	70-16		
Checking Cutoff Indicator Channel Travel	70-19		
Knife			
Removing and Installing	70-21		
Sharpening	70-24		
Actuator			
Removing	70-24		
Installing	70-26		
Removing and Installing Net Wrap V-Belt	70-29		
Net Wrap V-Belt Idler Arm			
Removing and Installing	70-30		
Checking Adjustment	70-30		
Adjusting Net Wrap Roll Support Brackets	70-32		
Checking and Adjusting Lower Net Wrap			
Guide	70-33		
Storage	75-1		
Specifications			
Machine Specifications			
BaleTrak® PLUS Monitor-Controller	80-1		
466 Baler	80-2		
566 Baler	80-4		
Record Product Identification Numbers	80-6		

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

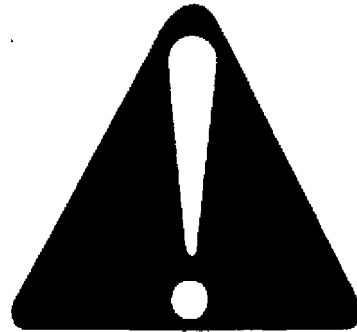

DX,ALERT -19-03MAR93

T81389 -UN-07DEC68

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93

TS187 -19-30SEP88


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

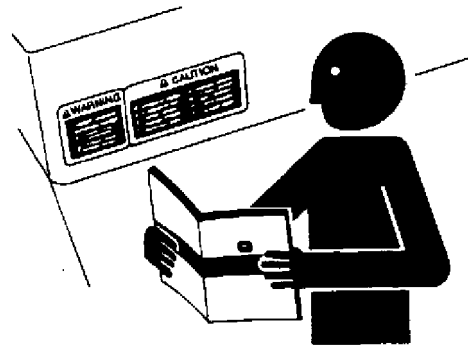


DX,READ -19-03MAR93

TS201 -UN-23AUG88



PROTECT BYSTANDERS

To prevent crushing injury be sure bystanders stand clear before operating gate and unloading bale.

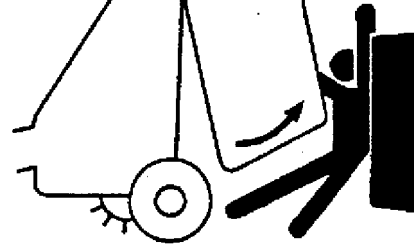


EX,435C,A -19-01SEP88

E32162 -UN-12SEP88

OPERATE BALER SAFELY

To avoid injury or death by being pulled into the machine:

- DO NOT attempt to feed crop or twine into baler or unplug feed area WHILE BALER IS RUNNING. The baler feeds material faster than you can release it.
- Disengage PTO and shut off engine.
- Stand clear of baler at all times when machine is operating.

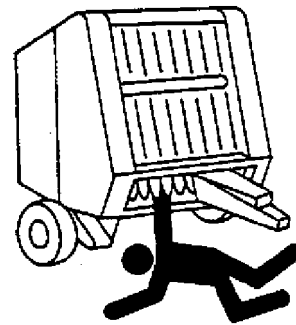


EX,435C,B -19-01SEP88

E32161 -UN-12SEP88

OPERATE SAFELY ON SLOPES

Be especially careful when operating on hillsides. The baler may tip sideways if it strikes a hole, ditch, or other irregularity.

To prevent injury or damage from a rolling bale, discharge bales on level ground or in such a manner that the bale will not roll.

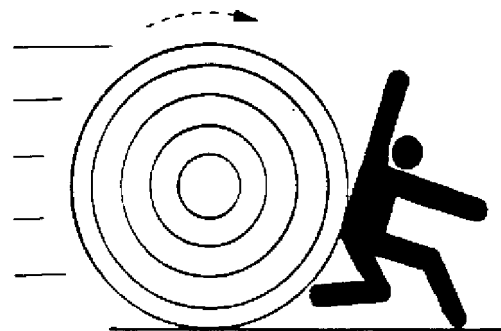

EX,435C,C -19-14JUL92

E36866 -UN-30APR92




HANDLE ROUND BALES SAFELY

To help prevent personal injury, do not handle round bales without approved John Deere Round Bale Handling attachments.

Improper use of loaders to handle round bales can result in serious injury or death to the tractor/loader operator. This could be caused by the bale rolling back down the loader into the operator's station.

To attain optimum stability and visibility:

- Do not handle bales that exceed the bale weight limitations of the loader.
- Carry the bale slowly and as low as possible to the ground.
- Operate the loader controls smoothly, avoiding jerky operation.
- When handling round bales on a slope, always approach the bale with the tractor facing uphill.
- Never use the tractor/loader to stop a rolling bale.

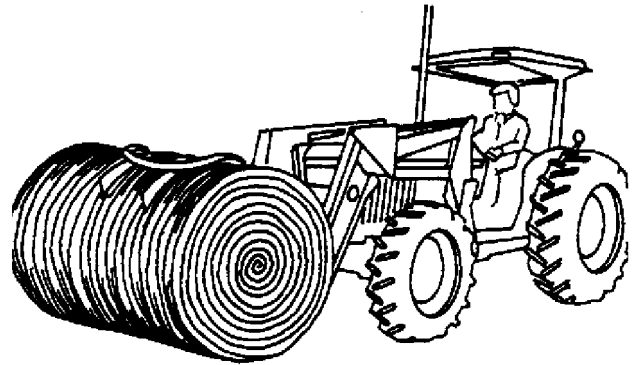

W7718 -UN-06OCT88

EX,435C,D -19-01SEP88

KEEP RIDERS OFF MACHINE

Keep riders off.

Riders are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.



TS249 -UN-23AUG88

EX,945IC,H -19-13FEB97



PREPARE FOR EMERGENCIES


Be prepared if a fire starts.

1. Eject bale immediately.
2. Move tractor and baler upwind 9 m (30 ft) away from flammable material.
3. Raise gate and engage gate lock valve.
4. Use fire extinguisher or other water supply to put out fire.

- A 9.5 L (2-1/2 gal) pressurized-water fire extinguisher is recommended. See manufacturer's recommendation for inspection and maintenance.

Keep first aid kit handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

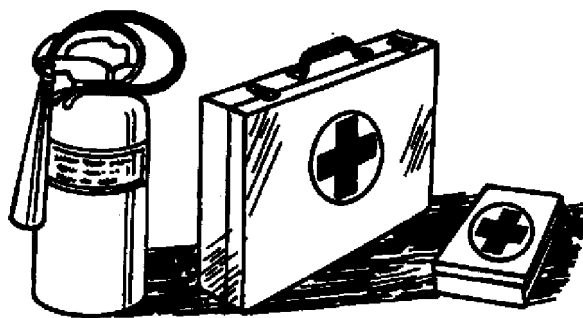

-UN-23AUG68

TS291

EX,435C,J -19-25OCT96



FIRE PREVENTION

To reduce the risk of fire, follow these guidelines, especially in dry crop conditions:

- Equip the baler with a water-type fire extinguisher. Large capacity water fire extinguishers are recommended because application of water can cool hot parts to prevent a fire. (See Attachments section.)
- Keep foreign material (crop, chaff, twine, net wrap material, etc.) from building up on the machine near potentially hot areas, such as bearings on ends of baler rolls and slip clutch. Remove this buildup as part of the regular service operations.
- Avoid high pressure power-washing adjacent to the bearings on ends of baler rolls to prevent damaging seals.
- Check bearings on ends of baler rolls regularly for early signs of failure replace as necessary. (See Lubrication and Maintenance section or see your John Deere dealer.)
- If noticeable changes in machine performance occur which might indicate a part is beginning to fail, stop baling immediately and investigate the cause of any sounds, smells, or sights which are unusual.
- Promptly eject bales after they have been tied or wrapped. Do not use the baler to transport bales from the field. Do not bring a baler, with a bale inside it, into a building. Never leave a baler unattended with a bale inside the chamber.
- Use extreme care if it is necessary to park a baler in a field of dry crop or stubble. Whenever possible, park baler on bare ground or in an area surrounded by bare ground. Before leaving a baler which has been operating, verify there are no areas which are hot enough to start a fire. Do not leave the baler unattended near bales which have been baled wet, because spontaneous combustion can occur.
- If service operations require using a welder, cutting torch or grinder on the baler, refer to Fire Prevention in Service—Baler section for guidelines which may prove useful in preventing a fire.
- Use extreme care when smoking around the baler.





IN CASE OF FIRE

Stop baling immediately at the first sign of trouble. This may be a scorched smell, an unusual sound, or the sight of smoke or flame.

Do not risk personal injury. If a fire is too far advanced, do not try to extinguish it.

If you can safely extinguish the fire, proceed carefully and follow these guidelines:

- Position the tractor upwind from the baler to avoid the fire from overtaking the tractor.
- Open the baler gate to eject any crop material from the bale chamber, and drive away from this material.
- Use a fire extinguisher or other source to spray water at the base of the flame, and to cool adjacent parts. Do not position yourself under an open baler gate. It may fall if baler is on fire.



EX,566C,O -19-05SEP97

TS227 -UN-23AUG88


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

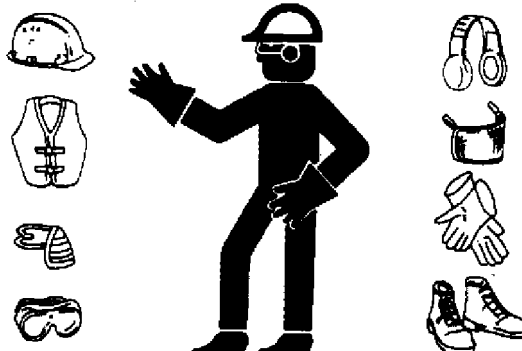

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88



HANDLE CHEMICAL PRODUCTS SAFELY

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)



DX,MSDS,NA -19-03MAR93

TS1132 -UN-26NOV90

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95


TS1644 -UN-22AUG95



USE SAFETY LIGHTS AND DEVICES

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use hand signals or turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

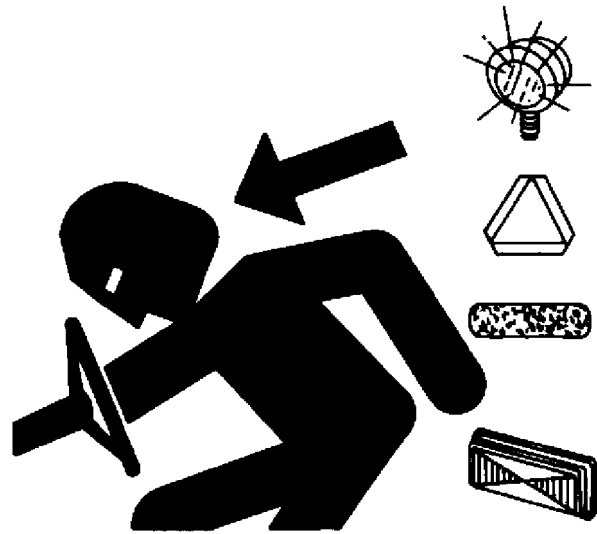

DX,FLASH -19-12SEP95


TSS951 -UN-12APR90

USE A SAFETY CHAIN

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

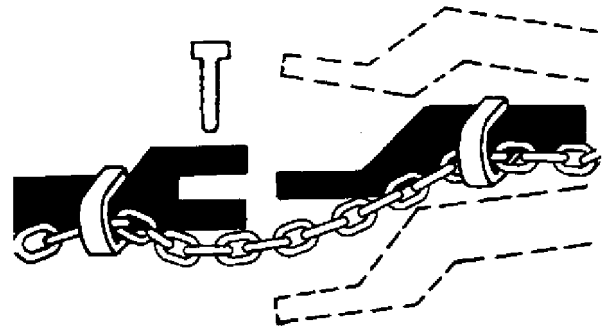

DX,CHAIN -19-03MAR93

TSS217 -UN-23AUG88




TOW LOADS SAFELY

Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control. Consider the total weight of the equipment and its load.

Observe these recommended maximum road speeds, or local speed limits which may be lower:

- If towed equipment does not have brakes, do not travel more than 32 km/h (20 mph) and do not tow loads more than 1.5 times the tractor weight.
- If towed equipment has brakes, do not travel more than 40 km/h (25 mph) and do not tow loads more than 4.5 times the tractor weight.

Ensure the load does not exceed the recommended weight ratio. Add ballast to recommended maximum for tractor, lighten the load, or get a heavier towing unit. The tractor must be heavy and powerful enough with adequate braking power for the towed load. Use additional caution when towing loads under adverse surface conditions, when turning, and on inclines.

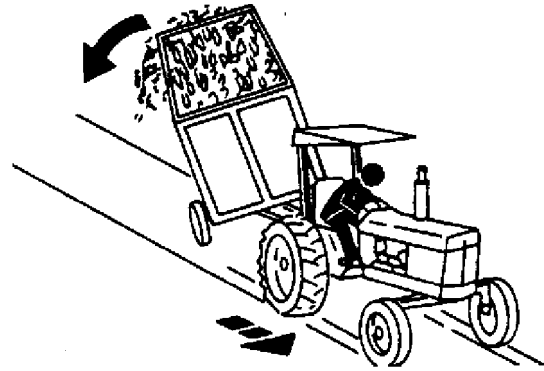

TS216 -UN-23AUG68

DX,TOW

-19-02OCT95



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-03MAR93

TS218 -UN-23AUG88

REMOVE PAINT BEFORE WELDING OR HEATING


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Do all work outside or in a well ventilated area. Dispose of paint and solvent properly.

Remove paint before welding or heating:

- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

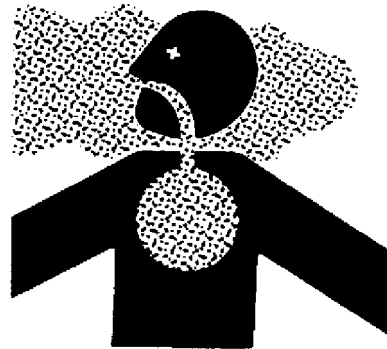

DX,PAINT -19-03MAR93

TS220 -UN-23AUG88



AVOID HEATING NEAR PRESSURIZED FLUID LINES

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can be accidentally cut when heat goes beyond the immediate flame area.



DX,TORCH -19-03MAR93

TS953 -UN-15MAY90


AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

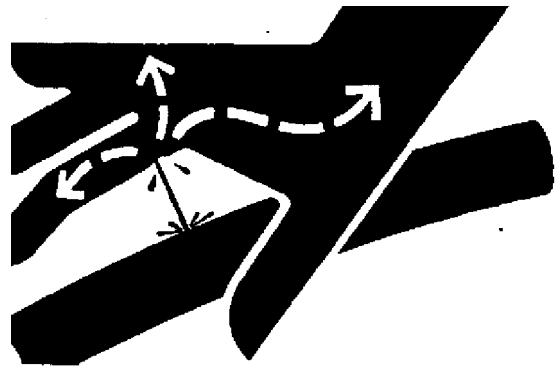

DX,FLUID -19-03MAR93

X9811 -UN-23AUG88



DISPOSE OF WASTE PROPERLY


Improperly disposing of waste can threaten the environment and ecology. Potentially harmful waste used with John Deere equipment include such items as oil, fuel, coolant, brake fluid, filters, and batteries.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere dealer.

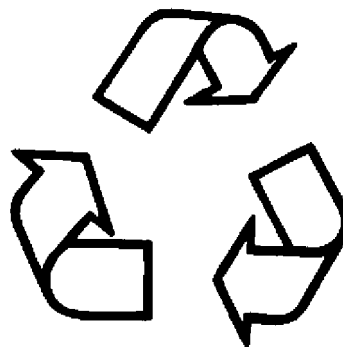

TS1133 -UN-26NOV90

DX,DRAIN -19-03MAR93

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com