

**6610, 6710,
6810 and 6910
Self-Propelled
Forage Harvesters**

**John Deere Werke Zweibrücken
OMZ92145 Issue H2**

European Edition
Printed in Germany
ENGLISCH

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS FORAGE HARVESTER IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS FORAGE HARVESTER SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this forage harvester will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification View	00-1	Automatic Kernel Processor Roll Clearance	20-20
Safety		Manual Kernel Processor Roll Clearance	20-21
General	05-1	Lighting System and Signals	
Operation	05-6	Parking Lights/Low-Beam Headlights	25-1
Service	05-12	Full-Beam Headlights	25-1
Safety Decals	10-1	Turn Signals	25-2
Controls and Instruments		Work Lights	25-4
General View	15-1	Revolving Hazard Warning Lights	25-5
Switch Console	15-2	Hazard Warning Lights	25-5
Multi-Function Lever	15-5	Indicator Light Test	25-6
Corner Post	15-6	Operator's Cab	
Roof Switch Console	15-7	Operator's Seat	30-1
Roof Console	15-8	Lumbar Support	30-2
Automatic Function Control	15-9	Left-Hand Armrest	30-2
Steering Column	15-10	Right-Hand Armrest	30-2
Switch Console — Functions	15-11	Ashtray	30-4
Multi-Function Lever — Functions	15-18	Passenger Seat	30-4
Roof Switch Console — Functions	15-20	Storage Compartment for Operator's Manuals	30-4
Steering Column — Functions	15-22	Cooling Compartment	30-5
Warning Devices and Monitors		Steering Column	30-5
Indicator Lights I	20-1	Foot Brakes	30-6
Indicator Lights II	20-4	Parking Brake	30-6
Fuel Gauge	20-7	Releasing Parking Brake	30-7
Coolant Temperature Gauge	20-7	Sun Visor	30-7
Automatic Function Control Lights	20-7	Inside Mirror	30-7
Infotrak Monitor	20-8	Outside Mirror	30-8
Cutterhead Alarm Speed	20-10	Heater Shut-Off Valve	30-8
SERVICE Information	20-10	Switching on Heater	30-9
Automatic Function Control	20-11	Adjustable Air Louvers	30-9
Burnishing Electromagnetic Clutch	20-12	Interior Lighting	30-9
Sharpening Cycles	20-13	Digital Clock	30-10
Automatic Knife Sharpening	20-14	Radio and Citizen Band	30-10
Sharpening Stone Home Position (Manual)	20-16	Pre-Starting Checks	
Automatic Counterknife Adjustment	20-17	Daily Checks	35-1
Manual Counterknife Adjustment	20-18	Engine Oil Level	35-1
Kernel Processor Roll Clearance	20-19	Hydraulic Oil Level	35-1

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92145 H2-19-18AUG92

COPYRIGHT© 1992
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION™ Manual

Contents

	Page		Page
Fuel Level	35-2	Reverser Operation	65-6
Tires	35-2	Harvesting Unit Float System	65-7
Hydrostatic Oil Level	35-3		
Fuel System	35-3	Feeding System	
Lubricating Forage Harvester	35-3	Electromagnetic Clutch	70-1
Checks in Operator's Cab	35-4	Cutterhead Speed Sending Unit	70-3
		Length-of-Cut Transmission	70-3
Operating the Engine		Adjusting Length of Cut	70-4
Engine Break-In	40-1	Harvesting Unit Speed	70-4
Starting the Engine	40-2	Feed Roll Slip Clutch	70-5
Engine Oil Pressure Indicator Light	40-4	Length-of-Cut Transmission Service	70-5
Warming up Engine	40-4	Feed Roll Drive	70-6
Engine Idle	40-4	Adjusting Feed Roll Springs	70-8
Ether Starting Aid	40-5	Opening Feed Roll Channel	70-8
Coolant Heater	40-8	Smooth Roll Scraper	70-9
Slave Battery	40-9	Feed Roll Channel Safety Switch	70-10
Stopping the Engine	40-10	Hydraulic Reverser Motor	70-10
Cold Weather Operation	40-10		
		Metal Detector	
Driving and Transporting Forage Harvester		Operating Metal Detector	75-2
Driving the Forage Harvester	45-1	Operating without Metal Detector	75-3
Releasing Parking Brake	45-1	When Ferrous Metal is Detected	75-4
Operating Foot Brakes	45-2	Adjusting Locking Pawl	75-5
Engaging a Gear	45-2	Metal Detector Test	75-6
Road Safety Switch	45-3	Test Charts, Troubleshooting	75-13
Adjusting Engine Speed	45-3		
Forward and Reverse Travel	45-4	Cutterhead and Drive	
Travel Speed	45-4	Main Clutch	80-2
Hydrostatic System	45-5	Main Drive Belt	80-4
Four-Wheel Drive	45-6	Replacing Main Drive Belt	80-5
Transport Information	45-6	Cutterhead Knives	80-6
		Replacing Partial Set of Knives	80-8
Wheels and Ballast		Replacing Complete Set of Knives	80-9
Tire Maintenance	50-1	Replacing Clamp Bar	80-10
Tire Pressures	50-5	Replacing Threaded Bar	80-10
Rear Weights	50-6	Knife Torque	80-11
		Manual Knife Sharpening	80-12
Harvesting Units	55-1	Automatic Knife Sharpening Device	80-16
		Replacing Sharpening Stone	80-18
Attaching and Detaching Harvesting Units		Adjusting Counterknife	80-20
Attaching Sequence	60-1	Checking Counterknife	80-25
		Removing Counterknife	80-26
Preparations and Field Operation		Installing Counterknife	80-28
Preparations for Harvesting Grass	65-1	Eliminating End Play of Adjusting Spindle	80-30
Preparations for Harvesting Corn	65-1	Adjusting Bottom Band	80-31
Preparations for Whole Plant Silage	65-1	Adjusting Outlet Band	80-34
Preparations for Harvesting Ear Corn		Cutterhead Service Cover	80-35
Silage	65-1	Recirculating Screens	80-37
Field Operation of Forage Harvester	65-2		

Continued on next page

Contents


	Page		Page
Removing Cutterhead with Harvesting Unit . . .	80-41	Every Year	100-11
Installing Cutterhead with Harvesting Unit . . .	80-44	Every 2 Years	100-12
Main Drive Troubleshooting	80-45	V-Belts	100-12
Cutterhead Troubleshooting	80-46	Chains	100-13
Knife Sharpener Troubleshooting	80-47		
Counterknife Troubleshooting	80-49		
Kernel Processor			
Installing Kernel Processor	85-1		
Preparing Kernel Processor	85-4		
Attaching Kernel Processor	85-6		
Drive Belt	85-8		
Breaking In Kernel Processor	85-9		
Field Operation	85-10		
Kernel Processor Service	85-10		
Adjusting Roll Spacing	85-11		
Adjusting Clearance Indicator	85-12		
Pretension of Lower Roll Drive Belt	85-12		
Adjusting Scrapers	85-13		
Roll Wear and Replacement	85-14		
Potentiometer, automatic adjustment	85-14		
Replacing Lower Roll Drive Belts	85-15		
Troubleshooting	85-16		
Discharge			
Blower and Discharge Spout	90-1		
Blower Bottom	90-1		
Replacing Wear Plate	90-1		
Adjusting Blower Paddles	90-5		
Adjusting Deflecting Edge	90-5		
Service Covers	90-6		
Spout Worm Gear and Ring Gear	90-7		
Fuel, Lubricants, Coolant and Capacities			
Fuel	95-1		
Engine Oil	95-2		
Engine Coolant	95-4		
Gear Case Oil	95-5		
Brake Fluid	95-8		
EP Grease	95-9		
Lubrication, Periodic Services			
Break-In Service	100-8		
Service Intervals	100-8		
Every 10 Operating Hours	100-9		
After the first 100 Operating Hours	100-9		
Every 250 Operating Hours	100-10		
Every 500 Operating Hours	100-10		
Every 1000 Operating Hours	100-11		
Every 1500 Operating Hours	100-11		
As Required	100-11		
		Service — Engine	
		Engine Access	105-1
		Engine Compartment	105-1
		Adjusting Engine Valve Tappets	105-2
		Rocker Arm Cover Ventilation	105-2
		Checking Engine Crankcase Oil Level	105-4
		Changing Engine Oil and Filter	105-5
		Service — Fuel System	105-9
		Fuel Tank Filler Neck	105-10
		Fuel Tank Water Trap	105-11
		Fuel System, John Deere Engine	105-12
		Fuel System, Cummins Engine	105-13
		Fuel Shut-Off Valve	105-14
		Water Trap, John Deere Engine	105-14
		Fuel Filter, John Deere Engine	105-15
		Checking Fuel Injection Nozzles	105-16
		Bleeding Fuel System	105-16
		Fuel Filter, Cummins Engine	105-18
		Bleed Line and Valve	105-19
		Fuel Shut-Off Valve	105-19
		Rotary/Stationary Radiator Screen	105-19
		Flushing Cooling System	105-23
		Replacing Coolant Conditioner	105-28
		Drive Belts	105-30
		Air Intake System	105-34
		Air Intake Prefilter Screen	105-36
		Air Cleaner	105-36
		Turbocharger	105-41
		Vibration Damper	105-42
		Service — Electrical System	
		Electrical System Specifications	110-1
		Batteries	110-1
		Alternators	110-4
		Starting Motor	110-5
		Access to Fuse Board	110-6
		Fuse Tester	110-6
		Access to Circuit Boards	110-7
		Access to Electronic Control Unit	110-8
		Access to Relay and Diode Board	110-9
		Sockets	110-9
		Electronic System Boards	110-10
		Fuse Board — Fuses	110-11
		Fuse Board — Relays	110-13
		Relay and Diode Board	110-14

Continued on next page

Contents

	Page		Page
Solenoids	110-15	Storage	
Electrical System Operation	110-19	After the Season	130-1
Fault Codes	110-28	Removing Harvester from Storage	130-4
Work Lights	110-36	Specifications	
Headlights	110-37	6610 Forage Harvester	135-1
Clearance and Turn Signal Lights, Front	110-38	6710 Forage Harvester	135-8
Tail, Stop and Turn Signal Lights, Rear	110-38	6810 Forage Harvester	135-15
Dome Light	110-38	6910 Forage Harvester	135-21
Switch Lighting	110-39	Serial Numbers	
Indicator Light Bulbs	110-39	Serial Number Plates	140-1
Service — Hydraulic System		Product Identification Number	140-1
Pressure Relief Valve	115-1	John Deere Service Keeps You on the Job	
System Operation	115-2	Index	
Accumulators	115-3		
Hydraulic Components — Neutral Oil			
Flow	115-4		
Draining Hydraulic Oil	115-7		
Replacing Hydraulic Oil Filter	115-7		
Refilling Hydraulic Oil	115-8		
Temperature and Pressure Sending Units	115-8		
Service — Ground Speed Drive			
Brake System	120-1		
Brake Fluid Reservoir	120-2		
Adjusting Foot Brakes	120-2		
Parking Brake	120-2		
Hydrostatic Drive Components	120-3		
Oil Cooler	120-4		
Oil and Filter Change	120-4		
Transmission	120-5		
Final Drives	120-5		
Front Axle	120-6		
Rear Axle Toe-In	120-6		
Rear Wheel Tread	120-7		
Steering System Components	120-9		
Service — Air Conditioning System, Heater			
Air Conditioning System Components	125-1		
Heater Components	125-2		
Operating Air Conditioning System	125-4		
Compressor	125-5		
Refrigerant Level	125-5		
Low Pressure Switch	125-6		
High Pressure Switch	125-6		
Cleaning Condenser	125-7		
Cab Filter	125-7		
Air Intake Opening	125-9		
Condensed Water Drain Hose	125-9		

Identification View

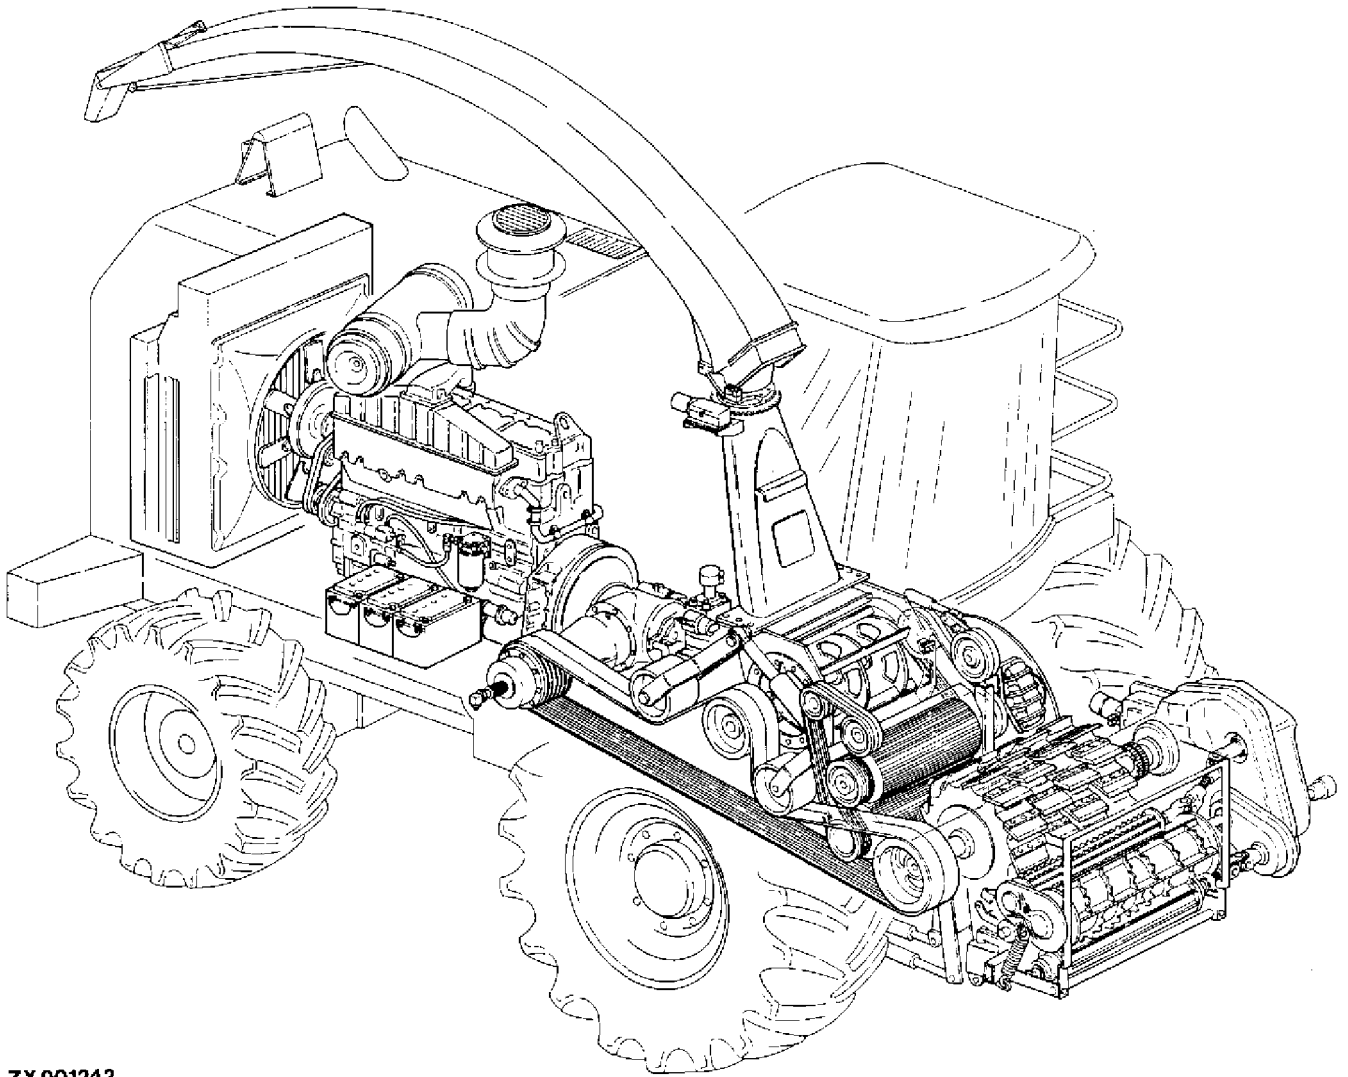

ZX001242

ZX001242 -JUN-08FEB06

ZX,OMSPFH,TYP -19-01NOV91

00-1


290101
PN=3

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

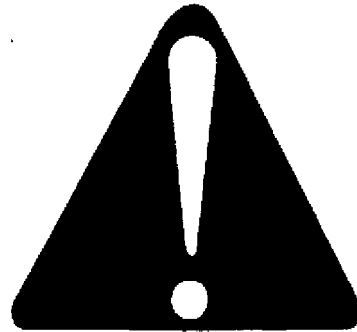

DX,ALERT -19-04JUN90

T81389 -UN-07DEC68


FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

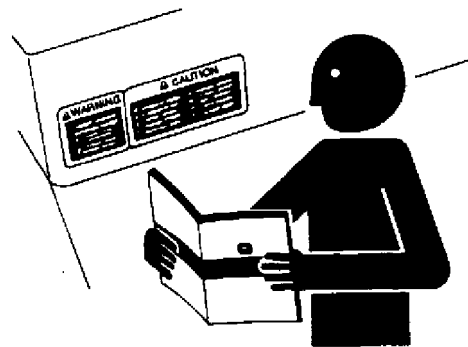

DX,READ -19-04JUN90

T5201 -UN-23AUG88

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-09JAN92

T5187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930 -UN-30JUN89

FX,ROAD -19-01MAY91



CAUTION: Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS -19-26JAN90




USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driving on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

If legally permitted, use flashing warning lights or rotary beacons whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install additional flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

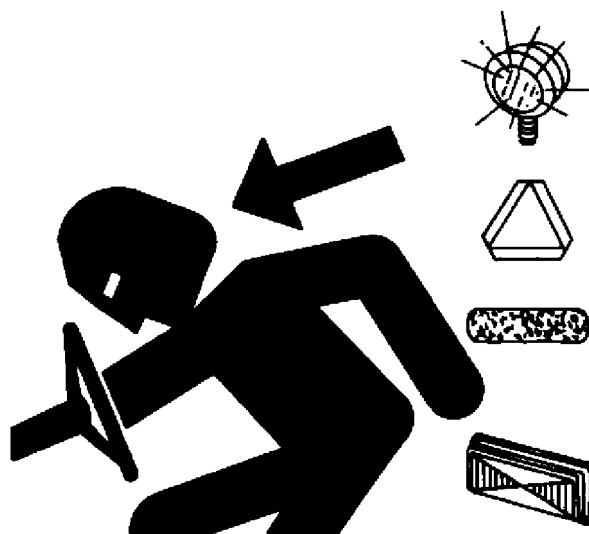

TS951
-UN-12APR90


ZX,FLASH -19-01OCT91

PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

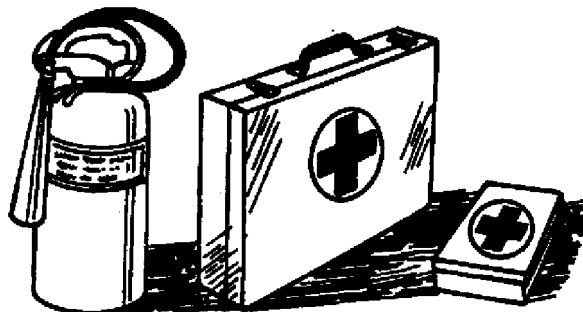

TS291
-UN-23AUG88

DX,FIRE2 -19-04JUN90




WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

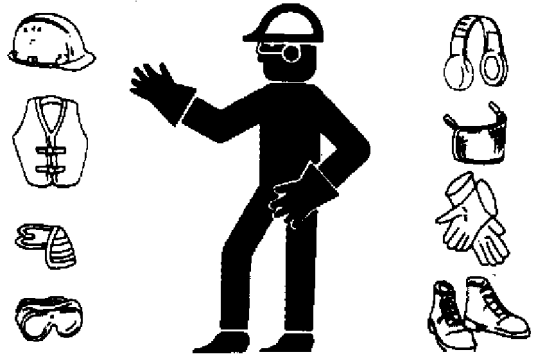

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

HANDLE FUEL SAFELY—AVOID FIRES

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.




DX,FIRE1 -19-04JUN90

TS202 -UN-23AUG88

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

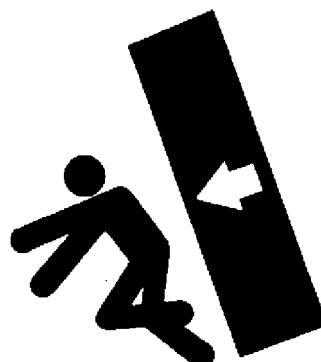

DX,STORE -19-04JUN90

TS219 -UN-23AUG88



HANDLE STARTING FLUID SAFELY

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.




DX,FIRE3 -19-16APR92

TS1356 -UN-18MAR92

FIRE EXTINGUISHER LOCATIONS

Keep the engine clean and free of dust, chaff, and straw to prevent the possibility of a fire.

A 6 kg (18 lb) general purpose fire extinguisher (type A, B and C) should be installed on the left-hand side of machine frame.

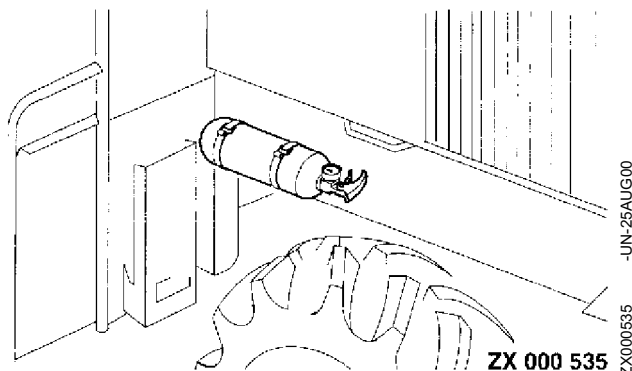

ZX,FIRE -19-01NOV91

ZX000535 -UN-25AUG00




CHECK MACHINE SAFETY

Always check the road and general operating safety of the machine before using.

FX,READY -19-28FEB91

MOUNT AND DISMOUNT SAFELY

Use handrail when mounting or dismounting the harvester.

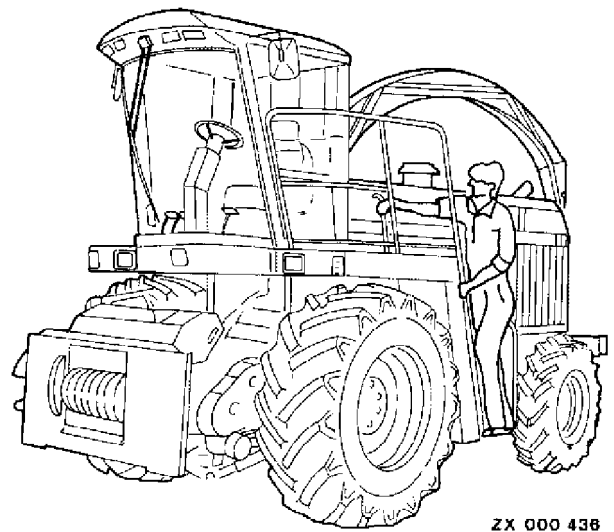

ZX 000 436

-UN-03APR95
ZX000436

ZX,HANDLE -19-01OCT91

OPERATE SAFELY

All machinery should only be operated by responsible adults who have been properly instructed and delegated to do so.

Never stand in the discharge spout path while cutterhead and fan are turning.

Never open cutterhead or fan housing doors while cutterhead is turning.

Always operate machine at rated speed.



-UN-23AUG88
TS263

ZX,CAUTION -19-01OCT91



RIDERS

Only allow the operator and one rider on the machine.

Other riders are subject to injury such as being thrown off the machine and obstruct the operator's view resulting in the machine being operated in an unsafe manner.

One rider is permitted, since the machine is equipped with a factory-approved passenger seat.




ZX,PASSENGER -19-02OCT91

TS253
-UN-23AUG68

ROAD SAFETY SWITCH

IMPORTANT: Before driving forage harvester on public roads, make sure that road safety switch is in road position.

This ensures that all hydraulic functions — with the exception of the steering system — are not working.

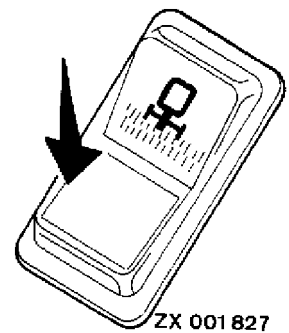

ZX 001 827

ZX,SWITCH -19-01OCT91

ZX001827
-UN-25AUG00



DRIVING THE FORAGE HARVESTER

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.


Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope.

Attach harvesting units and other implements to forage harvester with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the forage harvester swings out. Attachments and ground conditions affect the driving characteristics of the harvester.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the forage harvester to tip, particularly on hillsides.

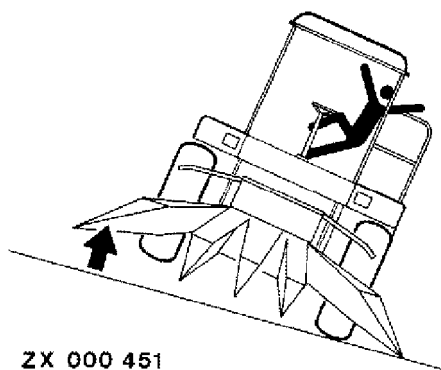

ZX 000 451

ZX000451 -JUN-05APR95


ZX,DRIVE -19-02OCT91

GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

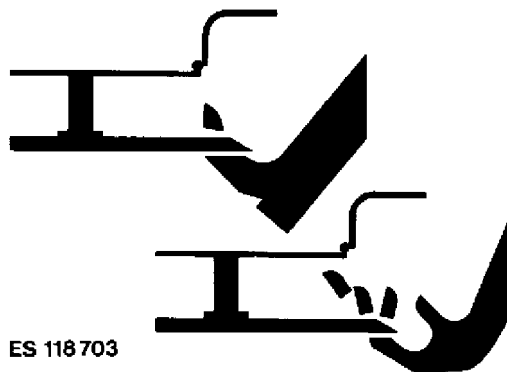

ES 118 703

ES118703 -JUN-21MAR95

FX,DEVICE -19-04DEC90



STAY CLEAR OF HARVESTING UNITS

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.



FX,CUT -19-21DEC90

ES118704 -UN-21MAR95

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the forage harvester before starting the engine.



FX,KNIFE -19-21DEC90

-UN-23AUG88

TS254

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.




DX,PTO -19-04JUN90

-UN-23AUG88

TS198

AVOID ENTANGLEMENT

To avoid entanglement, do not feed crop into machine by hand or attempt to manually unplug machine while it is running. The feed rolls can feed crop material in faster than you can release your grip on the material.

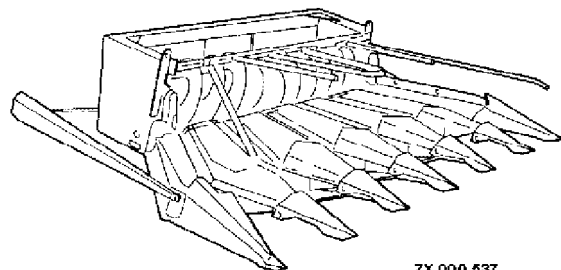


ZX,FEEDROLL -19-04DEC90

ZX000537 -UN-03APR95



TRANSPORT WITH HARVESTING UNIT INSTALLED

Before driving forage harvester on public roads, harvesting unit must be raised and secured in this position. It must not, however, obstruct operator's view of the road. Remove crop dividers (if equipped) and install protective cover.

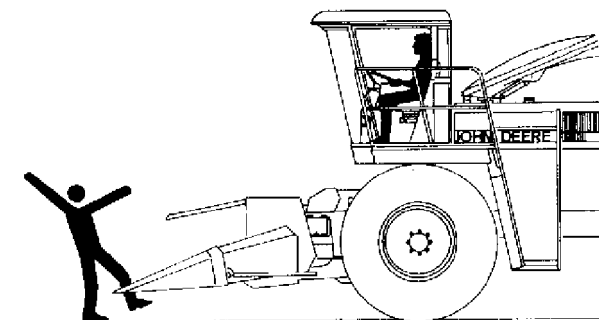


ZX 000 452

ZX,HEADER -19-04DEC90

-UN-03APR95
ZX000452

BALLASTING FOR SAFE GROUND CONTACT

Operating, steering and braking performance of forage harvester can be considerably affected by attachments which alter the center of gravity of the machine. To maintain safe ground contact, ballast the harvester at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

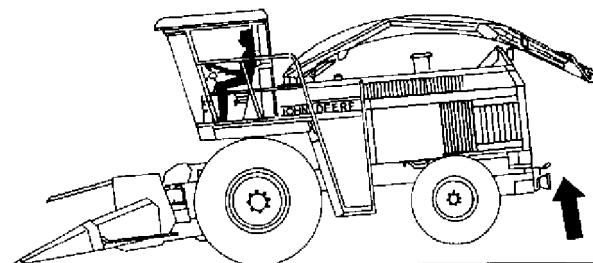

ZX 000 453

ZX,WEIGHT -19-02OCT91


-UN-03APR95
ZX000453

RADIO AERIAL

If radio aerial is not secured in its transport position before driving on public roads, it may come into contact with low-hanging electrical cables. This would result in the operator suffering a severe electrical shock.

To avoid electrical shock, no portion of the machine should be higher than 4 m.

Before transporting machine, bend aerial or remove it.

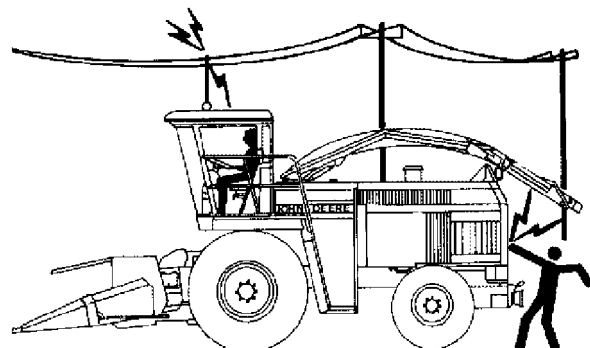

ZX 000 454

ZX,ANTENNA -19-11MAY92

-UN-03APR95
ZX000454



PARKING AND LEAVING THE FORAGE HARVESTER


Lower harvesting unit to the ground.

Before leaving the forage harvester, disengage main clutch and shut off engine. Move gear shift lever to neutral, apply parking brake, remove key and lock the operator's cab. Position chock blocks.

NOTE: Use only chock blocks provided with the machine.


Never leave forage harvester unattended as long as engine is running.

Never leave the operator's cab when driving.

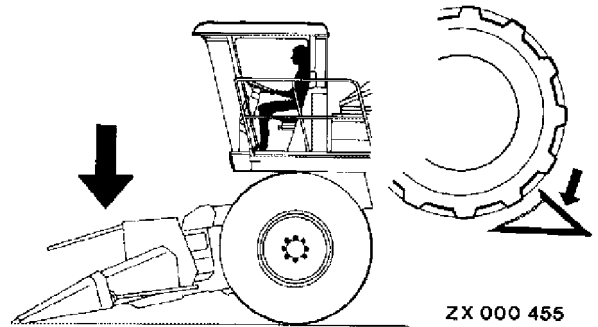

-UN-03APR95

ZX000455

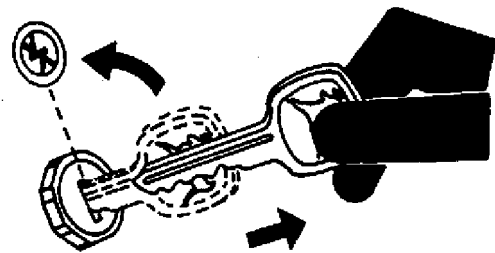

-UN-24MAY89


TS230

ZX,PARK -19-01OCT91

WORK IN VENTILATED AREA

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

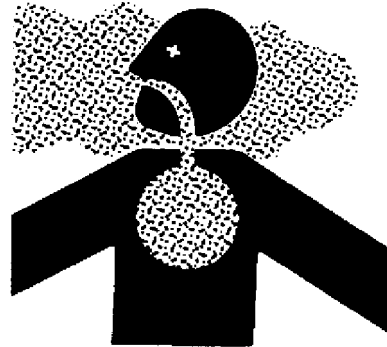

-UN-23AUG88

TS220

DX,AIR -19-04JUN90



PRACTICE SAFE MAINTENANCE

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate or service machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

Disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.



DX,SERV -19-04JUN90


-UN-23AUG88

TS218

SERVICE MACHINES SAFELY

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

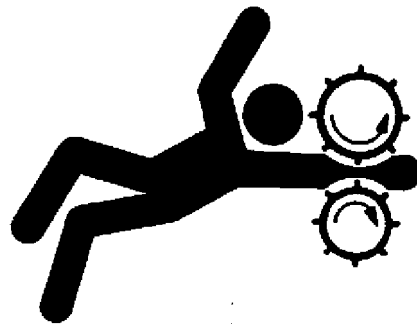

DX,LOOSE -19-04JUN90

-UN-23AUG88


TS228



SUPPORT MACHINE PROPERLY

Always lower the attachment or implement to the ground before you work on the machine. If you must work on a lifted machine or attachment, securely support the machine or attachment.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

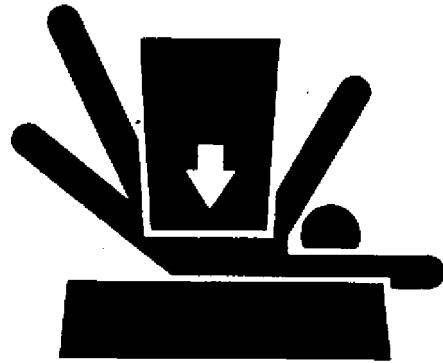


DX,LOWER -19-04JUN90

-UN-23AUG68
TS229

RETORQUE WHEEL NUTS

Retorque wheel nuts as specified in Sections "Wheels and Ballast" and "Lubrication, Periodic Services". Failure to do this could result in a wheel falling off during operation, causing the machine to tip over with serious injury to the operator and extensive damage to the machine.

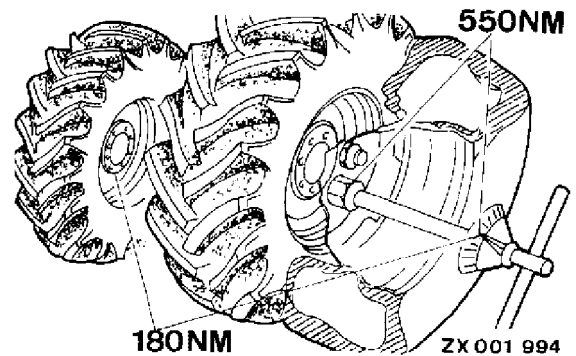

ZX.NUTS -19-11MAY92

-UN-03APR95
ZX001994




AVOID HIGH-PRESSURE FLUIDS

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

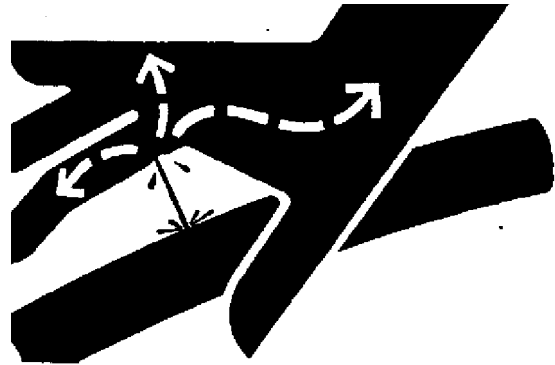

X9811 -UN-23AUG88

DX,FLUID -19-09AUG91

PREVENT BATTERY EXPLOSIONS

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204 -UN-23AUG88

DX,SPARKS -19-04JUN90



PREVENT ACID BURNS

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:


1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

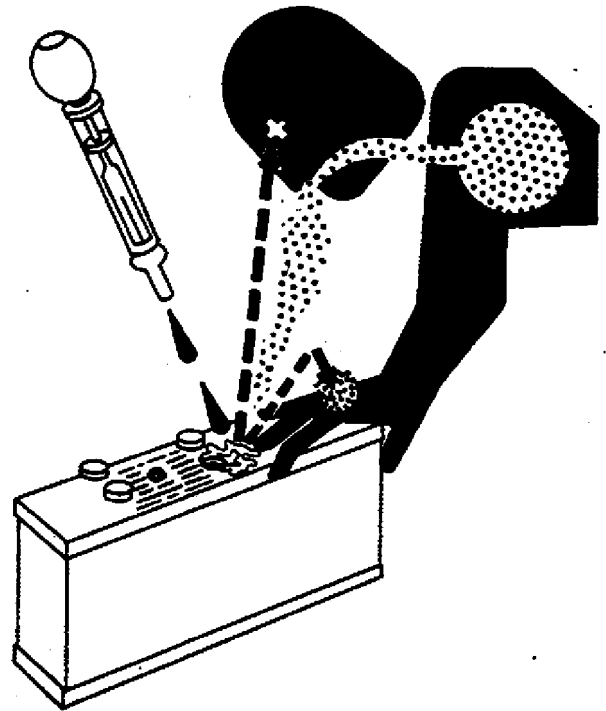

DX.POISON -19-04JUN90

TSS203 -UN-23AUG88

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com