


# John Deere 450C Crawler

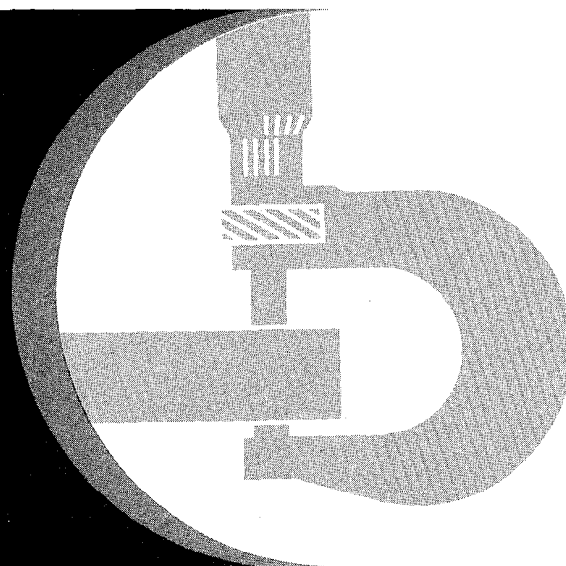

## TECHNICAL MANUAL

**TM1102**  
LITHO IN U.S.A.

# JD450-C CRAWLER

**Technical Manual  
TM-1102 (May-87)**

## CONTENTS


Section 10 - GENERAL	Group 41	9550 Backhoe Control Valve
Group 5 Specifications	Group 42	9300 Backhoe Control Valve
Group 10 Predelivery, Delivery, and After-Sale Services	Group 45	Winch Control Valve
Group 15 Lubrication	Group 50	Miscellaneous Cylinders
	Group 51	9250 Backhoe Cylinders
	Group 52	9550 Backhoe Cylinders
	Group 53	9300 Backhoe Cylinders
	Group 55	Miscellaneous Hydraulic Components
	Group 60	Specifications and Special Tools
Section 20 - ENGINE		
Group 5 Engine Removal and Installation	Section 60 - MISCELLANEOUS COMPONENTS	
Group 10 Basic Engine	Group 5 Tracks	
Group 15 Engine Lubrication System	Loader ( -216302)	
Group 20 Engine Cooling System	Dozer ( -216337)	
Group 25 Fuel System		
Group 30 Speed Control Linkage	Group 6 Tracks	
Group 35 Air Intake System	Loader (216303- )	
Group 40 Specifications and Special Tools	Dozer (216338- )	
Section 30 - ELECTRICAL SYSTEM	Group 10 Track Frame Assembly	
Group 5 Batteries	Group 15 Winch System	
Group 10 Charging System	Group 20 Winch Fairlead Assembly	
Group 15 Starting System	Group 25 Loader Frame, Boom and Bucket	
Group 20 Gauges and Switches	Group 30 Dozer Frames and Blades	
Group 25 Specifications and Special Tools	Group 35 Lumber Fork and Pulpwood Loader	
	Group 40 9250 Backhoe Frame, Boom and Bucket	
Section 40 - POWER TRAIN	Group 41 9300 Backhoe Frame, Boom and Bucket	
Group 5 Engine Clutch Assembly	Group 42 9550 Backhoe Frame, Boom and Bucket	
Group 10 H-L-R Transmission	Group 45 Specifications and Special Tools	
Group 15 Steering Clutch and Brake Assembly		
Group 20 Final Drive Assembly		
Group 25 Power Take-Off and Winch Drive		
Group 30 Specifications and Special Tools		
Section 50 - HYDRAULIC SYSTEM	Section 70 - SYSTEM TESTING	
Group 5 Transmission Pump	Group 5 General Information	
Group 10 Main Hydraulic Pump	Group 10 Engine	
Group 15 Winch Hydraulic Pump	Group 15 Electrical System	
Group 20 Clutch Control Valve	Group 20 Power Train	
Group 25 Steering Valve	Group 25 Hydraulic System	
Group 30 Loader Control Valve	Group 26 Hydraulic System (Analyzer)	
Group 35 Bulldozer Control Valve	Group 30 Miscellaneous Components	
Group 40 9250 Backhoe Control Valve	Group 35 Specifications and Special Tools	

*The specifications and design information contained in this manual were correct at the time it was printed. It is John Deere's policy to continually improve and update our machines. Therefore, the specifications and design information are subject to change without notice.*

## INDEX

Copyright© 1987  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
Previous Editions  
Copyright© 1986 DEERE & COMPANY  
Copyright© 1986 DEERE & COMPANY

## INTRODUCTION

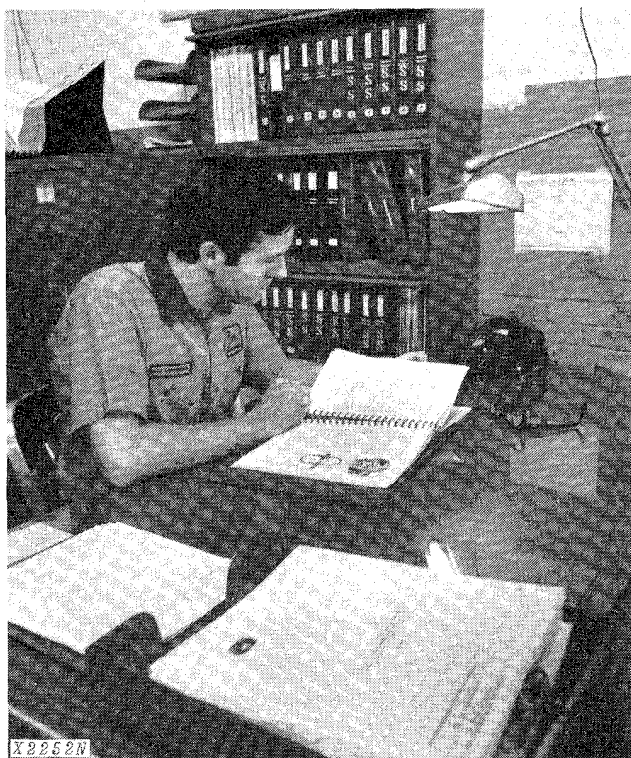

Use FOS Manuals for Reference

This technical manual is part of a twin concept of service:

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

### •FOS Manuals—for reference

*Fundamentals of Service (FOS) Manuals* cover basic theory of operation, *fundamentals* of troubleshooting, *general* maintenance, and *basic* types of failure and their causes. FOS Manuals are for training new personnel and for reference by experienced personnel.



When a service technician should refer to a FOS Manual for more information, a FOS symbol like the one at the left is used in the TM to identify the reference.

### •Technical Manuals—for actual service

*Technical Manuals* are concise service guides for a *specific* machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced mechanic.



Use Technical Manuals for Actual Service

This technical manual was planned and written for you—an experienced mechanic. Keep it in a permanent binder in the shop where it is handy. Refer to it whenever in doubt about correct service procedures or specifications.

Some features of this manual:

- Inside front cover - "Table of Contents" and "Maintenance Without Accident".
- Section 10 - General specifications and services.
- Sections 20 through 60 - Removal, repair, testing (components removed), installation, and adjustment.
- Section 70 - Detailed explanation of system operation, diagnosis, visual inspection, testing, and adjustments.
- Specifications grouped and illustrated at the end of each section.

Thank you so much for reading.  
Please click the “Buy Now!”  
button below to download the  
complete manual.



After you pay.

You can download the most  
perfect and complete manual in  
the world immediately.

Our support email:

[ebooklibonline@outlook.com](mailto:ebooklibonline@outlook.com)