


**John Deere
860-B
Scraper**

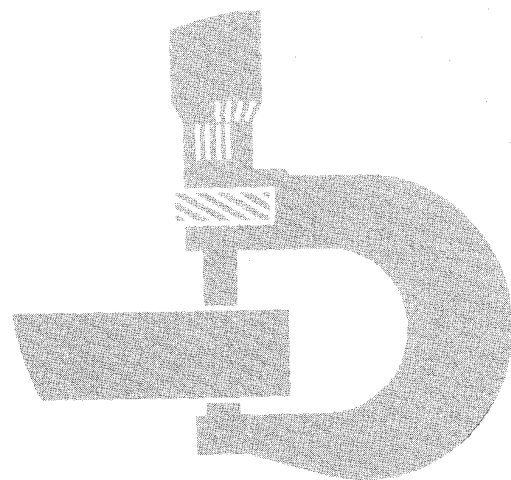

Technical Manual

SECTION AND GROUP CONTENTS OF THIS MANUAL

SECTION I - GENERAL INFORMATION

- GROUP I - Contents, Index and Page List
- GROUP II - Introduction and Safety Information
- GROUP III - General Specifications
- GROUP IV - Predelivery, Delivery and After-Sale Services
- GROUP V - Lubrication

SECTION 1 - WHEELS

- GROUP 0110 - Powered Wheels and Fastenings
- GROUP 0120 - Non-Powered Wheels and Fastenings
- GROUP 0199 - Specifications and Special Tools

SECTION 2 - AXLES AND SUSPENSION SYSTEM

- GROUP 0201 - Drive Axle Housing and Support
- GROUP 0210 - Differential or Bevel Drive
- GROUP 0225 - Input Drive Shafts and U-joints
- GROUP 0230 - Non-Powered Wheel Axles
- GROUP 0250 - Axle Shaft, Bearings, Reduction Gears
- GROUP 0299 - Specifications and Special Tools

SECTION 3 - TRANSMISSION

- GROUP 0325 - Input Drive Shafts and U-joints
- GROUP 0341 - Housings and Covers
- GROUP 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- GROUP 0360 - Hydraulic System
- GROUP 0399 - Specifications and Special Tools

SECTION 4 - ENGINE

- GROUP 0400 - Engine Removal and Installation
- GROUP 0401 - Crankshaft and Main Bearings
- GROUP 0402 - Camshaft and Valve Actuating Means
- GROUP 0403 - Connecting Rods and Pistons
- GROUP 0404 - Cylinder Block
- GROUP 0407 - Oiling System
- GROUP 0408 - Ventilating System
- GROUP 0409 - Cylinder Head and Valves
- GROUP 0410 - Exhaust Manifold
- GROUP 0413 - Fuel Injection System
- GROUP 0414 - Intake Manifold
- GROUP 0416 - Turbocharger
- GROUP 0417 - Water Pump
- GROUP 0418 - Thermostats, Housing and Water Piping
- GROUP 0419 - Oil Cooler
- GROUP 0420 - Fuel Filter
- GROUP 0421 - Fuel Transfer Pump
- GROUP 0422 - Starting System

SECTION 4 - ENGINE (Continued)

- GROUP 0423 - Alternator and Generator Mounting
- GROUP 0429 - Fan Drive
- GROUP 0433 - Flywheel, Housing and Fastenings
- GROUP 0499 - Specifications and Special Tools

SECTION 5 - ENGINE AUXILIARY SYSTEMS

- GROUP 0505 - Cold Weather Starting Aids
- GROUP 0510 - Cooling Systems
- GROUP 0515 - Speed Controls
- GROUP 0520 - Intake System
- GROUP 0530 - External Exhaust Systems
- GROUP 0540 - Mounting Frame
- GROUP 0560 - External Fuel Supply Systems
- GROUP 0599 - Specifications and Special Tools

SECTION 6 - TORQUE CONVERTER

- GROUP 0641 - Housing and Cover
- GROUP 0651 - Turbines, Gears, Shafts, Etc.
- GROUP 0660 - Hydraulic System
- GROUP 0699 - Specifications and Special Tools

SECTION 9 - STEERING SYSTEM

- GROUP 0960 - Hydraulic System
- GROUP 0999 - Specifications and Special Tools

SECTION 10 - SERVICE BRAKES

- GROUP 1011 - Active Elements
- GROUP 1015 - Controls Linkage
- GROUP 1060 - Hydraulic System
- GROUP 1099 - Specifications and Special Tools

SECTION 11 - PARKING-EMERGENCY BRAKES

- GROUP 1111 - Active Elements
- GROUP 1115 - Controls Linkage
- GROUP 1199 - Specifications and Special Tools

SECTION 16 - ELECTRICAL SYSTEM

- GROUP 1671 - Batteries, Supports and Cables
- GROUP 1672 - Alternator, Regulator and Charging System Wiring
- GROUP 1673 - Lighting System
- GROUP 1674 - Wiring Harness and Switches
- GROUP 1675 - System Controls
- GROUP 1676 - Instruments and Indicators
- GROUP 1699 - Specifications and Special Tools

SECTION 17 - FRAME, CHASSIS OR SUPPORTING STRUCTURE

- GROUP 1740 - Frame Installation
- GROUP 1746 - Frame Bottom Guards
- GROUP 1799 - Specifications and Special Tools

SECTION AND GROUP CONTENTS OF THIS MANUAL (Continued)

SECTION 18 - OPERATOR'S STATION

- GROUP 1810 - Operator Enclosure
- GROUP 1821 - Seat and Seat Belt
- GROUP 1830 - Heating and Air Conditioning
- GROUP 1899 - Specifications and Special Tools

SECTION 19 - SHEET METAL AND STYLING

- GROUP 1910 - Hood or Engine Enclosure
- GROUP 1913 - Miscellaneous Shields
- GROUP 1921 - Grille and Grille Housing
- GROUP 1927 - Fenders

SECTION 20 - SAFETY, CONVENIENCE AND MISCELLANEOUS

- GROUP 2004 - Horn
- GROUP 2006 - Cigar Lighter

SECTION 21 - MAIN HYDRAULIC SYSTEM

- GROUP 2160 - Hydraulic System
- GROUP 2199 - Specifications and Special Tools

SECTION 35 - SCRAPER AND HAULAGE DEVICE

- GROUP 3501 - Blades or Cutting Edges
- GROUP 3515 - Controls Linkage
- GROUP 3540 - Frames
- GROUP 3560 - Hydraulic System
- GROUP 3599 - Specifications and Special Tools

SECTION 36 - CONVEYOR AND ELEVATING DEVICE

- GROUP 3612 - Conveyor or Mast
- GROUP 3640 - Conveyor and Elevating Device Frame
- GROUP 3650 - Gear Box
- GROUP 3660 - Hydraulic System
- GROUP 3699 - Specifications and Special Tools

SECTION 90 - SYSTEM TESTING

- GROUP 9005 - General Information - Seven Basic Steps of Testing and Diagnosis
- GROUP 9010 - Engine
- GROUP 9015 - Electrical
- GROUP 9020 - Power Train
- GROUP 9025 - Hydraulic System (Flow Meter)
- GROUP 9030 - Miscellaneous Components
- GROUP 9031 - Heating and Air Conditioning
- GROUP 9035 - Specifications and Special Tools

Thank you so much for reading.
Please click the “Buy Now!”
button below to download the
complete manual.



After you pay.

You can download the most
perfect and complete manual in
the world immediately.

Our support email:

ebooklibonline@outlook.com